

# zenon driver manual IEC850

v.7.00



© 2012 Ing. Punzenberger COPA-DATA GmbH

All rights reserved.

Distribution and/or reproduction of this document or parts thereof in any form are permitted solely with the written permission of the company COPA-DATA. The technical data contained herein has been provided solely for informational purposes and is not legally binding. Subject to change, technical or otherwise.



# Contents

1.	Welco	ome to O	COPA-DATA help	5
2.	IEC85	0		5
3.	IEC85	0 - Data	sheet	6
4.	Drive	r history	/	7
5.	Requ	irement	s	9
	5.1	PC		9
6.	Confi	guration	۱	9
	6.1	Creating	g a driver	10
	6.2	Settings	in the driver dialog	11
		6.2.1	General	12
		6.2.2	Driver dialog basic settings	15
		6.2.3	Connections	17
7.	Creat	ing varia	ables	. 28
	7.1	Creating	g variables in the Editor	28
	7.2	Address	ing	31
	7.3	Driver o	bjects and datatypes	34
		7.3.1	Driver objects	35
		7.3.2	Mapping of the data types	36
	7.4	Creating	g variables by importing	38
		7.4.1	Online import	38
		7.4.2	Offline import	40
		7.4.3	XML import of variables from another zenon project	41
		7.4.4	DBF Import/Export	42
	7.5	Driver v	ariables	48
8.	Drive	r-specifi	c functions	. 53
9.	Repo	rting		. 62
	9.1	Unbuffe	red Reporting	64



	9.2	Buffered Reporting	67
	9.3	Dynamic Data Sets	68
10.	Drive	r commands	70
11.	Error	analysis	. 72
	11.1	Analysis tool	72
	11.2	Check list	73
12.	Appe	ndix A - Description of the 'Functional Constraints' (FCs):	. 74
13.	Appe	ndix B - Abbreviations for data object/data attribute	. 75
14.	Appe	ndix C - Conformance statement	. 88
	14.1	Protocol implementation conformance statement (PICS)	88
	14.2	Model implementation conformance statement (MICS)	98
15.	Appe	ndix D - PIXIT for COPA-DATA IEC61850 Client	. 98



# 1. Welcome to COPA-DATA help

#### **GENERAL HELP**

If you miss any information in this help chapter or have any suggestions for additions, please feel free to contact us via e-mail: documentation@copadata.com (mailto:documentation@copadata.com).

#### **PROJECT SUPPORT**

If you have concrete questions relating to your project, please feel free to contact the support team via e-mail: support@copadata.com (mailto:support@copadata.com)

#### LICENSES AND MODULES

If you realize that you need additional licenses or modules, please feel free to contact the sales team via e-mail: sales@copadata.com (mailto:sales@copadata.com)

# 2. IEC850

Communication between the driver and the PLC is based on the IEC 61850 protocol with client/server services via TCP/IP (A1/T1 profile). The driver acts as a client (master) when communicating.

#### Attention

Configurations that have been edited with a driver from version 3400 cannot be opened with older drivers anymore.



# 3. IEC850 - Data sheet

General:	
Driver file name	IEC850.exe
Driver description	IEC61850
PLC types	IEC 61850 compatible PLCs
PLC manufacturer	ABB; Siemens; IEC; SAT; Sprecher Automation; Kalki; GE Multilin;

Driver supports:	
Protocol	IEC 61850;
Addressing: address based	-
Addressing: name based	x
Spontaneous communication	X
Polling communication	x
Online browsing	x
Offline browsing	x
Real-time capable	x
Blockwrite	-
Modem capable	-



Serial logging	-
RDA numerical	-
RDA String	-

Prerequisites:	
Hardware PC	standard Network Adapter
Software PC	XML-Lite is required, it is included in Microsoft Internet Explorer 7.0; xmllite.dll, can also be downloaded from Microsoft Homepage.
Hardware PLC	-
Software PLC	-
Requires v-dll	-

Platforms:	
Operating systems	Windows CE 5.0, CE 6.0; Windows XP, Vista, 7, Server 2003, Server 2008/R2;
CE platforms	x86; ARM; Pocket-PC;

# 4. Driver history

A list of the main changes that were made to the driver documentation. The driver version (driver exe file version) corresponds to pre-compilations for test and documentation purposes and not the approved version of the driver with the described functions.

If you have questions about your project, please contact the Consulting Team by email. support@copadata.com (mailto:support@copadata.com).



Date	Driver version	Change	
31.08.06	100	Driver and documentation created	
11.04.07	400	Support for all models (SBO) of the control model	
04.10.07	700	Unbuffered Reporting	
09.01.08	1100	Version for Windows CE	
10.01.08	1100	File Transfer	
28.01.08	1200	Buffered Reporting	
04.02.08	1300	Auto reset of ctlNum	
29.05.08	1900	Alternative use of identification as external name	
11.09.08	2300	Check condition by a command from Check attribute	
12.12.08	2500	reedited driver documentation	
23.12.08	2500	recognition of duplicated datasets in Reports; log messages for reported or polled variables	
29.12.08	2500	configurable names of BRCBs	
12.05.09	2900	bitstrings also as STRING variables	
03.11.09	3300	dynamic Data Sets option: Use preconfigured TrgOps	
30.12.09	3600	option: Do not purge BRCB buffer at start	
07.01.10	3600	Reports not only from LLN0	
01.02.10	3700	off-line import also from *.cid and *.scd files	
17.02.10	3700	Origin is sent to RT before all other attributes of a data object from Report	
24.03.10	3800	Additional Cause Diagnosis	
24.03.10	3900	possibility to split up Select and Operate for Command Processing module	
24.03.10	3900	mapping of Time quality bits ClockFailure and ClockNotSynchronized	
08.11.10	4000	Off-line Import: LNs embedded directly into IEDs without LDs are ignored	
12.11.10	4100	support of data type "Check" (Tissue 10); PICS reviewed;	



		PIXIT enclosed (KEMA Certification)
04.05.11	4200	UNICODE STRING in UTF-8 character encoding; consideration of all possible TimeAccuracy values; support of Authentication (ISO 8650-1)
06.05.11	4300	support of alternative IP address
19.05.11	4400	local time stamp for variables with FC not ST or MX
31.10.11	4500	individual TrgOps bits setting for Unbuffered Reports
02.11.11	4600	driver setting for Origin orCat
08.11.11	4700	individual TrgOps bits setting for Buffered Reports

# 5. Requirements

This chapter contains information on the requirements that are necessary for use of this driver.

### 5.1 PC

XML Lite, which is part of Microsoft Internet Explorer 7.0, is necessary; xmllite.dll can also be downloaded separately from the Microsoft website.

This driver supports a connection via the standard network card of the PC. Make sure that the PLC and the PC are in the same network range and that the subnet masks are set accordingly on both devices.

# 6. Configuration

In this chapter you will learn how to use the driver in a project and which settings you can change.



# 💡 Info

*Find out more about further settings for zenon variables in the chapter Variables (main.chm::/15247.htm) of the online manual.* 

### 6.1 Creating a driver

In order to create a new driver:

- ▶ Right-click on Driver in the Project Manage and select Driver new in the context menu.
- In the following dialog the control system offers a list of all available drivers.

⊟-⊖a 35		
		1
🗄 🚞 ABB		
😐 🦲 AEG		
🖮 🚞 Allen Bradley		
😐 🦳 Alstom		
🗈 💼 Apex		
🕀 🧰 Applicom		
Archive		
🕀 💼 Arcnet		
🗄 🚞 Areva		
🗈 📄 Asfinag		
Bachmann		-
		-
Treiberbezeichnung		
Codesys Arti NG Treiber		
Treiberinformationen		
Beschreibung:		
Codesys Soft SPS Treiber "Neue Generation" fi Interface) Schnittstelle. Der Treiber unterstü		
Codesys Enwicklungsumgebung und ersetzt de		1
coucy of an anglangeoung and of occer ac	ar codosys hid sole si s troboli	
Für folgende SPS Typen geeignet:		
Codesys Soft SPSen, Moeller XControl SPSen > Steuerungen MAX 4, C200, C400, C600, P600		
2000 angoin men 4, 6200, 6400, 6000, 6000		
Folgende Kopplungsarten werden unterstützt:		
Ethernet; Local		

- Select the desired driver and give it a name:
  - The driver name has to be unique, i.e. if one and the same driver is to be used several times in one project, every time a new name has to be given each time.



- The driver name is part of the file name. Therefore it may only contain characters which are supported by the operating system. Invalid characters are replaced by an underscore (\_).
- Attention: This name cannot be changed later on.
- ► Confirm the dialog with ox. In the following dialog the single configurations of the drivers are defined.
- Only the respective required drivers need to be loaded for a project. Later loading of an additional driver is possible without problems.

	💡 Info
	For new projects and for existing projects which are converted to version 6.21 or higher the following drivers are created automatically:
▶	Internal
	MathDr32
▶	SysDrv.

```
6.2 Settings in the driver dialog
```

▶

You can change the following settings of the driver:

Configuration



## 6.2.1 General

General		
		ок
<b>V</b>		Cancel
Mode:		
Hardware	<b>~</b>	Help
🔲 Keep updat	e list in memory	
Outputs wri	eable	
🔲 Variable ima	ge remanent	
Stopped on	Standby-Server	
🔽 Update time	global	
Global updatet	ne in ms:	
1000		
Priority		
no	mal: 1000 ms	
	igh: <b>500</b> ms	
hig	her: 300 ms	
	est: 100 ms	



Parameters	Description
Mode	<ul> <li>Allows to switch between hardware mode and simulation mode</li> <li>Hardware: <ul> <li>A connection to the control is established.</li> </ul> </li> <li>Simulation static</li> <li>No communication between to the control is established, the values are simulated by the driver. In this modus the values remain constant or the variables keep the values which were set by zenon Logic. Each variable has its own memory area, e.g. two variables of the type marker with offset 79 can have different values in the Runtime and do not influence each other. Exception: The simulator driver.</li> <li>Simulation - counting</li> <li>No communication between to the control is established, the values are simulated by the driver. In this modus the driver increments the values within a value range automatically.</li> <li>Simulation - programmed</li> <li>N communication is established to the PLC. The values are calculated by a freely programmable simulation project. The simulation project is created with the help of the zenon</li> </ul>
	Logic Workbench and runs in a zenon Logic Runtime which is integrated in the driver. For details see chapter Driver simulation (main.chm::/25206.htm).
Keep update list in the memory	Variables which were requested once are still requested from the control even if they are currently not needed. This has the advantage that e.g. multiple screen switches after the screen was opened for the first time are executed faster because the variables need not be requested again. The disadvantage is a higher load for the communication to the control.
Output can be written	Active: Outputs can be written. Inactive: Writing of outputs is prevented.
	Note: Not available for every driver.



Variable image remanent	This option saves and restores the current value, time stamp and the states of a data point.
	Fundamental requirement: The variable must have a valid value and time stamp.
	The variable image is saved in mode hardware if:
	<ul> <li>one of the states S_MERKER_1(0) up to S_MERKER8(7), REVISION(9), AUS(20) or ERSATZWERT(27) is active</li> </ul>
	The variable image is always saved if:
	the variable is of the object type Driver variable
	the driver runs in simulation mode. (not programmed simulation)
	The following states are not restored at the start of the Runtime:
	SELECT(8)
	▶ WR-ACK(40)
	WR-SUC(41)
	The mode Simulation – programmed at the driver start is not a criterion in order to restore the remanent variable image.
Stop at the Standby Server	Setting for redundancy at drivers which allow only on communication connection. For this the driver is stopped at the Standby Server and only started at the upgrade.
	<b>Attention:</b> If this option is active, the gapless archiving is no longer guaranteed.
	Active: Sets the driver at the not-process-leading Server automatically in a stop-like state. In contrast to stopping via driver command, the variable does not receive status switched off (statusverarbeitung.chm::/24150.htm) but an empty value. This prevents that at the upgrade to the Server irrelevant values are created in the AML, CEL and Historian.
Global Update time	Active: The set Global update time in ms is used for all variables in the project. The priority set at the variables is not used. Inactive: The set priorities are used for the individual variables.
Priority	Here you set the polling times for the individual priorities. All variables with the according priority are polled in the set time. The allocation is taken



place for each variable separately in the settings of the variable properties.
The communication of the individual variables are graduated in respect of
importance or necessary topicality using the priorities. Thus the communication load is distributed better.

#### UPDATE TIME FOR CYCLICAL DRIVER

The following applies for cyclical drivers:

For Set value, Advising of variables and Requests, a read cycle is immediately triggered for all drivers - regardless of the set update time. This ensures that the value is immediately available for visualization after writing. Update times can therefore be shorter than pre-set for cyclical drivers.

### 6.2.2 Driver dialog basic settings

Configuration	<b>×</b>
General       Basic settings       Connections         Configuration file name       IEC850_IEC61850.bt         □       Deactivate standard double point value mapping         □       Use identification for external name         ☑       Do not purge BRCB buffer at start         Directory for file transfer       C:\TEMP	OK Cancel Help

Parameters	Description
File name configuration	Name of the file in which the driver-specific configurations are saved.
Deactivate standard double point value mapping	Inactive (default): The values of double messages are adjusted to the operating elements of zenon. Use this configuration if you want to use the modules of zenon Energy. The driver depicts the double point values for Runtime (stVal in DPS and DPC classes, IEC 61850-7-3): intermediate-state   off   on   bad-state to 2   0   1   3, Value 0





Use identification for external name:	<pre>consequently means off in Runtime and 1 means on. You can find more information in the chapter on driver-specific functions: Mapping Active: The values of the double messages are forwarded to zenon as they are: intermediate-state   off   on   bad-state = 0   1   2   3. In this case, you cannot use command functions of zenon Energy, for example. Inactive (default): The variable name is used for addressing.</pre>
	Active: The driver uses the entries of the variable property for addressing.
Do not purge BRCB buffer at start	Active: The buffer of the BRCBs are not deleted when the connection is first established after Runtime has started. Requirements: For this BRBC, the last entry ID received has been saved.
orCat	The driver sends configured orCat values as commands.
	Possible settings:
	▶ 1 - Bay-control
	2 - Station-control
	<ul> <li>3 - Remote-control</li> <li>4 - Automatic-bay</li> </ul>
	<ul> <li>5 - Automatic-station</li> </ul>
	<ul> <li>6- Automatic-remote</li> </ul>
	7 - Mantenance
	Default: 2- Station-control.
Directory for file transfer	Target directory of the file transfer. All files loaded are saved in this directory.



### 6.2.3 Connections

The connections of the IEC850 driver are set in the Connections tab of the driver dialog.

General       Basic settings       Connections         Servers       OK         Server1       1         New       Delete       Edit	onfiguration			×
Servers       Servername     Net       Server1     1	General Basic settings	Connections		 
Server1 1	Servers			OK
	Servername		Net	Cancel
New Delete Edit	Server1		1	
New Delete Edit				
New Delete Edit				
New Delete Edit				
New Delete Edit				
New Delete Edit				
New Delete Edit				
New Delete Edit				
New Delete Edit				
	New	Delete	Edit	

Parameters	Description
Server	List of connectiosn to the IEC 61850 server that have already been configured (to the control objects).
New	Creates a new connection to an IEC 61850 server. Opens the 'Server' dialog.
Delete	Removes the selected connection from the list.
Edit	Opens the 'Server' dialog to edit the selected connection



#### Server

Clicking on New or Edit in the dialog connection (on page 17) opens the dialog for the configuration of a connection to an IEC 61850 server:

Server				×
General				
Server name	Net address	Polling rate		
Server2	2	1000	ms	
Link Layer (TCP) IP address (primary) 192.168.0.55 IP address (redundant) Application Layer (ACSE) Calling AP title 1.1.1.939 Called AP title 1.1.939.11	IP Port (prima 102 IP Port (redur 0 Calling AE qu 12 Called AE qua 12	idant) alifier		
Use Authentication				
Reporting		_		
Max. auto used URCBs		📃 Use Rej	port-ID for RCB a	ssignment
1		RCB assign	ment/dynamic da	atasets
Use preconfigured TrgOps TrgOp data-change TrgOp data-change TrgOp data-update TrgOp data-update TrgOp integrity TrgOp general-interrog		New	Edit	Delete
		(	0K	Cancel

Parameters	Description
Net address	Corresponds to the Net address property in variable configuration.
	Maximum value: 65535
Server name	Freely definable name. Is used for the names of variables when variables are imported.
Delling webs	Defines the update frequency in milliseconds. The driver supports this rate to poll data that is not in active reports.
Polling rate	Maximum value: 4294967295 (2^32-1)
	If a higher value is entered, it is automatically changed to 1 when saved.
	Default:1000
	Attention: Exchange of data in Runtime does not depend on this setting or on the global update time. This is set to 100ms and fixed.
Link Layer (TCP)	Connection settings



IP address (primary)	IP address of the server to which a connection is to be made.
IP port (primary)	Port via which the connection will be established. Default: 102
IP address (redundant)	Alternative IP address. If the connection to the first IP address fails, the alternative IP address will be used after the net error waiting time has passed (20-30 sec., depending on the network). The alternative address will be kept until the driver is restarted (via driver functions or restart of the zenon Logic Runtime) or until the connection fails. Then, the first IP address will be used again.
	Attention: At least one variable, such as *LLN0/Mod/stVal[ST] should always be polled to detect a connection failure.
IP port (redundant)	Alternative IP port.
Application Layer (ACSE)	Settings for the ACSE.
Calling AP title	Settings according to ISO 8650-1(ACSE). Should not be used in standard cases.
Calling AE qualifier	Settings according to ISO 8650-1(ACSE). Should not be used in standard cases.
Called AP title	Settings according to ISO 8650-1(ACSE). Should not be used in standard cases.
Called AE qualifier	Settings according to ISO 8650-1(ACSE). Should not be used in standard cases.
Use Authentication	Activate this checkbox if you want to use authentication according to ISO 8650-1. If active, the driver sends the Authentication String at establishing the connection.
Authentication String	If Use Authentication is active, enter your Authentication String. Take care about the length restriction of 55 characters according to ISO 8327-1 OSI Session Protocol.
Reporting	Settings for the reports (on page 62).



URCBs       activates at automatic allocaton, i.e. in addition to RCBs which were configured in dialog RCB assignment/dynamic datasets. Default: 1         More information on the automatic assignment of unbuffered report (on page 64).         Use preconfigured         TrgOps         active: Trigger options which are pre-configured in the IEC61850 Server are used. In this case, the driver does not write the TrgOps attribute to the reporting control block during assignment.         Inactive: the driver writes the TrgOps attribute during the activation of each RCB.         You can activate/deactivate the following Tripper options individually.         > TrgOp: data-change         > TrgOp: quality-change         > TrgOp: quality-change         > TrgOp: data-update         > TrgOp: pereal-interrogation         Default: activate all         Use report ID for RCB assignment.         Active: The report ID is used instead of the report name in the client configuration dialog for static RCB assignment.         Attention: If this option is subsequently changed, all RCB assignments in the client configuration must be deleted and created again.         RCB assignment/dynamic       Static Reporting Control Block allocation and settings for dynamic data sets.         Note: If you use redundancy in your zenon project, (zenon network active and there is a project server and standby server), you must create two entries here. One for the server and one for the standby.         New       Creates a new entry in the	May auto year	
page 64).         Use preconfigured         TrgOps         Active: Trigger options which are pre-configured in the IEC61850 Server are used. In this case, the driver does not write the TrgOps attribute to the reporting control block during assignment.         Inactive: the driver writes the TrgOps attribute during the activation of each RCB.         You can activate/deactivate the following Tripper options individually.         > TrgOp: data-change         > TrgOp: quality-change         > TrgOp: general-interrogation         Default: activate all         Use report ID for RCB assignment         Active: The report ID is used instead of the report name in the client configuration dialog for static RCB assignment.         Attention: If this option is subsequently changed, all RCB assignments in the client configuration must be deleted and created again.         RCB assignment/dynamic datasets         Note: If you use redundancy in your zenon project, (zenon network active and there is a project server and standby server), you must create two entries here. One for the server and one for the standby.         New       Creates a new entry in the list. Opens the client configuraton dialog.	Max. auto used URCBs	
TrgOps       are used. In this case, the driver does not write the TrgOps attribute to the reporting control block during assignment.         Inactive: the driver writes the TrgOps attribute during the activation of each RCB.       You can activate/deactivate the following Tripper options individually.         >       TrgOp: data-change       >         >       TrgOp: quality-change       >         >       TrgOp: data-update       >         >       TrgOp: general-interrogation       Default: activate all         Use report ID for RCB assignment       Active: The report ID is used instead of the report name in the client configuration dialog for static RCB assignment.         Attention: If this option is subsequently changed, all RCB assignment/dynamic data sets.       Static Reporting Control Block allocation and settings for dynamic data sets.         Note: If you use redundancy in your zenon project, (zenon network active and there is a project server and standby server), you must create two entries here. One for the server and one for the standby.         New       Creates a new entry in the list. Opens the client configuraton dialog.		
each RCB.         You can activate/deactivate the following Tripper options individually.         > TrgOp: data-change         > TrgOp: quality-change         > TrgOp: data-update         > TrgOp: general-interrogation         Default: activate all         Use report ID for RCB assignment         Active: The report ID is used instead of the report name in the client configuration dialog for static RCB assignment.         Attention: If this option is subsequently changed, all RCB assignments in the client configuration must be deleted and created again.         RCB assignment/dynamic datasets       Static Reporting Control Block allocation and settings for dynamic data sets.         Note: If you use redundancy in your zenon project, (zenon network active and there is a project server and standby server), you must create two entries here. One for the server and one for the standby.         New       Creates a new entry in the list. Opens the client configuration dialog.	Use preconfigured TrgOps	are used. In this case, the driver does not write the TrgOps attribute to the
> TrgOp: data-change         > TrgOp: quality-change         > TrgOp: data-update         > TrgOp: integrity         > TrgOp: general-interrogation         Default: activate all         Use report ID for RCB assignment         Active: The report ID is used instead of the report name in the client configuration dialog for static RCB assignment.         Attention: If this option is subsequently changed, all RCB assignments in the client configuration must be deleted and created again.         RCB assignment/dynamic datasets       Static Reporting Control Block allocation and settings for dynamic data sets.         Note: If you use redundancy in your zenon project, (zenon network active and there is a project server and one for the standby.         New       Creates a new entry in the list. Opens the client configuraton dialog.         Del       Removes the selected entry from the list.		
P       TrgOp: quality-change         P       TrgOp: data-update         P       TrgOp: integrity         P       TrgOp: general-interrogation         Default: activate all       Default: activate all         Use report ID for RCB assignment       Active: The report ID is used instead of the report name in the client configuration dialog for static RCB assignment.         Attention: If this option is subsequently changed, all RCB assignments in the client configuration must be deleted and created again.         RCB assignment/dynamic datasets       Static Reporting Control Block allocation and settings for dynamic data sets.         Note: If you use redundancy in your zenon project, (zenon network active and there is a project server and standby server), you must create two entries here. One for the server and one for the standby.         New       Creates a new entry in the list. Opens the client configuraton dialog.         Del       Removes the selected entry from the list.		You can activate/deactivate the following Tripper options individually.
<ul> <li>TrgOp: integrity</li> <li>TrgOp: integrity</li> <li>TrgOp: general-interrogation</li> <li>Default: activate all</li> <li>Active: The report ID is used instead of the report name in the client configuration dialog for static RCB assignment.</li> <li>Attention: If this option is subsequently changed, all RCB assignments in the client configuration must be deleted and created again.</li> <li>RCB assignment/dynamic Static Reporting Control Block allocation and settings for dynamic data sets.</li> <li>Note: If you use redundancy in your zenon project, (zenon network active and there is a project server and standby server), you must create two entries here. One for the server and one for the standby.</li> <li>New</li> <li>Creates a new entry in the list. Opens the client configuration dialog.</li> </ul>		TrgOp: data-change
<ul> <li>TrgOp: integrity</li> <li>TrgOp: general-interrogation</li> <li>Default: activate all</li> </ul> Use report ID for RCB assignment         Active: The report ID is used instead of the report name in the client configuration dialog for static RCB assignment.           Attention: If this option is subsequently changed, all RCB assignments in the client configuration must be deleted and created again.           RCB assignment/dynamic datasets         Static Reporting Control Block allocation and settings for dynamic data sets.           Note: If you use redundancy in your zenon project, (zenon network active and there is a project server and standby server), you must create two entries here. One for the server and one for the standby.           New         Creates a new entry in the list. Opens the client configuraton dialog.           Del         Removes the selected entry from the list.		TrgOp: quality-change
TrgOp: general-interrogationDefault: activate allUse report ID for RCB assignmentActive: The report ID is used instead of the report name in the client configuration dialog for static RCB assignment.Attention: If this option is subsequently changed, all RCB assignments in the client configuration must be deleted and created again.RCB assignment/dynamic datasetsStatic Reporting Control Block allocation and settings for dynamic data sets.Note: If you use redundancy in your zenon project, (zenon network active and there is a project server and standby server), you must create two entries here. One for the server and one for the standby.NewCreates a new entry in the list. Opens the client configuration dialog.		TrgOp: data-update
Default: activate allUse report ID for RCB assignmentActive: The report ID is used instead of the report name in the client configuration dialog for static RCB assignment.Attention: If this option is subsequently changed, all RCB assignments in the client configuration must be deleted and created again.RCB assignment/dynamic datasetsStatic Reporting Control Block allocation and settings for dynamic data sets.Note: If you use redundancy in your zenon project, (zenon network active and there is a project server and standby server), you must create two entries here. One for the server and one for the standby.NewCreates a new entry in the list. Opens the client configuration dialog.DelRemoves the selected entry from the list.		TrgOp: integrity
Use report ID for RCB assignmentActive: The report ID is used instead of the report name in the client configuration dialog for static RCB assignment.Attention: If this option is subsequently changed, all RCB assignments in the client configuration must be deleted and created again.RCB assignment/dynamic datasetsStatic Reporting Control Block allocation and settings for dynamic data sets.Note: If you use redundancy in your zenon project, (zenon network active and there is a project server and standby server), you must create two entries here. One for the server and one for the standby.NewCreates a new entry in the list. Opens the client configuration dialog.DelRemoves the selected entry from the list.		TrgOp: general-interrogation
RCB assignment       configuration dialog for static RCB assignment.         Attention: If this option is subsequently changed, all RCB assignments in the client configuration must be deleted and created again.         RCB assignment/dynamic datasets       Static Reporting Control Block allocation and settings for dynamic data sets.         Note: If you use redundancy in your zenon project, (zenon network active and there is a project server and standby server), you must create two entries here. One for the server and one for the standby.         New       Creates a new entry in the list. Opens the client configuraton dialog.         Del       Removes the selected entry from the list.		Default: activate all
assignments in the client configuration must be deleted and created again.         RCB assignment/dynamic datasets         Static Reporting Control Block allocation and settings for dynamic data sets.         Note: If you use redundancy in your zenon project, (zenon network active and there is a project server and standby server), you must create two entries here. One for the server and one for the standby.         New       Creates a new entry in the list. Opens the client configuraton dialog.         Del       Removes the selected entry from the list.	Use report ID for RCB assignment	
datasets       State heporting control block unocation and settings for dynamic data sets.         Note: If you use redundancy in your zenon project, (zenon network active and there is a project server and standby server), you must create two entries here. One for the server and one for the standby.         New       Creates a new entry in the list. Opens the client configuraton dialog.         Del       Removes the selected entry from the list.		assignments in the client configuration must be deleted and
and there is a project server and standby server), you must create two entries here. One for the server and one for the standby.         New       Creates a new entry in the list. Opens the client configuraton dialog.         Del       Removes the selected entry from the list.	RCB assignment/dynamic datasets	
Del     Removes the selected entry from the list.		and there is a project server and standby server), you must create two
	New	
Edit Opens the Client configuration dialog to edit the selected entry.	Del	Removes the selected entry from the list.
	Edit	Opens the Client configuration dialog to edit the selected entry.



# 💡 Info

#### **OSI values**

The driver uses the following OSI selector values:

- Presentation Selector (OSI-PSEL) = "00000001"
- Session Selector (OSI-SSEL) = "0001"
- Transport Selector (OSI-TSEL) = "0001"

Users can adjust the server SCL file manually. The following values are standard values:

- <P type="OSI-AP-Title">41,999,1,1</P> (corresponds to standard values in the driver configuration in alternative notation)
- <P type="OSI-AE-Qualifier">12</P> (corresponds to standard values in the driver configuration)
- <P type="OSI-PSEL">00000001</P>
  (set in the driver; cannot be changed)
- <P type="OSI-SSEL">0001</P> (set in the driver; cannot be changed)
- <P type="OSI-TSEL">0001</P> (set in the driver; cannot be changed)



#### **Client configuration**

Clicking on New or Edit in the RCB assignments/dynamic datasets list in the server dialogs (on page 18) opens the dialog for the client configuration settings:

Client configuration		×
Hostname		
static RCB assignments		
Report-ID	DataSet	New
		Del
		Edit
dynamic DataSets		
Name		New
		Del
		Edit
		1
ОК	Cancel	



Parameters	Description
Hostname	Name of the computer on which the driver is running that receives the reports:
	<ul> <li>for standalone projects: The computer name of the computer on which zenon Runtime runs;</li> <li>in the zenon network: The computer name of the project server or project standby.</li> </ul>
	<b>Attention</b> : Do not use "localhost"; use the computer names from the operating system instead.
static RCB assignment	Settings for the static assignment of RCBs (the same for unbuffered and buffered RCBs).
	<b>Note</b> : Buffered reports must be configured in the driver configuration. They are not used if theay are not configured.
	For more information, see driver-specfic functions (on page 53).
Report-ID	Displays the report IDs already entered.
DataSet	Displays the dynamic data set (if the RCB was allocated one).
New	Creates a new entry in the list. Opens the 'statically assigned RCB' dialog to create a new entry with a report ID (or a name) - you can either enter it manually or browse the server and if necessary with dynamic data set (is taken from the lower list).
Del	Removes the selected entry from the list.
Edit	Opens the 'statically assigned RCB' dialog to edit the selected entry.
dynamic DataSets	Settings for dynamic data sets.
	<b>Note</b> : Dynamic data sets are not a requirement for buffered or unbuffered reports. They are optional settings if the IEC61850 server that is used supports this.
	For more information, see dynamic data sets (on page 68).



 
Name	Displays the data sets that have already been enterd - that are already present in the upper list.
New	Opens the dialog for creating a data set.
Del	Removes the selected entry from the list.
Edit	Opens the 'dynamic DataSet configuration' dialog to edit the selected entry.

#### statically assigned RCB

Clicking on New or Edit in the static RCB assignment list of the client configuration (On page 22) dialog opens the dialog to create an RCB and/or to assign an RCB a dynamic data set. RCBs are either defined by means of the RCB name:

statically assigned RCB
RCB name
MLZK1/LLN0/URCBdyn101[RP]
dynamic Dataset
MYDATASET 🗸
OK Cancel

#### or by means of the report ID:





Parameters	Description
RCB name/report ID	The name or the ID of the report (buffered or unbuffered). Must correspond exactly to the name/report ID in the PLC (IEC61850 server).
	A click on starts online browsing of the configured IEC 61850 server and shows if the server is running and all reporting control blocks that are currently on the server.
	Note: RCB name is expected here by default. The use of the RCB name can be be changed using the Use report ID for RCB assignment property in the server (on page 18) properties on report ID.
	Report ID: Use the report ID that was configured in the server. Depending on the PLC, the ID may already be predefined or it can be configured by the user themselves, for example using an SCL file.
	<b>Note</b> : If Runtime is running at the same time on the same computer, the RCBs cannot be browsed online.
dynamic Dataset	You can also optionally select a data set from the drop- down list of the data sets that have already been entered into the 'dynamic DataSet configuration (on page 26)' dialog.
	<b>Important:</b> If you do not define a data set here, the data set that is predefined for this RCB in the PLC (IEC61850 server) is used.

This list is displayed after you have browsed RCBs online on the IEC 61850 server:



		-
RCB name	Report-ID	1
MULTBC01CTRL/LLN0/brcbA01[BR]	MULTBC01CTRL/LLN0\$BR\$BRCBA	
MULTBC01CTRL/LLN0/brcbB01[BR]	MULTBC01CTRL/LLN0\$BR\$BRCBB	
MULTBC01CTRL/LLN0/urcbA01[RP]	MULTBC01CTRL/LLN0\$RP\$URCBA	
MULTBC01CTRL/LLN0/urcbB01[RP]	MULTBC01CTRL/LLN0\$RP\$URCBB	
MULTBC01CTRL/LLN0/urcbC01[RP]	MULTBC01CTRL/LLN0\$RP\$URCBC	
MULTBC01CTRL/LLN0/urcbD01[RP]	MULTBC01CTRL/LLN0\$RP\$URCBD	
MULTBC01CTRL/LLN0/urcbE01[RP]	MULTBC01CTRL/LLN0\$RP\$URCBE	=
MULTBC01MEAS/LLN0/urcbA01[RP]	MULTBC01MEAS/LLN0\$RP\$URCBA	
MULTBC01MEAS/LLN0/urcbB01[RP]	MULTBC01MEAS/LLN0\$RP\$URCBB	
MULTBC01MEAS/LLN0/urcbC01[RP]	MULTBC01MEAS/LLN0\$RP\$URCBC	
MULTBC01MEAS/LLN0/urcbD01[RP]	MULTBC01MEAS/LLN0\$RP\$URCBD	
MULTBC01MEAS/LLN0/urcbE01[RP]	MULTBC01MEAS/LLN0\$RP\$URCBE	
MULTBC01PROT/LLN0/brcbA01[BR]	MULTBC01PROT/LLN0\$BR\$BRCBA	
MULTBC01PROT/LLN0/brcbB01[BR]	MULTBC01PROT/LLN0\$BR\$BRCBB	
MULTBC01PROT/LLN0/urcbA01[RP]	MULTBC01PROT/LLN0\$RP\$URCBA	
MULTBC01PROT/LLN0/urcbB01[RP]	MULTBC01PROT/LLN0\$RP\$URCBB	

Select the desired Reporting Control Block from the list.

#### dynamic DataSet configuration

Clicking on New or Edit in the dynamic data sets list of the client configuration (on page 22) dialog opens the dialog to define a dynamic data set.

Name	
MYDATASET1	
Members	
Data Object Reference	Add
C264PCONTROL/CILO1SSTsBeh C264PCONTROL/CILO1SSTsMod C264PCONTROL/CSWI1SSTsBeh C264PCONTROL/CSWI1SSTSMod C264PCONTROL/CSWI1SSTSPos C264PCONTROL/CSWI2SSTSBeh C264PCONTROL/CSWI2SSTSBeh C264PPROTECTION/GGI02SSTSInd1	Remov
OK	



Parameters	Description
Name	Name of the data set.
Members	List of pre-configured data objects.
Add	Starts the browsing of data objects dfrom the variable list of the zenon project and displays all data objects for which a variable has already been created in the project. <b>Note</b> : The driver does not browse the data objects from the IEC61850 server, but from the variable list in the Editor. However, if Runtime is running at the same time on the same computer, the variables cannot be browsed.
Remove	Removes the selected entry from the list.
Export	Exports members to a TXT file.
Import	<ul> <li>Imports members to a TXT fle.</li> <li>In the open dialog:</li> <li>select the corresponding file</li> <li>select the desired variables</li> <li>Confirm the settings by clicking on OK</li> </ul>

The list is displayed to you after you have prepared suitable project variables:

Data Object 🖉		*	
Filtertext			
C264PCONTROL/CSWI3\$ST\$Health	1	OK	
C264PCONTROL/CSWI3\$ST\$Beh			_
C264PCONTROL/CSWI2\$ST\$Pos		Cance	el 🛛
C264PCONTROL/CSWI2\$ST\$Mod			
C264PCONTROL/CSWI2\$ST\$Health			
C264PCONTROL/CSWI2\$ST\$Beh			
C264PCONTROL/CSWI1\$ST\$Pos			
C264PCONTROL/CSWI1\$ST\$Mod			
C264PCONTROL/CSWI1\$ST\$Health			
C264PCONTROL/CSWI1\$ST\$Beh			
C264PCONTROL/CILO1\$ST\$Mod		-	
52/0			
Data Object 🥖		Add	_
		Remov	/e



The diriver displays all data objects - that are appropriate for data reporting - from the variable list of the zenon project, except those that have already been selected for the data set. In the upper list, you can filter and select the variable filters (multiple selection is also possible) and add these to the lower list. Objects that have already been selected are kept. Use the ox button to add the selected variables to the members of the dynamic data set.

# 7. Creating variables

This is how you can create variables in the zenon Editor:

### 7.1 Creating variables in the Editor

Variables can be created:

- as simple variables
- ▶ in arrays main.chm::/15262.htm
- ▶ as structure variables main.chm::/15278.htm

#### VARIABLE DIALOG

To create a new variable, regardless of which type:



Workspace 'C:\WSP6_PRJ ~	) 🖏 🖻	<b>````````````````````````````````````</b>		<b>V</b> • 75	🖌 ্য 🍕	<b>d</b>	
🗐 🌗 Variables 🛛 St	atus Name 🛆	nnit Unit	Net address	Data block	Offset	Bit num	Alignm
Driver	7	Filter text 🛛 🖬 Filter 😭	Filter text 🗹 Fi	ilter text 📝	Filter text 📔	Filter	Filter
A Datatypes	drv_arith		0	0	0	0	0
Allocations	drv_C	Variable new	Ins	0	0	0	0
	drv_E	Create standard function		0	0	0	0
👽 Units	drv_N			0	0	0	0
🕀 🛒 Screens	drv_N	Linked elements	•	0	0	0	0
Solutions	drv_N	Copy	Ctrl+C	0	0	0	0
	drv_N	Paste	Ctrl+V	0	0	0	0
Recipes	drv_N			0	0	0	0
Time control	drv_S	Delete	Del	0	0	0	0
🗉 🤡 Programming interfa	<ul> <li>Interr</li> </ul>	Expand/collapse node		0	0	0	0
- 5 straton (IEC 6113	<ul> <li>Interr</li> </ul>	Activate all		0	0	0	0
The second of a second	<ul> <li>Interr</li> </ul>			0	0	0	0
Interlockings		Activate					
- B Command - Command Energy Managemer		Deactivate					
- 👔 Message Control		Export XML selected					
- 🔄 Menus		Import XML					
Report Generator							
B User administrati		Extended import/export	•				
SAF Interface     Files		Extended filter	•				
History of chang		Remove all filter					
🖬 📠 7 PB.I 👘 👘		Edit selected cell	F2				
	12 total / 11	Replace text in colorted column	0	able			
Project tree Street Network topology	12 total / 1:	Replace text in selected column		able			_

#### 1. Select the New variable command in the variables node in the context menu

- 2. The dialog for configuring variables is opened
- 3. configure the variable



ate variable			×
Settings Name: S. Variable			
S_Variable			
Driver			
SIMUL32 - SIMUL_WIZ		-	
Driver object type			
PLC marker		•	
Datatype			
REAL			
Array settings			
<ul> <li>Start index is 0</li> </ul>			
Dim 1	Dim 2	Dim 3	
0	0	0	
Addressing options			
Automatic addressing			
Addressing according to	data type offset and sta	rt offset	
Manual addressing			
Each datatype starts wit	th new offset		
Automatic addressing			
Activate all elements			
<ul> <li>Activate element manual</li> </ul>	lly		
Back	Finish	Cancel He	elp

4. The settings that are possible depends on the type of variables

Property	Description
Name	Distinct name of the variable. If a variable with the same name already exists in the project, no additional variable can be created with this name.
	Attention: The # character is not permitted in variable names. If non- permitted characters are used, creation of variables cannot be completed and the Finish button remains inactive.
Drivers	Select the desired driver from the drop-down list.
	<b>Note:</b> If no driver has been opened in the project, the driver for internal variables (Intern.exe (Main.chm::/Intern.chm::/Intern.htm)) is automatically loaded.
Driver object type (cti.chm::/28685.h tm)	Select the appropriate driver object type from the drop-down list.



Data type	Select the desired data type. Click on the button to open the selection dialog.
Array settings	Expanded settings for array variables. You can find details in the Arrays chapter.
Addressing options	Expanded settings for arrays and structure variables. You can find details in the respective section.
Automatic element activation	Expanded settings for arrays and structure variables. You can find details in the respective section.

#### INHERITANCE FROM DATA TYPE

Measuring range, Signal range and Set value are always:

- derived from the datatype
- Automatically adapted if the data type is changed

Note for signal range: If a change is made to a data type that does not support the set signal range, the signal range is amended automatically. For example, for a change from INT to SINT, the signal range is changed to 127. The amendment is also carried out if the signal range was not inherited from the data type. In this case, the measuring range must be adapted manually.

### 7.2 Addressing

The addressing is based on the variable names.



Name	Description	
Name	Freely definable name	
	Attention: The name is used for addressing the variables and must be clear in each control system project. As a result, the server name is also taken into account if the driver identifies the connection with the help of the Net Address property.	
Identification	Enter any desired text; for example resource name, comments,	
	Can be used for addressing (optional).	
Net address	Network address of variable.	
	This address refers to the network address in the connection list of the driver configuration. It defines the IEC 61850 server on which variables are saved.	
Data block	Not used for this driver	
Offset	Not used for this driver	
Alignment	Not used for this driver	
Bit number	Not used for this driver	
String length	Only available for String variables: Maximum number of characters from which a variable can exist.	
Driver object type	Dependent on the type of variable, the object type is selected when the variable is created; the type can be changed here later. For more information, see also the driver objects (on page 35).	
Data type	Data type of variables that were selected when the variable was created; the type can be changed here later.	
	<b>ATTENTION:</b> If you subsequently change the data type here, you must check all variable properties, such as value range for example, and change them if necessary.	

#### SYNTAX NAMING CONVENTION

The naming convention is based on the following syntax: **SERVER!LD/LN/DATA/DataAttr[FC]** 

For this, the following applies:

- The server name (on page 18) is separated by the exclamation mark (!) from the following identifiers.
- ► All additional identifiers to DataAttr are separated by a slash (/).



 Only if an identifier is a structure, their elements are separated by a dot (.); for example: SERVER!LD/LN/DATA/DataAttr.item[FC].

#### The designations are:

Parameters	Description
SERVER	Freely definable name of the server.
	Name should make sure that all variable names are identical.
	<b>Recommendation:</b> Use the same names as defined in driver dialog Dialog Server (on page 18). The driver however does not recognize the used connection via the Server name
	but via settings the Net address.
LD	Name of the logical device.
LN	Name of the logical node.
DATA	Name of the 'data object', see Appendix B - data objects / data attributes
DataAttr	Name of the 'data attribute', see Appendix B - data objects / data attributes
FC	"functional constraint" of the "data attribute", see Appendix A - Description of the Functional Constraints (FCs)

#### ▲ Attention

The naming convention for variables complies with the ObjectReference defined in standard IEC61850-7-1.

In the standard a slash (/) is only used as separator between LD and LD and otherwise separated by dots (.). If DATA or DataAttr is a structure, dots make it impossible to differentiate between DATA and structure. Therefore an own naming conversion is used for the variable addressing.

#### **EXAMPLE:**

The logical node "XCBR1" (circuit breaker 1) has, among other things, a data object "Pos", which is a CDC (Common Data Class) "Controllable Double Point" (DPC). This data point 'Pos' has, in turn, attributes 'stVal', 'q' and 't', the name and semantics of which is specific due to its CDC, which is defined in IEC61850-7-3.



Data attribute	Name	IEC 61850 Standard
XCBR1/Pos	Switching position	In accordance with LN definition XCBR in 61850-7-4
XCBR1/Pos/stVal[ST]	position value	In accordance with CDC definition DPC in 61850-7-3
XCBR1/Pos/q[ST]	Quality	In accordance with CDC definition DPC in 61850-7-3
XCBR1/Pos/t[ST]	time stamp	In accordance with CDC definition DPC in 61850-7-3
XCBR1/Pos/Oper.ctlVal[CO]	Value of the command	In accordance with 'Oper' type definition in 61850-8- 1, Table E.9

All objects in the variable model are constructed in this way. For this reason, the driver knows, for example, that the attributes 'q' and 't' contain quality and time stamps for the variables in 'stVal'. This allows access to all attributes of the each object in the variable model. Existing values for quality and time stamp are automatically assigned to the actual values of the driver.

Operate command: Thanks to the specific variable nomenclature, the driver automatically notices that an operate command is to be created if a variable is written to, for example with the name '\*/Oper.ctlVal[CO]' (Operation.ControlValue). It the automatically sends the required sequence of telegrams to the control object.

#### TIME STAMP AND QUALITY

Time stamp and quality attribute are always parts of variables in zenon. Variables with attributes 'q' and 't' do not need to be created separately. The driver automatically uses the time stamp and the quality of the data object for its variables with  $\mathbf{FC} = \mathbf{ST}$  and  $\mathbf{MX}$  (FC stands for Functional Constraint (on page 74)). Without taking into account whether a variable for attribute 't' was created, the time stamp received is used for all  $\mathbf{ST}$  and  $\mathbf{MX}$  variables, for example the  $\mathbf{stval}$  variable for CEL, AML or Historian. Selected quality bits that are received in attribute 'q' are also assigned the status bits of the  $\mathbf{stval}$  variable (see also Driver-specific functions (on page 53)).

### 7.3 Driver objects and datatypes

Driver objects are areas available in the PLC, such as markers, data blocks etc. Here you can find out which driver objects are provided by the driver and which IEC data types can be assigned to the respective driver objects.



# 7.3.1 Driver objects

The following object types are available in this driver:

Driver object type	Channel type	Read / Write	Supported data types	Comment
PLC marker	8	R / W	REAL, LREAL, WSTRING, DINT, UDINT, BOOL, INT, UINT, STRING, USINT, SINT	Data attribute variables
File Transfer	9	R / W	STRING	Command and return variables for the file transfer. Note: The string length should correspond to the maximum length of the file names (including the path) in the PLC; a maximum of 260 characters for *!Command variable for example, (but more for *!Directory). You can find more information in the chapter on driver-specific functions (on page 53)
State Info	11	R	UINT	Internal variables display the current status of the command. You can find more information in the chapter on driver-specific functions (on page 53)
Driver variable	35	R / W	BOOL, SINT, USINT, INT, UINT, DINT, UDINT, REAL, STRING	Variables for the static analysis of the communication; is transferred between driver and Runtime (not to the PLC). Note: The addressing and the behavior is the same for most zenon drivers. You can find more information in the chapter on driver variables (on page 48)



### 7.3.2 Mapping of the data types

All variables in zenon are derived from IEC data types. The following table compares the IEC datatypes with the datatypes of the PLC.



PLC	zenon	Data type	Comment
BOOLEAN	BOOL	8	
INT8	SINT	10	
INT8U	USINT	9	
INT16	INT	1	
INT16U	UINT	2	
INT24	DINT	3	
INT24U	UDINT	4	
INT32	DINT	3	
INT32U	UDINT	4	
INT128	DINT	3	
FLOAT32	REAL	5	
FLOAT64	LREAL	6	
ENUMERATED	INT	1	
CODED ENUM	UDINT, STRING	4, 12	MMS Bitstring
OCTET STRING	STRING	12	
VISIBLE STRING	STRING	12	
UNICODE STRING	WSTRING	21	Coding is carried out in UTF-8
PACKED LIST	UDINT, STRING	4, 12	MMS Bitstring
TIMESTAMP	LREAL	6	Only octets 07 (see also TimeQuality Bit mapping (on page 53))
EntryTime	LREAL	6	
TriggerConditions	UDINT, STRING	4, 12	MMS Bitstring

### ASSIGNMENT OF DATA TYPES FROM THE PLC TO ZENON DATA TYPES

Data type: The property Data type is the internal numerical name of the data type. It is also used for the extended DBF import/export of the variables.



MMS Bitstring: The data attribute types that were assigned to the MMS <code>Bitstring</code> in accordance with the standard (see IEC61850-8-1), CODED ENUM, PACKED LIST und <code>TrigerConditionsfor</code> example, correspond to the UDINT data type in zenon by default (Motorola format, bit 0 highest value in its octet). In addition, the driver allows such variables with the data type STRING instead of UDINT to be created manually. The value of the string only contains the characters "0" and "1" in a sequence that is the same as that of the bits defined in the standard and only in the length of the bit string, for example the value of the TrgOps Attribute - Bitstring(6) - as String "011111" (in UDINT=124) means that all trigger condition bits except bit 0 - 'Reserved' are set and the value "000010" (in UDINT=8) - only bit 4 - 'intergity'.

# 7.4 Creating variables by importing

Variables can also be imported by importing them. The XML and DBF import is available for every driver.

# 7.4.1 Online import


Variables in a zenon project can be created with the import of the driver. The driver can browse the variable list of the IEC 61850 server.

### Attention

If Runtime is running on the same computer at the same time, the variables in the editor cannot be imported by the PLC, because the driver in Runtime uses the given settings for communication.



You call up the import using the context menu of the driver in the driver list.

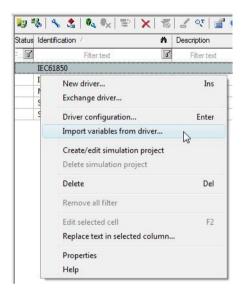

In the dialog that opens, select the PLC Browsing option and select a server from which the variables are to be browsed.

The connection to the server is established and the list of existing data points (LDs, LNs, data objects, data attributes) is read.

If the reading in has ended, an important dialog opens in which you can filter the browsed variables (capitalization, for example \*XCBR1\*stVal\*), select them (including multiple selection) and add them from the upper to lower list.

You create the selected variables in the project using the OK button.

# Attention

The driver creates variables with default value ranges, for example a UDINT with <0.. 4294967295> and a LREAL with <-1000..1000>, which may not correspond to the value ranges of the attributes, for example stVal-attribute UDINT <0..3> or t-attribute LREAL<0.. 2147483647> with three decimal places for milliseconds. Therefore ensure after import after that all variables have the correct value range properties and the string is the right length.



# 7.4.2 Offline import

Variables can also be imported offline. The following file endings are accepted:

- ▶ \*.xml
- ▶ \*.scl
- ▶ \*.icd
- ▶ \*.cid
- ▶ \*.scd

The driver only imports DOI elements online. The ReportControl properties (report control block) and SettingControl (Setting Control Block) are not supported during offline import. You can create the variables for theses attributes by means of online import or manually.

To import variables from a file:

1. Select the File browsing option in server selection

Select a server	x
Servers	
(1) Server 1	
<ul> <li>PLC browsing</li> <li>File browsing</li> </ul>	
Sile browsing:	OK Cancel



#### 2. Select the import file.

	2 N			
1				
Bay0.xml				
🔮 Bay1.xml				
Dateiname:	Bay0.xml		-	Öffnen
Dateityp:	IEC documents (xm	lind col)		Abbrechen
Dateigp.	TEC documents (xm	inica,sci)	•	Abbiechen

3. The following steps for the selection of variables are similar to online import.

Address 🛆	Туре		*	
Filtertext	Filtertext	T		
Server1!KSGL2/XCBR1/Pos/Oper.T[CO]	ENTRYTIME			OK
Server1!KSGL2/XCBR1/Pos/Oper.origin	orl OCTET STRING			
Server1!KSGL2/XCBR1/Pos/Oper.origin.	or ENUM			<u>C</u> ancel
Server1!KSGL2/XCBR1/Pos/Oper.ctMal	[CO] BOOLEAN			
Server1!KSGL2/XCBR1/Pos/Oper.ctlNu	m[ INT8U			
Server1!KSGL2/XCBR1/Pos/Oper.Chec	<[C DBPOS			
Server1!KSGL2/XCBR1/Pos/ctlModel[Cl	F] ENUM			
Server1!KSGL2/XCBR1/Pos/Cancel.Tes	t[C BOOLEAN			
Server1!KSGL2/XCBR1/Pos/Cancel.T[C	0] ENTRYTIME			
Server1!KSGL2/XCBR1/Pos/Cancel.orig	in OCTET STRING			
Server1!KSGL2/XCBR1/Pos/Cancel.orig	in ENUM		-	
2/1				
Address /	Туре			Add
Server1!KSGL2/XCBR1/Pos/Oper.ctfVal	[CO] BOOLEAN			
				<u>R</u> emove
				_

# 7.4.3 XML import of variables from another zenon project

For the import/export of variables the following is true:

- The import/export must not be started from the global project.
- The start takes place via:
  - Context menu of variables or data typ in the project tree



- or context menu of a variable or a data type
- or symbol in the symbol bar variables

#### Attention

When importing/overwriting an existing data type, all variables based on the existing data type are changed.

#### Example:

There is a data type XYZ derived from the type INTwith variables based on this data type. The XML file to be imported also contains a data type with the name XYZ but derived from type STRING. If this data type is imported, the existing data type is overwritten and the type of all variables based on it is adjusted. I.e. the variables are now no longer INT variables, but STRING variables.

### 7.4.4 DBF Import/Export

Data can be exported to and imported from dBase.

#### IMPORT DBF FILE

To start the import:

- 1. right-click on the variable list
- 2. in the drop-down menu of Extended export/import... select the Import dBase command
- 3. follow the import assistant

The format of the file is described in the chapter File structure.

# 💡 Info

Note:

- Driver object type and data type must be amended to the target driver in the DBF file in order for variables to be imported.
- dBase does not support structures or arrays (complex variables) at import.



#### EXPORT DBF FILE

To start the export:

- 1. right-click on the variable list
- 2. in the drop-down menu of Extended export/import... select the Export dBase command
- 3. follow the export assistant

#### Attention

DBF files:

- must correspond to the 8.3 DOS format for filenames (8 alphanumeric characters for name, 3 character suffix, no spaces)
- must not have dots (.) in the path name. e.g. the path C:\users\John.Smith\test.dbf is invalid. Valid: C:\users\JohnSmith\test.dbf
- must be stored close to the root directory in order to fulfill the limit for file name length including path: maximum 255 characters

The format of the file is described in the chapter File structure.

# 🂡 Info

dBase does not support structures or arrays (complex variables) at export.

File structure of the dBase export file

The dBaseIV file must have the following structure and contents for variable import and export:



# ▲ Attention

dBase does not support structures or arrays (complex variables) when exporting.

DBF files must:

- correspond to the 8.3 DOS format for filenames (8 alphanumeric characters for name, 3 character suffix, no spaces)
- Be stored close to the root directory (Root)

#### DESIGN

Description	Туре	Field size	Comment
KANALNAME	Char	128	Variable name.
			The length can be limited using the MAX_LAENGE entry in project.ini .
KANAL_R	С	128	The original name of a variable that is to be replaced by the new name entered under "KANALNAME" (field/column must be entered manually).
			The length can be limited using the MAX_LAENGE entry in project.ini .
KANAL_D	Log	1	The variable is deleted with the $\ensuremath{\mathbbm 1}$ entry (field/column has to be created by hand).
TAGNR	С	128	Identification.
			The length can be limited using the MAX_LAENGE entry in project.ini .
EINHEIT	С	11	Technical unit
DATENART	С	3	Data type (e.g. bit, byte, word,) corresponds to the data type.
KANALTYP	С	3	Memory area in the PLC (e.g. marker area, data area,) corresponds to the driver object type.
HWKANAL	Num	3	Bus address
BAUSTEIN	N	3	Datablock address (only for variables from the data area of the PLC)
ADRESSE	N	5	Offset



BITADR	N	2	For bit variables: bit address For byte variables: 0=lower, 8=higher byte For string variables: Length of string (max. 63 characters)	
ARRAYSIZE	N	16	Number of variables in the array for index variables ATTENTION: Only the first variable is fully available. All others are only available for VBA or the Recipe Group Manager	
LES_SCHR	R	1	Write-Read-Authorization 0: Not allowed to set value. 1: Allowed to set value.	
MIT_ZEIT	R	1	time stamp in zenon (only if supported by the driver)	
OBJEKT	N	2	Driver-specific ID number of the primitive object comprises KANALTYP and DATENART	
SIGMIN	Float	16	Non-linearized signal - minimum (signal resolution)	
SIGMAX	F	16	Non-linearized signal - maximum (signal resolution)	
ANZMIN	F	16	Technical value - minimum (measuring range)	
ANZMAX	F	16	Technical value - maximum (measuring range)	
ANZKOMMA	N	1	Number of decimal places for the display of the values (measuring range)	
UPDATERATE	F	19	Update rate for mathematics variables (in sec, one decimal possible) not used for all other variables	
MEMTIEFE	N	7	Only for compatibility reasons	
HDRATE	F	19	HD update rate for historical values (in sec, one decimal possible)	
HDTIEFE	N	7	HD entry depth for historical values (number)	
NACHSORT	R	1	HD data as postsorted values	
DRRATE	F	19	Updating to the output (for zenon DDE server, in [s], one decima possible)	
HYST_PLUS	F	16	Positive hysteresis, from measuring range	
HYST_MINUS	F	16	Negative hysteresis, from measuring range	
PRIOR	N	16	Priority of the variable	
REAMATRIZE	С	32	Allocated reaction matrix	



ERSATZWERT	F	16	Substitute value, from measuring range
SOLLMIN	F	16	Minimum for set value actions, from measuring range
SOLLMAX	F	16	Maximum for set value actions, from measuring range
VOMSTANDBY	R	1	Get value from standby server; the value of the variable is not requested from the server but from the standby-server in redundant networks
RESOURCE	С	128	Resource label. Free string for export and display in lists. The length can be limited using the MAX_LAENGE entry in project.ini .
ADJWVBA	R	1	Non-linear value adaption: 0: Non-linear value adaption is used 1: non linear value adaption is not used
ADJZENON	С	128	Linked VBA macro for reading the variable value for non-linear value adjustment.
ADJWVBA	С	128	Linked VBA macro for writing the variable value for non-linear value adjustment.
ZWREMA	N	16	Linked counter REMA.
MAXGRAD	N	16	Gradient overflow for counter REMA.

# ▲ Attention.

When importing, the driver object type and data type must be amended to the target driver in the DBF file in order for variables to be imported.

#### LIMIT DEFINITION

Limit definition for limit values 1 to 4 ,  $\$  and status 1 to 4:



Description	Туре	Field size	Comment	
AKTIV1	R	1	Limit value active (per limit value available)	
GRENZWERT1	F	20	Technical value or ID number of a linked variable for a dynamic limit (see VARIABLEx) (if VARIABLEx is 1 and here it is -1, the existing variable linkage is not overwritten)	
SCHWWERT1	F	16	Threshold value for limit	
HYSTERESE1	F	14	Hysteresis in %	
BLINKEN1	R	1	Set blink attribute	
BTB1	R	1	Logging in CEL	
ALARM1	R	1	Alarm	
DRUCKEN1	R	1	Printer output (for CEL or Alarm)	
QUITTIER1	R	1	Must be acknowledged	
LOESCHE1	R	1	Must be deleted	
VARIABLE1	R	1	Dyn. limit value linking the limit is defined by an absolute value (see field GRENZWERT	
FUNC1	R	1	Function linking	
ASK_FUNC1	R	1	With interrogation before execution	
FUNC_NR1	N	10	ID number of the linked function (if "-1" is entered here, the existing function is not overwritten during import)	
A_GRUPPE1	N	10	Alarm/event group	
A_KLASSE1	N	10	Alarm/event class	
MIN_MAX1	С	3	Minimum, Maximum	
FARBE1	N	10	Color as Windows coding	
GRENZTXT1	С	66	Limit value text	
A_DELAY1	N	10	Time delay	
INVISIBLE1	R	1	Invisible	

Expressions in the column "Comment" refer to the expressions used in the dialog boxes for the definition of variables. For more information, see chapter Variable definition.



# 7.5 Driver variables

The driver kit implements a number of driver variables. These are divided into:

- Information
- Configuration
- Statistics and
- Error messages

The definitions of the variables defined in the driver kit are available in the import file drvvar.dbf (on the CD in the directory: CD Drive:/Predefined/Variables) and can be imported from there.

**Hint:** Variable names must be unique in zenon. If driver variables are to be imported from drvvar.dbf again, the variables that were imported beforehand must be renamed.

# 💡 Info

Not every driver supports all driver variants.

For example:

- Variables for modem information are only supported by modem-compatible drivers
- Driver variables for the polling cycle only for pure polling drivers
- Connection-related information such as ErrorMSG only for drivers that only edit one connection at a a time



#### INFORMATION

Name from import	Туре	Offset	Description
MainVersion	UINT	0	Main version number of the driver.
SubVersion	UINT	1	Sub version number of the driver.
BuildVersion	UINT	29	Build version number of the driver.
RTMajor	UINT	49	zenon main version number
RTMinor	UINT	50	zenon sub version number
RTSp	UINT	51	zenon service pack number
RTBuild	UINT	52	zenon build number
LineStateIdle	BOOL	24.0	TRUE, if the modem connection is idle
LineStateOffering	BOOL	24.1	TRUE, if a call is received
LineStateAccepted	BOOL	24.2	The call is accepted
LineStateDialtone	BOOL	24.3	Dialtone recognized
LineStateDialing	BOOL	24.4	Dialing active
LineStateRingBack	BOOL	24.5	While establishing the connection
LineStateBusy	BOOL	24.6	Target station is busy
LineStateSpecialInfo	BOOL	24.7	Special status information received
LineStateConnected	BOOL	24.8	Connection established
LineStateProceeding	BOOL	24.9	Dialing completed
LineStateOnHold	BOOL	24.10	Connection in hold
LineStateConferenced	BOOL	24.11	Connection in conference mode.
LineStateOnHoldPendConf	BOOL	24.12	Connection in hold for conference
LineStateOnHoldPendTransfer	BOOL	24.13	Connection in hold for transfer
LineStateDisconnected	BOOL	24.14	Connection stopped
LineStateUnknow	BOOL	24.15	Connection status unknown
ModemStatus	UDINT	24	Current modem status
TreiberStop	BOOL	28	Driver stopped



			For driver stop, the variable has the value TRUE and an OFF bit. After the driver has started, the variable has the value FALSE and no OFF bit.
SimulRTState	UDINT	60	Informs the status of Runtime for driver simulation.

#### CONFIGURATION

Name from import	Туре	Offset	Description
ReconnectInRead	BOOL	27	If TRUE, the modem is automatically reconnected for reading
ApplyCom	BOOL	36	Apply changes in the settings of the serial interface. Writing to this variable immediately results in the method SrvDrvVarApplyCom being called (which currently has no further function).
ApplyModem	BOOL	37	Apply changes in the settings of the modem. Writing this variable immediately calls the method SrvDrvVarApplyModem. This closes the current connection and opens a new one according to the settings PhoneNumberSet and ModemHwAdrSet.
PhoneNumberSet	STRING	38	Telephone number, that should be used
ModemHwAdrSet	DINT	39	Hardware address for the telephone number
GlobalUpdate	UDINT	3	Update time in milliseconds (ms).
BGlobalUpdaten	BOOL	4	TRUE, if update time is global
TreiberSimul	BOOL	5	TRUE, if driver in sin simulation mode
TreiberProzab	BOOL	6	TRUE, if the variables update list should be kept in the memory
ModemActive	BOOL	7	TRUE, if the modem is active for the driver



Device	STRING	8	Name of the serial interface or name of the modem
ComPort	UINT	9	Number of the serial interface.
Baud rate	UDINT	10	Baud rate of the serial interface.
Parity	SINT	11	Parity of the serial interface
ByteSize	SINT	14	Number of bits per character of the serial interface
			Value = 0 if the driver cannot establish any serial connection.
StopBit	SINT	13	Number of stop bits of the serial interface.
Autoconnect	BOOL	16	TRUE, if the modem connection should be established automatically for reading/writing
PhoneNumber	STRING	17	Current telephone number
ModemHwAdr	DINT	21	Hardware address of current telephone number
RxIdleTime	UINT	18	Modem is disconnected, if no data transfer occurs for this time in seconds (s)
WriteTimeout	UDINT	19	Maximum write duration for a modem connection in milliseconds (ms).
RingCountSet	UDINT	20	Number of ringing tones before a call is accepted
ReCallIdleTime	UINT	53	Waiting time between calls in seconds (s).
ConnectTimeout	UDINT	54	Time in seconds (s) to establish a connection.



#### STATISTICS

Name from import	Туре	Offset	Description
MaxWriteTime	UDINT	31	The longest time in milliseconds (ms) that is required for writing.
MinWriteTime	UDINT	32	The shortest time in milliseconds (ms) that is required for writing.
MaxBlkReadTime	UDINT	40	Longest time in milliseconds (ms) that is required to read a data block.
MinBlkReadTime	UDINT	41	Shortest time in milliseconds (ms) that is required to read a data block.
WriteErrorCount	UDINT	33	Number of writing errors
ReadSucceedCount	UDINT	35	Number of successful reading attempts
MaxCycleTime	UDINT	22	Longest time in milliseconds (ms) required to read all requested data.
MinCycleTime	UDINT	23	Shortest time in milliseconds (ms) required to read all requested data.
WriteCount	UDINT	26	Number of writing attempts
ReadErrorCount	UDINT	34	Number of reading errors
MaxUpdateTimeNormal	UDINT	56	Time since the last update of the priority group Normal in milliseconds (ms).
MaxUpdateTimeHigher	UDINT	57	Time since the last update of the priority group Higher in milliseconds (ms).
MaxUpdateTimeHigh	UDINT	58	Time since the last update of the priority group High in milliseconds (ms).
MaxUpdateTimeHighest	UDINT	59	Time since the last update of the priority group Highest in milliseconds (ms).



PokeFinish	BOOL	55	Goes to $1$ for a query, if all current pokes were
			executed

#### ERROR MESSAGES

Name from import	Туре	Offset	Description
ErrorTimeDW	UDINT	2	Time (in seconds since 1.1.1970), when the last error occurred.
ErrorTimeS	STRING	2	Time (in seconds since 1.1.1970), when the last error occurred.
RdErrPrimObj	UDINT	42	Number of the PrimObject, when the last reading error occurred.
RdErrStationsName	STRING	43	Name of the station, when the last reading error occurred.
RdErrBlockCount	UINT	44	Number of blocks to read when the last reading error occurred.
RdErrHwAdresse	UDINT	45	Hardware address when the last reading error occurred.
RdErrDatablockNo	UDINT	46	Block number when the last reading error occurred.
RdErrMarkerNo	UDINT	47	Marker number when the last reading error occurred.
RdErrSize	UDINT	48	Block size when the last reading error occurred.
DrvError	SINT	25	Error message as number
DrvErrorMsg	STRING	30	Error message as text
ErrorFile	STRING	15	Name of error log file

# 8. Driver-specific functions

Special specifications of the IEC 61850 standard were implemented as specific functions in the IEC 850 driver.



#### ASSOCIATION

The driver only opens a connection to a Logical Device if at least one variable from the LD is created in the project.

After communication is broken off (due to a network failure, for example), the connection to the Logical Device is then only reestablished automatically if at least one variable of the LD is being polled. We suggest, for each LD, creating at least one variable for an obligatory attribute (for example: \*/LLNO/Mod/stVal[ST]) and, for example, switching on the DDE active property so that the variable remains registered from the start. This attribute may not be communicated using Reports but should use polling communication.

#### **COMMANDS (CONTROL MODEL)**

The driver supports the 'Direct Operate' and 'Select Before Operate' commands (SBO) with normal and increased security. The driver automatically checks the actual Control Model and executes this command accordingly.

If a value is set to a project variable that corresponds to the item ctlVal in a data attribute with the name 'Oper' and has the Functional Constraint CO or SP (\*/Oper.ctlVal[CO|SP]), the driver automatically checks which Control Model is required for a command with this data object. To do this, the attribute \*/ctlModel[CF] of this data object is read off first. Depending on the value of this attribute, the corresponding command is executed and the respective Control Model is used:

Value 0: No action, execution of the command not possible (status only) Value 1: An 'Operate' service (direct control with normal security) is executed. Value 2: 'Select' and 'Operate' services (select before operate with normal security) are executed. Value 3: An 'Operate' service (direct control with enhanced security) is executed. Value 4: 'SelectWithVariable' and 'Operate' services (select before operate with enhanced security) are executed.

### 💡 Info

The driver reads the ctlModel attribute from the server to execute the command, but the driver does not transfer the ctlModel value to Runtime automatically. This includes situations where a variable was created for the ctlModel. If a variable was created, it is updated in accordance with the polling rate that is defined in the driver configuration.



#### THE COMMAND IN DETAIL

Operate command: The value is set directly to \*/Oper[CO].

Select commands are processed sequentially.

- ► Select command with normal security: read from \*/SBO[CO], write to \*/Oper[CO].
- Select command with increased security: write to \*/SBOw[CO], write to \*/Oper[CO].

The required command sequences are automatically performed in the right sequence by the driver. No further configuration steps are necessary.

### MANUAL SELECTION AND CANCELLATION

In addition, the driver supports manual selection and cancellation, but only via the **command input** module in zenon.

If the command input sends a command and the Select Before Operate property is active, (the property for the Oper.ctlVal variable in zenon; please do not confuse this with the SBO attribute), the driver - in accordance with the ctlModel for the same object - executes a select (only if ctlModel= 2 or 4). The values of the ctlModel=0, 1 or 3 are treated as a negative select response.

If the IEC 61850 server responds positively to the select, the driver saves the information on the selected data object and in the following command (from the second stage of the command input), the driver only executes the operate.

If the command is cancelled from the second stage, the driver sends a cancel.

The driver ignores the Select Before Operate property of the Oper.ctlVal variables if the value of ctlVal is set directly and not replaced by a command input action.

### **CTLNUM (CONTROL SEQUENCE NUMBER)**

The driver automatically creates the values of the ctlNum attributes. If a value is set to the project variable and to the attribute \*/Oper.ctlVal[CO|SP] accordingly, the driver automatically increases the value of \*/Oper.ctlNum[CO]. The driver restarts incrementing the ctlNum at 0 if the value has reached 127.

The driver also counts ctlModel=0 (no action) but for this model, the ctlNum variable is not updated in Runtime, because in fact - in accordance with the standard (IEC61850-7-3) - the ctlVal attribute should not exist.



#### ADDITIONAL CAUSE DIAGNOSIS AND 'STATE INFO' VARIABLES

The IEC61850 server keeps AdditionalCauseDiagnosis ready for negative responses to a command (AddCause in LastApplError structure). The possible values of the AddCause service parameter are listed in the IEC 61850-7-2. The driver can relay the received AddCause to zenon and also the current state of the current command (for example: Select/Operate/Cancel) and provide information on whether the command was successful.

The driver provides this information in 'State Info' driver object variables (see Driver objects (on page 35)) if these have been created. Variables that relay the stage of the current command can be created for each \*/Oper structure.

- \*/Oper.AddCause after a failed command, the value displays error information that it has received from the PLC.
- \*/Oper.ControlRun the status or the result of the current command:
  - 1 = command is running
  - 0 = command successful
  - -1 = command failed
- \*/Oper.ControlState the state of the command that is currently running (processed sequentially):
  - -1 = command ended
  - 0 = read ctlModel
  - 1 = 'Select' sent
  - 2 = 'Operate' sent
  - 3 = 'Cancel' sent

#### Example:

You can create the following status variables for the variable 'PLC-Marker'-BOOL 'GE650!GEDeviceF650/XCBR1/Pos/Oper.ctlVal[CO]':

'State Info'-SINT 'GE650!GEDeviceF650/XCBR1/Pos/Oper.AddCause'

'State Info'-SINT 'GE650!GEDeviceF650/XCBR1/Pos/Oper.ControlRun'

'State Info'-SINT 'GE650!GEDeviceF650/XCBR1/Pos/Oper.ControlState'



Case 1: If you set the value to \*/Oper.ctlVal directly or the variable does not have the SBO property, the sequence of states is as follows:

- 1. \*/Oper.ControlRun = 1 and \*/Oper.ControlState = 0
- 2. \*/Oper.ControlState = 1 and then \*/Oper.ControlState = 2
- 3. \*/Oper.ControlRun = 0 and \*/Oper.ControlState = -1

Case 2: If you use the two-stage command input for \*/Oper.ctlVal with the SBO property, the sequence of states for each command serve (for select, operate and cancel) is the following:

- 1. \*/Oper.ControlRun = 1 and \*/Oper.ControlState = 0
- 2. \*/Oper.ControlState = x
- 3. \*/Oper.ControlRun = 0 and \*/Oper.ControlState = -1

whereby x=1 or 2 or 3, depending on the command service.

#### Attention

The 'State Info' variables do not have any value if no command was given. To evaluate status variables, you must first send a value to \*/Oper.ctlVal[CO|SP].

#### 'CHECK' SERVICE PARAMETER FOR COMMANDS

There are two methods for setting check conditions with the following Operate or SelectWithValue commands:

1. Check condition can be pre-defined by setting a value for \*/Oper.Check[CO]. The current value of this attribute is used for the command service parameter;

Attention: The Check attribute is a PACKED LIST (MMS bit string) with 2 bits. In accordance with IEC61850-8-1 8.1.3.5, the first member of the PACKED LIST is mapped to bit(0) and this bit should be the highest value (most significant) bit of the octet. This means that the valid target values for the Check attribute are 0x80 (synchrocheck), 0x40 (interlock-check), 0xC0 (both check bits) and 0x00.

2. in zenon: By setting in the command input: Action - Qualifier of Command property. The valid target values are 2 - synchrocheck (inverted 01b), 1 - interlock-check (inverted 10b), 3 (both bits bits) and 0.



#### ORIGINATOR

The originator attribute orCat (Category) and orldent (Identification) show which originator (for example a client that is on bay level) caused the last change of data (such as issuing a command).

The Origin attributes are an obligatory part of Oper, SBOw and Cancel services and optional in some cases, such as the 'Pos' data object. To analyze the originator of the values received in Runtime, for example \*/Pos/stVal[ST], you can create project variables with corresponding names in zenon: \*/Pos/origin.orCat[ST] and \*/Pos/origin.orIdent[ST].

**Important:** To be able to analyze the origin of a data object, the following must be implemented: the IEC61850 server must write the origin of the command received in this attribute, for example from \* /Oper.origin.\*[CO].

When a Report is received, the driver forwards this to Runtime before it forwards the other attributes of the received data object (if only one origin with Functional Constraint ST exists in the data object that was reported).

**Note:** You can use orCat or orldent variables to compile a dynamic limit value text for a reported stVal variable.

# 🂡 Info

When a command is executed, the driver sets the following values for the originator attribute in SBOw, Oper und Cancel: orCat = 2 (station control)

You can adapt the value for orCat in the Basic Settings (on page 15). orldent = "'zenon: <Computer name>'" (string between quotation marks - CHAR(27)), e.g. 'zenon: MyPC'

#### MAPPING OF DOUBLE POINT VALUES

In accordance with the IEC61850-7-3 standard, the attribute stVal has, in common data classes Double Point Status (DPS) and Controllable Double Point (DPC), the data type CODED ENUM with the value range: intermediate-state (00) | off (01) | on (10) | bad-state (11). The driver therefore waits until a Double Point attribute of the data type CODED ENUM is mapped to the communication protocol as an MMS of the bit string datatype and can have the following values: 0x00, 0x40, 0x80 and 0xC0. This basic data type is permitted in the SCL language with the name 'Dbpos' (IEC61850-6 chapter 9.5.4.2 Attribute basis types). In zenon, it corresponds to a variable with UDINT data type (see Assignment of data types (on page 36)).

As in the driver configuration, the option 'Deactivate standard double point value mapping' remains inactive by default. To use the modules from zenon Energy, for example the



command input functions, the driver assigns values of the stVal attributes of DPS and DPC in accordance with the following table:

Dbpos value	zenon value
Difference position (00)	2
Off (01)	0
On (10)	1
Invalid (11)	3

The driver only converts values for variables with the name \*stVal and data type UDINT.

#### QUALITY BITS, TIME STAMP AND TIMEQUALITY BIT MAPPING

The driver can support received attributes 'q' and 't' in corresponding project variables if these have been created.

However the driver always assigns the selected Quality Bits (of the 'q' attribute) and TimeQuality Bits (of the 't' attribute) of the corresponding status bits to each zenon variable that was created for an attribute of the data object and for which FC (on page 74)=ST or FC=MX, for example status bits of stVal. The driver also assigns the value of the 't' attribute to the time stamp of all ST/MX variables of the data object. For example: Receiving the time stamp as a 't' attribute is used for the corresponding stVal variable in the CEL. The driver automatically uses the time stamp and the quality of the data object for all its variables that were created in the project. For this reason, no variables need to be created separately for the attributes 'q' and 't', except if you want to analyze quality bits that have not been assigned any status bits.

The selected Quality and TimeQuality bits are assigned to the status bits of the variables of the data objects that respond as follows:



IEC61850 Quality or TimeQuality bits	Status bit in zenon	Notes
Validity = Invalid, Reserved or Questionable	INVALID	Identified by a red square on the linked element.
Overflow	OV_870 (Overflow)	Also an IEC 60870 status
Source = Substituted	SB_870 (substituted)	Also an IEC 60870 status
Test	TEST (test bit)	Also an IEC 60870 status
OperatorBlocked	BL_870 (Blocked)	Also an IEC 60870 status
ClockFailure	T_INVAL (invalid time) and T_INTERN (internal time)	The value of the 't' attribute is ignored - stVal has the time stamp of the local PC time.
ClockNotSynchronized	T_INVAL (invalid time) and T_EXTERN (external time)	

The TimeQuality bit LeapSecondsKnown is not assigned T\_INVAL.

The variables of the data object without 't' attribute (or with 't' value of 0) and the variables with other FC (on page 74) as  $s_T/Mx$  receive the time stamp of the local PC time.

# 💡 Info

You can evaluate status bits (such as T\_INVAL) by using a combined element or reaction matrix ('multi' type) and you can also filter in the CEL or AML.

#### FILETRANSFER

There are three functions implemented for the file transfer:

- 1. Request folder information
- 2. Get file from server
- 3. Delete file

### **1. REQUEST FOLDER INFORMATION**

To request folder information:



- 1. Create, in your zenon project, two file transferdriver object type string variables with the corresponding network address:
  - a) The first variable, hereafter called the command variable, with the name "server!command" can also be used to get files and to delete them.
  - b) The second variable with the name "SERVER!Directory" is only used for the result of the folder query. It receives the folder content as legible text. For this reason, its size should correspond to the maximum size of the file name (including the folder) in the PLC.
- 2. For the command variable, set the value "DIR" (for the root directory) or "DIR

```
<file_spec>".
```

<file\_spec> is a string that is sent to the server as a transfer parameter.

If the folder has been successfully received:

- ► The command variable changes its value to "DIR OK"
- The folder variable contains the received folder content as legible text. One line of this text has the following format:

<File name>;<File length>;<Time stamp>.

#### 2. GET FILE FROM SERVER

To get a file from the server, set the value "GET <File name> for the command variable".

If the file has been successfully received:

- It is saved in the folder that was defined as Directory for file transfer in the driver dialog basic settings (on page 15).
   Files from a subfolder are also stored in the main folder.
- ► The command variable changes its value to "GET OK"

### 3. DELETE FILE

To delete a file from the server, set the value "DEL <File name>". for the command variable".

If the file was deleted successfully, the command variable changes its value to "DEL OK"

### TROUBLESHOOTING

If errors occur when carrying out the file transfer, such as the server responding negatively, the command variable changes its value to "XXX ERROR" (XXX = DIR, GET or DEL) and the driver optionally writes an entry into the log file (see also error analysis (on page 72)).

#### LIMITATIONS

Attributes of type 'ARRAY OF' are not supported. All other Logical Nodes, Common Data Classes and data attribute types - as defined in IEC 61850-7-3 and IEC 61850-7-4 - are supported.

See the appendix, under PICS (and MICS) to find out more information about supported or required services.

# 9. Reporting

Reporting was introduced by the IEC 61850 standard for spontaneous communication. The variables that are linked with a successfully activated Report are no longer polled, but a reported by the PLC if there is a value change. The variables that are reported if a client activates a special report control block (RCB) are saved in the DatSet (Data Set) attribute of the RCB. The DatSet attribute is a visible string for the name of the data object, the value change of which is reported spontaneously by the IEC 61850 server.

The IEC850 driver supports Buffered and Unbuffered Reporting with the data predefined in the PLC and with Dynamic Data Sets - with the DatSet attribute, which was dynamically defined during activation of the RCB.

As envisaged by the IEC 61850 Standard, for a Report data object with Functional Constraints (FC) the following is available:

- ► Status (ST)
- Measurands (MX)

In a data set:

• Data objects with different FCs can be used together if the IEC 61850 server supports this.



► Data objects from different Logical Devices can be contained.

To make activation of reporting possible, the following conditions should be met:

- The data set and the Reporting Control Block that uses the data set must be in the same Logical Device.
- At least one variable of the Logical Node, in which the RCB is included, must have been created in the project. Otherwise the driver does not take this Logical Node into account at all. Exception: LLNO. The logical node LLNO is automatically taken into account for each logical device if the LD has at least one variable that was created in the project variable list.

# Attention

If you configure the data sets in the PLC, you cannot add data attributes, only whole data objects. Otherwise the time stamp and quality information in the driver cannot be edited, because they are not sent by the PLC (see also standard 61850-7-2 14.2.3.2.2.9, figure 23) The driver only activates reports in which data sets contain whole data objects.

The driver only activates reports in which data sets contain whole data objects.

The basic configuration of the reporting is carried out in driver configuration - server (on page 18). The configured Buffered Reports in the driver configuration has a higher priority than the Unbuffered Reports. If the activation of the Buffered Reports is not successful, the driver will instead activate Unbuffered Reports, which contain the required objects as well as the data sets. If you do not want the driver to activate the Unbuffered Reporting, set the max. auto used URCBs property in the driver configuration to 0.

If the driver cannot activate the reports for any reason, polling is used instead.

# 🍳 Info

When activating reporting, the driver can (optionally) write log entries, in which it can be seen which variables are no longer polled but were successfully activated in reporting (in the 'general text' column).

#### TRIGGER OPTIONS

The driver supports all Trigger Conditions, that are used to trigger the sending of the report. The Trigger Options (TrgOps) define which value change of a data instance is reported. The driver attempts to activate all configured TrgOps when the report is activated, but ignores write errors. If writing is unsuccessful, the Trigger Options that were already configured in the SCL file (or by the IED program) of the IEC61850 server are used.



You can activate/deactivate the individual Trigger Options via checkbox if you deactivate checkbox Use preconfigured TrgOps. This settings is true for all RCBs.

The TrigerConditions data attribute type that was assigned to the MMS Bitstring(6) in accordance with the standard if the corresponding \*TrgOps[RP|BR] variable was created during import, corresponds to the UDINT data type in zenon by default (Motorola format, bit 0 highest value in its octet). In addition, the driver allows such variables with the data type STRING instead of UDINT. The value of the string has a length of 6 and only contains the characters "0" and "1" in a sequence that is the same as that of the bits defined in the standard, for example the value as a string "011111" (as UDINT=124=0111100b) means that all trigger condition bits except bit 0 - 'Reserved' are set and the value "000010" (as UDINT=8=00001000b) - only bit 4 - 'intergity'.

# 9.1 Unbuffered Reporting

The IEC850 driver supports two variants of Unbuffered Reports:

- 1. Automatic assignment: All existing Reporting Control Blocks is checked in terms of content(data sets). Reports that contain most variables of a project are registered first;
- 2. Static assignment: The driver uses the assignment of Reporting Control Blocks to the client computer as it is defined in the driver configuration client configuration (on page 22).

#### **AUTOMATIC ASSIGNMENT**

Automatic assignment works with pre-defined data sets and pre-configured assignments of data sets to Reporting Control Blocks in the PLC.

Whilst the driver starts, all data sets that are present in the server are read off and ordered according to their usability (number of project variables included). This sorting indicates the sequence in which the driver attempts to activate free URCBs for reporting. At most, only as many URSBs are activated as are defined in Drive configuration (on page 18) in the max. auto used URCBs property. All data objects of the data sets that are successfully linked to an active RCB are no longer polled but are reported in the event of a value change.



### RULES FOR CONFLICTS THAT OCCUR

When activating reporting, the driver also recognizes reports with the same content; the name of these reports can be different. Before the RCBs are sorted for the zenon project according to their usability, the driver first sorts the data objects of the data sets of each RCB and compares them in order to avoid duplicates. The following applies for conflicts when activating the Reporting:

- ► For the same reports with identical or different sequences of the same data objects: Only one report is activated.
- ▶ If a report is already occupied by another client, the next free report is activated.
- ▶ If all reports are already occupied by other clients, the data points are polled.

### **EXAMPLE OF AUTOMATIC ALLOCATION**

The following variables are available in your project

Name 🛆	ň	Datentyp
Filtertext	7	Filter T
Server1!GEDeviceF650/LLN0/urcbMXA01/BufTm[RP]		UDINT
Server1!GEDeviceF650/LLN0/urcbMXA01/ConfRev[RP]		UDINT
Server1!GEDeviceF650/LLN0/urcbMXA01/DatSet[RP]		STRING
Server1!GEDeviceF650/LLN0/urcbMXA01/GI[RP]		BOOL
Server1!GEDeviceF650/LLN0/urcbMXA01/IntgPd[RP]		UDINT
Server1!GEDeviceF650/LLN0/urcbMXA01/OptFlds[RP]		UDINT
Server1!GEDeviceF650/LLN0/urcbMXA01/Resv[RP]		BOOL
Server1!GEDeviceF650/LLN0/urcbMXA01/RptEna[RP]		BOOL
Server1!GEDeviceF650/LLN0/urcbMXA01/RptID[RP]		STRING
Server1!GEDeviceF650/LLN0/urcbMXA01/SqNum[RP]		USINT
Server1!GEDeviceF650/LLN0/urcbMXA01/TrgOps[RP]		UDINT
Server1!GEDeviceF650/MMXU1/Hz/mag.f[MX]		REAL
Server1!GEDeviceF650/MMXU1/PhV.phsA/cVal.ang.f[MX]		REAL
Server1!GEDeviceF650/MMXU1/PhV.phsA/cVal.mag.f[MX]		REAL
Server1!GEDeviceF650/MMXU1/PhV.phsB/cVal.ang.f[MX]		REAL
Server1!GEDeviceF650/MMXU1/PhV.phsB/cVal.mag.f[MX]		REAL
Server1!GEDeviceF650/MMXU1/PhV.phsC/cVal.ang.f[MX]		REAL
Server1!GEDeviceF650/MMXU1/PhV.phsC/cVal.mag.f[MX]		REAL
Server1!GEDeviceF650/MSQI1/SeqA.c1/mag.f[MX]		REAL
Server1!GEDeviceF650/MSQI1/SeqA.c2/mag.f[MX]		REAL
Server1!GEDeviceF650/MSQI1/SeqA.c3/mag.f[MX]		REAL
Server1!GEDeviceF650/XCBR1/Pos/Oper.ctlVal[CO]		BOOL
Server1!GEDeviceF650/XCBR1/Pos/stVal[ST]		UDINT



The \*/urcbMXA01/\* variables are for information only. The variables for the RCB attributes need not necessarily exist in the zenon project in order for reporting to work. The PLC also contains a data set GEDeviceF650/LLN0\$MMXU1\$MX with the following content.

Delete DataSet OK	
Member	Value
GEDeviceF650/MMXU1\$MX\$TotW	{ { f0.00000
GEDeviceF650/MMXU1\$MX\$TotVAr	{ { f0.00000
GEDeviceF650/MMXU1\$MX\$TotVA	{ { f0.00000
GEDeviceF650/MMXU1\$MX\$TotPF	{ { f1.00000
GEDeviceF650/MMXU1\$MX\$Hz	{ { f0.00000
GEDeviceF650/MMXU1\$MX\$PPV	{ { { { f0.00(
GEDeviceF650/MMXU1\$MX\$PhV	{ { { { f0.00
GEDeviceF650/MMXU1\$MX\$A	{ { { { f0.00
GEDeviceF650/MMXU1\$MX\$AuxV	{ { { f0.0000
GEDeviceF650/MMXU1\$MX\$BusHz	{ { f0.00000

This data set is assigned to RCB LLN0\$RP\$urcbMXA01 in the PLC. To do this, enter the name of the data set in the DatSet attribute of this RCB.



The RCBs LLN0\$RP\$urcbMXA01 and LLN0\$RP\$urcbMXB01 are activated when the driver starts (if they are still free).

Because there are no further suitable RCBs that have project variables in their datasets, the remaining RCBs are not used. If the project also contains a variable that is included in the data set GEDeviceF650/LLN0\$eveGGI01\$ST, this would mean the LLN0\$RP\$urcbSTA01 is also activated.

#### STATIC ASSIGNMENT

For static assignment, the Reporting Control Blocks that can be used is defined and fixed in the driver configuration - statically assigned RCB (on page 24). The driver attempts to activate all listed Reporting Control Blocks, regardless of its content.

If, in the driver configuration, a Dynamic Data Set was entered, the driver in the PLC assigns this data set to the RCB, by changing the value of the DatSet attribute of this block before the report is activated. If no Dynamic Data Set was entered, the data set pre-defined in the PLC is valid (just as with automatic assignment).



If a block was activated successfully, all data objects that are contained in its data set are no longer polled but are reported if a value is changed.

# 9.2 Buffered Reporting

For Buffered Reports, an IEC61850 server saves the changes in the time in which a connected client cannot be reached. If the client (the IEC850 driver) is online again (if the connection is resetablished, for example), the driver reads all changes and processes them; it creates omitted alarms, for example.

There is no automatic allocation for Buffered Reporting. The allocation of BRCBs to the driver is always static:

- Either using the driver configuration as described for static allocation with unbuffered reporting;
- Or for reasons of compatibility with older drivers that were used to configure the SCL file using the Report ID of the BRCBs (the Use Report-ID for RCB assignment should be activated in the driver configuration).

If the assignments are to be configured in the SCL file, the assigned report ID (RptID) of the BRCB must contain a string with the following nomenclature 'zenon\_Computername\_\*'; for example: zenon\_MyPC\_Measurands1. The driver thwen uses the data set of RCB, which has a fixed link to the SCL file. A Buffered Report can only be activated by a host. To prevent the driver from activating all Buffered Reports and blocking access for other IEC61850 clients, they must be explicitly defined in the driver configuration (on page 9).

Irrespective of this, the basic behavior is the same as with Unbuffered Reporting.

### BRCB BUFFER

- ► The driver automatically deletes the content of the BRCB buffer if the connection was only established after Runtime has been started.
- ► If the buffer is to be retained,
  - You must activate the Do not purge BRCB buffer at start option in the basic settings (on page 15);
  - The last received Entry ID for the BRCB must be present.



If the connection is lost and re-established without Runtime being started again, the buffer is retained and the data is collected.

The driver saves the last received entry ID for each BRCB every minute or if the driver is closed in a fle in the Runtime data directory.

#### **BUFFERED REPORTS AND ZENON REDUCNDANCY**

Because zenon supports redundancy (see zenon network) and a BRCB can only be activated once by a PC, you must define separately, for the project server and the standby server, which PC is to activate which report. The driver is started on bothe the server and the standby and checks the driver configuration (Host name property), to see if it finds a configuration that corresponds to the computer names that is running on Runtime.

For this reason, you need two copies of the Buffered Report in the event of a redundant configuration; one for the driver that runs on the project server and and one for the driver that runs on the standby server. You also create two entries in the RCB assignment (on page 24) list in the driver configuration. One with the computer name of the project server and one with the computer name of the standby server. When entering the configuration of the project server, the first copy of the BRCB isentered and the second copy when entering the configuration of the standby-server.

# Attention

Even if you do not use redundancy, you must nevertheless define which reports are used for the PC (Host name property) in the driver configuration on which zenon Runtime runs.

# 9.3 Dynamic Data Sets

To use Dynamic Data Sets, the two sservices CreateDataSet() and DeleteDataSet() must be supported by the IEC 61850 server awerden und the DatSet attribute must be able to be written to in the Reporting Control Blocks (SCL: ReportSettings.datSet="Dyn"). When configuring, you must take into account all possible server restrictions such as the maximum number of elemnts in the data set (SCL: DynDataSet.max und maxAttributes).

Dynamic Data Sets lists data objects and are configured in the dynamic DataSet configuration (on page 26) dialog. They can be used for Unbuffered Reporting and for Buffered Reporting, but only if static assignments with RCBs were configured in the driver configuration - client configuration (on page 22).

If, in the driver configuration, a Dynamic Data Set was entered for an RCB, the driver in the PLC assigns this data set to the RCB, by changing the value of the DatSet attribute before the Report is activated.

The creation of a dynamic data set can be checked in the Diagnosis Viewer (on page 72):

Diagnosis Viewer - [Diag	gViewer2]			Adverti .
File Settings View	Windows He	lp		
😹 🔂 🗈  🖬 📑 📑	7 7 6 6	66	D 😑 😑	- 📲 💁
∠ Timestamp	Message level	Module	Name of source files	General text
	MSG			
06.07.2011 13:00:51,794080	MSG	DRV	.\IEC850.cpp	Trying to create dataset LLN0\$ZENON_CDSBG195_MY on device KSGL
06.07.2011 13:00:51,809680	MSG	DRV	.\IEC850.cpp	Dataset LLN0\$ZENON_CDSBG195_MY created sucessfully
06.07.2011 13:00:51,825280	MSG	DRV	.\IEC850.cpp	Trying to enable LLN0\$BR\$brcbA01 on device KSGL1
06.07.2011 13:00:51,840881	MSG	DRV	.\IEC850.cpp	Sucessfully enabled LLN0\$BR\$brcbA01 on device KSGL1

Before the statically assigned Reporting Control Blocks is activated, all dynamic data sets that are linked to them via driver configuration - client configuration (on page 22) are compared to those on the IEC 61850 server. All Dynamic Data Sets available on the server that are not (or no longer) required are deleted. All Dynamic Data Sets not available on the server are created and all data sets that are available on both sides are checked to see that they have the same content. If the content is different, they are deleted and created again. However, the driver only deletes the data sets that it has created itself. If the driver cannot delete a data set, the asigned RCB is activated with the pre-existing data set.

The deletion of a dynamic data set can be checked in the Diagnosis Viewer (on page 72):

Diagnosis Viewer - [Diag	Windows He	le .		ALCONT OF A
	Windows He	<b>1</b>	D 😑 🗑	- 📲 💁
∠ Timestamp	Message level	Module	Name of source files	General text
	MSG			
06.07.2011 13:29:04,842387	MSG	DRV	.\IEC850.cpp	Trying to delete dataset LLN0SZENON_CDSBG195_MY on device KSGL
06.07.2011 13:29:04,857987	MSG	DRV	.\IEC850.cpp	Dataset LLN0\$ZENON_CDSBG195_MY deleted sucessfully
06.07.2011 13:29:04.889188	MSG	DRV	.\IEC850.cpp	Trying to enable LLN0\$RP\$urcbA01 on device KSGL1

The dynamic data sets that were created in Runtime (using the CreateDataSet() service) receive a client-depenent name on the server, in order for them to be easily found again. The nomenclature of the Dynamic Data Set name is as follows:

LLN0\$ZENON hostname datasetname. Here:

Hostname is the computer name of the clients is as defined in the driver configuration - client configuration (on page 22) under Hostname and datasetname is the name that was defined iin the driver configuration - Dynamic DataSet configuration (on page 24).




If no Dynamic Data Set was entered in the RCB configuration of the driver, the pre-defined data set in the PLC is not valid.

# **10. Driver commands**

This chapter describes standard functions that are valid for most zenon drivers. Not all functions described here are available for every driver. For example, a driver that does not, according to the data sheet, support a modem connection also does not have any modem functions.

Driver commands are used to influence drivers using zenon; start and stop for example. The engineering is implemented with the help of function **Driver** commands. To do this:

- create a new function
- ► select Variables -> Driver commands
- ▶ The dialog for configuration is opened

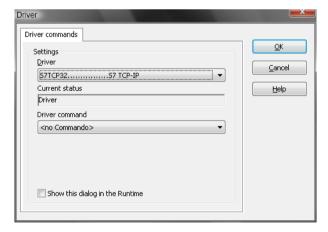

Parameters	Description
Drivers	Drop-down list with all drivers which are loaded in the project.
Current state	Fixed entry which has no function in the current version.
Driver commands	Drop-down list for the selection of the command.
> Start driver (online	Driver is reinitialized and started.



mode)	
<pre>Stop driver (offline mode)</pre>	Driver is stopped. No new data is accepted. Note: If the driver is in offline mode, all variables that were created for this driver receive the status switched off (OFF; Bit 20).
Driver in simulation mode	Driver is set into simulation mode. The values of all variables of the driver are simulated by the driver. No values from the connected hardware (e.g. PLC, bus system,) are displayed.
Driver in hardware mode	Driver is set into hardware mode. For the variables of the driver the values from the connected hardware (e.g. PLC, bus system,) are displayed.
Driver-specific command	Enter driver-specific commands. Opens input field in order to enter a command.
<ul> <li>Activate driver write set value</li> </ul>	Write set value to a driver is allowed.
Deactivate driver write set value	Write set value to a driver is prohibited.
Establish connection with modem	Establish connection (for modem drivers) Opens the input fields for the hardware address and for the telephone number.
Disconnect from modem	Terminate connection (for modem drivers)
Show this dialog in the Runtime	The dialog is shown in Runtime so that changes can be made.

# **DRIVER COMMANDS IN THE NETWORK**

If the computer, on which the driver command function is executed, is part of the zenon network, additional actions are carried out. A special network command is sent from the computer to the project server, which then executes the desired action on its driver. In addition, the Server sends the same driver command to the project standby. The standby also carries out the action on its driver.

This makes sure that Server and Standby are synchronized. This only works if the Server and the Standby both have a working and independent connection to the hardware.



# **11. Error analysis**

Should there be communication problems, this chapter will assist you in finding out the error.

# 11.1 Analysis tool

All zenon modules such as Editor, Runtime, drivers, etc. write messages to a joint log file. To display them correctly and clearly, use the Diagnosis Viewer (main.chm::/12464.htm) program that was also installed with zenon. You can find it under *Start/All programs/zenon/Tools 7.00 -> Diagviewer*.

zenon driver log all errors in the log files. The default folder for the log files is subfolder Log in directory ProgramData, example: C:\ProgramData\zenon \zenon700\LOG for zenon version 7.00 SPO. Log files are text files with a special structure.

Attention: With the default settings, a driver only logs error information. With the Diagnosis Viewer you can enhance the diagnosis level for most of the drivers to "Debug" and "Deep Debug". With this the driver also logs all other important tasks and events.

In the Diagnosis Viewer you can also:

- ▶ follow currently created entries live
- customize the logging settings
- change the folder in which the log files are saved

#### Hints:

- 1. In Windows CE even errors are not logged per default due to performance reasons.
- 2. The Diagnosis Viewer displays all entries in UTC (coordinated world time) and not in local time.
- 3. The Diagnosis Viewer does not display all columns of a log file per default. To display more columns activate property Add all columns with entry in the context menu of the column header.
- 4. If you only use Error logging, the problem description is in column Error text. For other diagnosis level the description is in column General text.



- 5. For communication problems many drivers also log error numbers which the PLC assigns to them. They are displayed in Error text and/or Error code and/or Driver error parameter (1 and 2). Hints on the meaning of error codes can be found in the driver documentation and the protocol/PLC description.
- 6. At the end of your test set back the diagnosis level from Debug Or Deep Debug. At Debug and Deep Debug there are a great deal of data for logging which are saved to the hard drive and which can influence your system performance. They are still logged even after you close the Diagnosis Viewer.

#### 💡 Info

You can find further information on the Diagnosis Viewer in the Diagnose Viewer (main.chm::/12464.htm) chapter.

# 11.2 Check list

Most problems arise if some basic things are overlooked (such as network problems, firewall) or rules are not followed (such as addressing, driver-specific functions) or from the IEC 61850 standard itself. Check your ssytem point for point using the driver documentation; for example driver configuration, addressing of the variables in zenon projects, report settings in the control unit, etc.

Check most of all:

- ▶ Is the device (IEC 61850 server) connected to the power grid and ready for use?
  - Can a TCP connection to the device be created (check this using a 'ping') via the defined port (check this via Telnet)?
  - Is communication between this device and another IEC 61850 client possible?
  - Is the driver in hardware mode and not in simulation mode?
- Have you evaluated errors that are logged in the log file?
  - Which errors occurred?
  - Was the diagnosis logging at least activated for the error level for all driver modules?



- Have you taken into account that the times in the Diagnosis Viewer are always UTC?
- Is the Diagnose Viewer set so that all registered and all columns are diplayed with the content (filtering)?
- Variable addressing:
  - Do all variables have the right addresses?
  - Are the names (or identifications) of the variables valid (SERVER!LD/LN/DO/DA[FC])?
  - Do the variables have the right driver object type, data type and value range?
- General information and reporting:
  - Is at least one variable from Logical Device polled?
  - Doe the RCB contain the whole data objects (not just the data attributes \*/stVal, but also \*/q and \*/t)?
  - Does the max. auto used URCBs property have the correct value?
  - Is reporting available in the device?
  - If defined in the SCL file: Does the report ID of Buffered RCB contain the string "zenon\_Computername\*"?
  - For Dynamic Data Set: Is the data set describable in the Reporting Control Block?
  - Have you taken ini account limitaitons of the device, such as the maximum number of elemtents in the data set etc. ?

# 12. Appendix A - Description of the 'Functional Constraints' (FCs):

FC	Semantics	Description
ST	Status information	Stands for status information, the value of which can be read, replaced, reported and logged, but not written.
MX	Measurands (analogue values)	Stands for status information, the measured size of which can be read, replaced, reported and logged, but not written.
со	Control	represents a control information whose value may be



		operated (control model) and read.
SP	Setpoint	represent a set-point information whose value may be controlled (control model) and read.
SV	Substitution	represents a substitution information whose value may be written to substitute the value attribute and read.
CF	Configuration	represents a configuration information whose value may be written and read.
DC	Description	represents a description information whose value may be written and read
EX	Extended definition	represents an extension information providing a reference to a name space. Extensions are used in conjunction with extended definitions of LNs, DATA, and DataAttributes in 61850-7-3 and IEC 61850- 7-4. Value may be read.

# 13. Appendix B - Abbreviations for data object/data attribute

Term	Description
f	floating point (analog value)
i	integer (analog value)
d	Visible String(255)
q	Quality
t	Timestamp



А	Current
Acs	Access
ACSI	Abstract Communication Service Interface
Acu	Acoustic
Age	Ageing
Alm	Alarm
Amp	Current non phase related
То	Analogue
Ang	Angle
Auth	Authorization
Auto	Automatic
Aux	Auxiliary
Av	Average
В	Bushing
Bat	Battery
Beh	Behavior
Bin	Binary
Blk	Block, blocked
Bnd	Band
Во	Bottom
Cancel	Cancel
Сар	Capability
Сарас	Capacitance
Car	Carrier



СВ	Circuit Breaker
CDC	Common Data Class
CE	Cooling Equipment
Cf	Crest factor
Cfg	Configuration
CG	Core Ground
Ch	Channel
Cha	Charger
Chg	Change
Chk	Check
Chr	Characteristic
Cir	Circulating
Clc	Calculate
Clk	Clock, clockwise
Cls	Close
Cnt	Counter
Col	Coil
Cor	Correction
Crd	Coordination
Crv	Curve
СТ	Current Transducer
Ctl	Control
Ctr	Center
Сус	Cycle



Dea	Dead
Den	Density
Det	Detected
DExt	De-excitation
Diag	Diagnostics
Dif	Differential, difference
Dir	Direction
Dis	Distance
DI	Delay
Dlt	Delete
Dmd	Demand
Dn	Down
DPCSO	Double point controllable status output
DQ0	Direct, Quadrature, and zero axis quantities
Drag	Drag hand
Drv	Drive
DS	Device State
Dsch	Discharge
Dur	Duration



EC	Earth Coil
EE	External Equipment
EF	Earth Fault
Ena	Enabled
Eq	Equalization, Equal
Ev	Evaluation
Ex	External
Exc	Exceeded
Excl	Exclusion
Ext	Excitation
FA	Fault Arc
Fact	Factor
Fan	Fan
Flt	Fault
Flw	Flow
FPF	Forward Power Flow
Fu	Fuse
Fwd	Forward
Gen	General
Gn	Generator
Gnd	Ground
Gr	Group
Grd	Guard
Gri	Grid



Н	Harmonics (phase related)
H2	Hydrogen
H2O	Water
На	Harmonics (non phase related)
Hi	High, highest
НР	Hot point
Hz	Frequency
IEEE	Institute of Electrical and Electronic Engineers
Imb	Imbalance
Imp	Impedance non phase related
In	Input
Ina	Inactivity
Incr	Increment
Ind	Indication
Inh	Inhibit
Ins	Insulation
Int	Integer
ISCSO	Integer status controllable status output



Km	Kilometer
R	Lower
LD	Logical Device
LDC	Line Drop Compensation
LDCR	Line Drop Compensation Resistance
LDCX	Line Drop Compensation Reactance
LDCZ	Line Drop Compensation Impedance
LED	Light Emitting Diode
Len	Length
Lev	Level
Lg	Lag
Lim	Limit
Lin	Line
Liv	Live
Lo	Low
LO	Lockout
Loc	Local
Lod	Load, loading
Lok	Locked
Los	Loss
Lst	List
LTC	Load Tap Changer



М	minutes
M/0	Data Object is Mandatory or Optional
Max	Maximum
Mem	Memory
Min	Minimum
Mod	Mode
Mot	Motor
Ms	Milliseconds
Mst	Moisture
MT	Main Tank
N	Neutral
Nam	Name
Net	Net sum
Ng	Negative
Nom	Nominal, Normalizing
Num	Number
Ofs	Offset
Ор	Operate, Operating
Oper	Operate*
Opn	Open
Out	Output
Ov	Over, Override, Overflow
Ра	Partial
Out Ov	Output



Par	Parallel
Pct	Percent
Per	Periodic
PF	Power Factor
Ph	Phase
Phy	Physical
Pls	Pulse
Plt	Plate
Pmp	Pump
Ро	Polar
Pol	Polarizing
Pos	Position
POW	Point on wave switching
РР	Phase to phase
PPV	Phase to phase voltage
Pres	Pressure
Prg	Progress, in progress
Pri	Primary
Pro	Protection
Ps	Positive
Pst	Post
Pwr	Power
Qty	Quantity
R	Raise



RO	Zero sequence resistance
R1	Positive sequence resistance
Rat	Winding ratio
Rcd	Record, recording
Rch	Reach
Rcl	Reclaim
Re	Retry
React	Reactance; Reactive
Rec	Reclose
Red	Reduction
Rel	Release
Rem	Remote
Res	Residual
Ris	Resistance
RI	Relation, relative
Rms	Root mean square
Rot	Rotation, Rotor
Rs	Reset, Resetable
Rsl	Result
Rst	Restraint
Rsv	Reserve
Rte	Rate
Rtg	Rating
Rv	Reverse
Rx	Receive, received



S1	Step one
S2	Step two
SBO	Select before operate*
SBOw	Select with value*
Sch	Scheme
SCO	Supply change over
SCSM	Specific Communication Service Mapping
Sec	Security
Seq	Sequence
Set	Setting
Sh	Shunt
Spd	Speed
SPI	Single Pole
SPCSO	Single point controllable status output
Src	Source
St	Status
Stat	Statistics
Stop	Stop
Std	Standard
Str	Start
Sup	Supply
Svc	Service
Sw	Switch
Swg	Swing
Syn	Synchronization



Тар	Тар
Td	Total distortion
Tdf	Transformer derating factor
Test	Test
Thd	Total Harmonic Distortion
Thm	Thermal
TiF	Telephone influence factor
Tm	Time
	• Tmh = Time in h
	• Tmm = Time in min
	• Tms = Time in s
	• Tmms = Time in ms
Ттр	Temperature (°C)
То	Тор
Tot	Total
ТР	Three pole
Tr	Trip
Trg	Trigger
Ts	Total signed
Tu	Total unsigned
Тх	Transmit, transmitted
Туре	Туре
Un	Under



V	Voltage
VA	Volt Amperes
Vac	Vacuum
Val	Value
VAr	Volt Amperes Reactive
Vlv	Valve
Vol	Voltage non phase related
VT	Voltage Transducer
W	Active Power
Wac	Watchdog
Watt	Active Power non phase related
Wei	Weak End Infeed
Wh	Watt hours
Wid	Width
Win	Window
Wrm	Warm
X0	Zero sequence reactance
	Positive sequence reactance



Z	Impedance
Z0	Zero sequence impedance
Z1	Positive sequence impedance
Zer	Zero
Zn	Zone
Zro	Zero sequence method

\* SBO,SBOw,Oper, and Cancel are defined in IEC 61850-8-1:

Data attribute name	Semantics
SBO	Select – returns ACSI name of control
SBOw	SelectWithValue – receives service parameters
Oper	Operate – receives service parameters and control values
Cancel	Cancel – receives service parameters and control values

# 14. Appendix C - Conformance statement

The Confirmance Statement of the iec850 driver for the IEC61850 protocol is in English only.

# **14.1** Protocol implementation conformance statement (PICS)

#### **BASIC ACSI CONFORMANCE STATEMENT**

Client /	Server /	Value /	
subscriber	publisher	comments	



<b>Client-serve</b>	r roles			
B11	Server side (of TWO-PARTY- APPLICATION-ASSOCIATION)	-	C1	
B12	Client side of (TWO-PARTY-APPLICATION- ASSOCIATION)	C1	-	supported
SCSMs supp	orted		I	
B21	SCSM: IEC 61850-8-1 used			supported
B22	SCSM: IEC 61850-9-1 used			not supported
B23	SCSM: IEC 61850-9-2 used			not supported
B24	SCSM: other			not supported
Generic sub	station event model (GSE)		I	
B31	Publisher side	-	0	
B32	Subscriber side	0	-	not supported
Transmissio	n of sampled value model (SVC)		I	
B41	Publisher side	-	0	
B42	Subscriber side	0	-	not supported
C1 – shall be '	'M' if support for LOGICAL-DEVICE model has been	declared.	I	
O – Optional				
M – Mandato	ry			

## ACSI MODELS CONFORMANCE STATEMENT

Client /	Server /	Value /	
subscriber	publisher	comments	



If Server si	ide (B11) is supported			
M1	Logical device	C2	C2	
M2	Logical node	C3	C3	
M3	Data	C4	C4	
M4	Data set	0	0	
M5	Substitution	0	0	
Reporting		I	I	
M7	Buffered report control	0	0	
M7-1	sequence-number			
M7-2	report-time-stamp			
M7-3	reason-for-inclusion			
M7-4	data-set-name			
M7-5	data-reference			
M7-6	buffer-overflow			
M7-7	entryID			
M7-8	BufIm			
M7-9	IntgPd			
M7-10	GI			
M8	Unbuffered report control	0	0	
M8-1	sequence-number			
M8-2	report-time-stamp			
M8-3	reason-for-inclusion			
M8-4	data-set-name			
M8-5	data-reference			
M8-6	BufIm			
M8-7	IntgPd			
M8-8	GI			



Logging				
M9	Log control	0	0	
M9-1	IntgPd			
M10	Log	0	0	
M11	Control	М	М	
If GSE (B31	/B23) is supported	I		
	GOOSE	0	0	
M12-1	entry-ID			
M12-2	DataRefInc			
M13	GSSE	0	0	
		Client /	Server /	Value /
		subscriber	publisher	comments
If SVC (B41	/B42) is supported		-	-
M14	Multicast SVC	0	0	
M15	Unicast SVC	0	0	
M16	Time	М	M	Time source with required accuracy shal be available
M17	File Transfer	0	0	
C2 – shall be	'M' if support for LOGICAL-NODE mo	odel has been declared		
C2 – shall he	'M' if support for DATA model has be	een declared		
		ition Report Log-Control or	Time model ha	s been declared
	'M' if support for DATA-SET, substitu			

O - Optional

## ACSI SERVICE CONFORMANCE STATEMENT



ACSI Service Conformance		AA:	Client /	Server /	Comments
		TP/MC	subscriber	publisher	
Serve	r (Clause 6)				
S1	ServerDirectory	ТР		м	
Applie	cation association (Clause 7)	I	1		
S2	Associate		м	м	supported
S3	Abort		M	М	supported (on TCP/IP)
S4	Release		м	м	not supported
Logica	al device (Clause 8)	·			
S5	LogicalDeviceDirectory	ТР	м	м	supported
Logica	al node (Clause 9)		1	1	1
S6	LogicalNodeDirectory	ТР	м	м	supported
S7	GetAllDataValues	ТР	0	м	not supported
Data	(Clause 10)		1	1	
S8	GetDataValues	ТР	м	м	supported
S9	SetDataValues	ТР	0	0	supported
S10	GetDataDirectory	ТР	0	М	supported
S11	GetDataDefinition	ТР	0	М	not supported
Data s	set (Clause 11)			1	1
S12	GetDataSetValues	ТР	0	м	not supported
S13	SetDataSetValues	ТР	0	0	not supported
S14	CreateDataSet	ТР	0	0	supported
S15	DeleteDataSet	ТР	0	0	supported
S16	GetDataSetDirectory	ТР	0	0	supported
Subst	itution (Clause 12)	1	1	1	1



S17	SetDataValues	ТР	М	М	supported
Setting	g group control (Clause 13)	· · · · · ·			
S18	SelectActiveSG	ТР	0	0	not supported
S19	SelectEditSG	ТР	0	0	not supported
S20	SetSGValues	ТР	0	0	not supported
S21	ConfirmEditSGValues	ТР	0	0	not supported
S22	GetSGValues	ТР	0	0	not supported
S23	GetSGCBValues	ТР	0	0	not supported
Repor	ting (Clause 14)			I	
Buffer	ed report control block (BRCB)				
S24	Report	ТР	C6	C6	supported
S24-1	data-change (dchg)				
S24-2	qchg-change (qchg)				
S24-3	data-update (dupd)				
S25	GetBRCBValues	ТР	C6	C6	supported
S26	SetBRCBValues	ТР	C6	C6	supported
Unbuf	fered report control block (URCB)			i	I
S27	Report	ТР	C6	C6	supported
S27-1	data-change (dchg)				
S27-2	qchg-change (qchg)				
S27-3	data-update (dupd)				
S28	GetURCBValues	ТР	C6	C6	supported
S29	SetURBCValues	ТР	C6	C6	supported
C6 - sha	all declare support for at least one (BR	CB or URCB)		1	1
Loggin	g (Clause 14)				
Log co	ntrol block				
S30	GetLCBValues	ТР	м	М	not supported



S31	SetLCBValues	ТР	0	М	not supported
Log					
S32	QueryLogByTime	ТР	C7	М	not supported
S33	QueryLogAfter	ТР	С7	М	not supported
S34	GetLogStatusValues	ТР	М	м	not supported
C7 – sh	C7 – shall declare support for at least one (QueryLogByTime or QueryLogAfter)				



	Service Conformance	AA: TP/MC	Client/ subscriber	Server/ publisher	Comments	
Generic substation event model (GSE) (Clause 14.3.5.3.4)						
GOC	DSE-CONTROL-BLOCK					
S35	SendGOOSEMessage	MC	C8	C8	not supported	
S36	GetGoReference	ТР	0	C9	not supported	
S37	GetGOOSEElementNumber	ТР	0	C9	not supported	
S38	GetGoCBValues	ТР	0	0	not supported	
S39	SetGoCBValues	ТР	0	0	not supported	
GSSI	E-CONTROL-BLOCK	I	1	1		
S40	SendGSSEMessage	MC	C8	C8	not supported	
S41	GetGsReference	ТР	0	C9	not supported	
S42	GetGSSEElementNumber	ТР	0	C9	not supported	
S43	GetGsCBValues	ТР	0	0	not supported	
S44	SetGsCBValues	ТР	0	0	not supported	
	SetGsCBValues hall declare support for at least one (SendGOO				not supported	
C-8 s		SEMessage o			not supported	
C-8 s C-9 s	hall declare support for at least one (SendGOO	SEMessage o			not supported	
C-8 s C-9 s Tran	hall declare support for at least one (SendGOO hall declare support if TP association is availab	SEMessage o			not supported	
C-8 s C-9 s Tran	hall declare support for at least one (SendGOO hall declare support if TP association is availab smission of sampled value model (SVC) (C	SEMessage o			not supported	
C-8 s C-9 s Tran Mult	hall declare support for at least one (SendGOO hall declare support if TP association is availab smission of sampled value model (SVC) (C ticast SVC	SEMessage o	r SendGSSEMes	sage)		
C-8 s C-9 s <b>Tran</b> <b>Mul</b> i S45 S46	hall declare support for at least one (SendGOO hall declare support if TP association is availab smission of sampled value model (SVC) (C ticast SVC SendMSVMessage	SEMessage o	r SendGSSEMes	sage)	not supported	
C-8 s C-9 s <b>Tran</b> <b>Mul</b> S45 S46 S47	hall declare support for at least one (SendGOO hall declare support if TP association is availab smission of sampled value model (SVC) (C ticast SVC SendMSVMessage GetMSVCBValues	SEMessage o	C10	sage) C10 O	not supported	
C-8 s C-9 s <b>Tran</b> <b>Mul</b> S45 S46 S47	hall declare support for at least one (SendGOO hall declare support if TP association is availab smission of sampled value model (SVC) (C ticast SVC SendMSVMessage GetMSVCBValues SetMSVCBValues	SEMessage o	C10	sage) C10 O	not supported	
C-8 s C-9 s <b>Tran</b> <b>Mul</b> S45 S46 S47 <b>Unic</b>	hall declare support for at least one (SendGOO hall declare support if TP association is availab smission of sampled value model (SVC) (C ticast SVC SendMSVMessage GetMSVCBValues SetMSVCBValues rast SVC	SEMessage o le Clause 16) MC TP TP	r SendGSSEMes C10 O	sage) C10 O O	not supported not supported not supported	



Control (17.5.1)					
S51	Select		М	0	supported
S52	SelectWithValue	ТР	М	0	supported
S53	Cancel	ТР	0	0	supported
S54	Operate	ТР	М	М	supported
S55	Command-Termination	ТР	М	0	supported
S56	TimeActivated-Operate	ТР	0	0	not supported
File 1	Fransfer (Clause 20)				
S57	GetFile	ТР	0	М	supported
S58	SetFile	ТР	0	0	not supported
S59	DeleteFile	ТР	0	0	supported
S60	GetFileAttributeValues	ТР	0	М	supported

ACSI Service Conformance		AA:	Client /	Server /	Comments
		TP/MC	subscriber	publisher	
Time	e (5.5)				
T1	Time resolution of internal clock				Nearest negative power of 2 in seconds
T2	Time accuracy of internal clock				ТО
					T1
					Т3
					Τ4
					Т5



Т3	Supported TimeStamp resolution	Nearest value of 2**-n in
		seconds according to
		5.5.3.7.3.3

# PROTOCOL IMPLEMENTATION CONFORMANCE STATEMENT (PICS) FOR A-PROFILE SUPPORT

A-Profile Shortcut	Profile description	Client	Server	Value/Comment
A1	Client/Server A-Profile	C1	C1	Client supported
A2	GOOSE/GSE Management A-Profile	C2	C2	not supported
A3	GSSE A-Profile	C3	C3	not supported
A4	TimeSync A-Profile	C4	C4	not supported

C1 Shall be 'M' if support for any service specified in Table 2 are declared within the ACSI basic conformance statement.

C2 Shall be 'M' if support for any service specified in Table 6 are declared within the ACSI basic conformance statement.

C3 Shall be 'M' if support for any service specified in Table 9 are declared within the ACSI basic conformance statement.

C4 Support for at least one other A-Profile shall be declared (e.g. in A1-A3) in order to claim conformance to IEC 61850-8-1.

#### **PICS FOR T-PROFILE SUPPORT**

T-Pro	ofile Description	Client	Server	Value/Comment		
T1	TCP/IP T-Profile	C1	C1	Client supported		
Т2	OSI T-Profile	C2	C2	not supported		
Т3	GOOSE/GSE T-Profile	С3	C3	not supported		
Т4	GSSE T-Profile	C4	C4	not supported		
Т5	TimeSync T-Profile	0	0	not supported		
C1 Sł	C1 Shall be 'm' if support for A1 is declared. Otherwise, shall be 'i'.					

C2 Shall be 'o' if support for A1 is declared. Otherwise, shall be 'i'.



C3 Shall be 'm' if support for A2 is declared. Otherwise, shall be 'i'.

C4 Shall be 'm' if support for A3 is declared. Otherwise, shall be 'i'.

i: out-of-scope. The implementation of the item is not within the scope of this standard.

# 14.2 Model implementation conformance statement (MICS)

Attributes of type 'ARRAY OF' are not supported. Everything else - logical nodes, common data classes and data attribute types - as defined in IEC 61850-7-3 and IEC 61850-7-4 - is supported.

# **15. Appendix D - PIXIT for COPA-DATA IEC61850 Client**

#### 💡 Info

The PIXIT document for the certification test of the IEC850 driver is only available in English.

PIXIT based on a template provided by KEMA.

#### INTRODUCTION

This document specifies the protocol implementation extra information for testing (PIXIT) of the IEC 61850 interface in the client system: "*COPA-DATA IEC850 - Driver for IEC61850 protocol*" with version "6.51.0.4101", further referred to as "Client".

Together with the PICS and the MICS (see the client documentation) the PIXIT forms the basis for a conformance test according to IEC 61850-10.

The following chapters specify the PIXIT for each applicable ACSI service model as structured in IEC 61850-10 and the "Conformance Test Procedures for Client System with IEC 61850-8-1 interface" *by KEMA*.



#### PIXIT FOR CONFIGURATION

Description	Value / Clarification
Describe how the client handles nameplate configuration revision mismatches	The Client reads out data model at each associate and therefore does not need to check configuration revision.
Describe how the client handles report control block configuration revision mismatches	<i>RCB</i> configuration is read out at each associate.
<additional items=""></additional>	The Client does not use items of pre-defined data model until reading them from data model from an online server. The SCL file is used only by offline import of variables to HMI project in the zenon Editor for pre- configuration. Please refer to client documentation for more details.

#### PIXIT FOR ASSOCIATION MODEL

Description	Value / Clarification
Guaranteed number of servers that can set-up an association simultaneously (one association per server)	Per design: 65535 Tested: 50
Lost connection detection time range (default range of TCP_KEEPALIVE is 1 – 20 seconds)	The current TCP/IP timeout of Operating System The connection loss to LD is only detected if at least one its attribute is currently polled. Please refer Client documentation for more details
Lost (abort) connection retry time	30 seconds
Is authentication supported	N
What is the maximum and minimum MMS PDU size	Max MMS PDU size 65535 Min MMS PDU size dependent of max. DO
What is the typical startup time after a power supply interrupt	The Client works only together with the zenon Runtime and both are Windows applications.
	1. Windows does not guarantee the files will be not corrupted after power failure. Please use an UPS to prevent loss of data stored on HDD.
	2. There is no typical start-up time for the Client as the start-up time of the Runtime depends of HMI project design and PC performance. In practice, the Client opens TCP/IP session to a server after few (1-4) seconds since application start.



#### PIXIT FOR SERVER MODEL

Description	Value / Clarification
Maximum object identification length	LD: 128 chars/octets LN: 16 chars/octets DO: 128 chars/octets DA: 128 chars/octets FC: 2 chars/octets
Does client support autodescription	In the Runtime the Client reads data model only via MMS. Then the Client does not use data not responded via MMS by association. In the HMI Editor (by pre-configuration of the HMI project) the Client can read the data model from SCL file (off-line import) or from the server via MMS (on-line import) or data can be configured manually (variable creation). Please refer to HMI documentation for more details.
What analogue value (MX) quality bits are used in the client	Y Good, Y Invalid, Y Reserved, Y Questionable Y Overflow Y Overflow Y OutofRange Y BadReference Y Oscillatory Y Failure Y Oscillatory Y Failure Y OldData Y Inconsistent Y Inaccurate Y Process Y Substituted Y Test Y OperatorBlocked
Which status value (ST) quality bits are used in the client	Y Good, Y Invalid, Y Reserved, Y Questionable Y BadReference Y Oscillatory Y Failure Y OldData Y Inconsistent Y Inaccurate Y Process Y Substituted



	Y Test Y OperatorBlocked	
Describe how to view/display quality values	<ol> <li>1.zenon Status Bits by stVal variable in HMI (only selected bits.</li> <li>Please refer Client documentation for more details.),</li> <li>2.the value of */q variable in HMI, if created</li> </ol>	
Describe how to force a SetDataValues request	Set value to the variable created in HMI - mirroring an attribute. Please refer HMI documentation for more details.	
Describe how to force a GetAllDataValues request	not used	
Describe how the client behaves in case of:		
GetDataDefinition response-	I-Bit* + log entry	
GetLogicalDeviceDirectory response-	I-Bit* + log entry	
GetAllDataValues response-	<ul> <li>not supported</li> </ul>	
GetDataValues response-	I-Bit* + log entry	
SetDataValues response-	▶ log entry	
	*Status bit INVALID of variables mirroring DO/DA. Please refer to HMI documentation for more details.	

#### PIXIT FOR DATA SET MODEL

Description	Value / Clarification
Describe how to force a GetDataSetValues request	not used
Describe how to force a SetDataSetValues request	not used
Describe how to force a DeletaDataSet request	would be done automatically according Client configuration for Dynamic Data Sets. Please refer client documentation for more details.
Describe how the client handles following dataset mismatches between the SCL and the data sets exposed via MMS:	SCL file is not used in the Client during communication; it can be used to pre-configure the project in HMI
1. new dataset element	
2. missing dataset element	



3. Reordered dataset members in a dataset of a different data type	
<ol> <li>Reordered dataset members in a dataset of the same data type</li> </ol>	
Describe how the client behaves in case of:	log entry + data will be polled (no reporting)
GetLogicalNodeDirectory(DATA-SET) response-	
GetDataSetDirectory response-	
Does the client support the creation of:	
persistent datasets	▶ Y
non-persistent datasets	▶ N
Describe how the client behaves in case of:	
CreateDataSetDirectory response-	log entry + data will be polled (not reported)
DeleteDataSet response-	log entry + old dataset used for reporting

#### PIXIT FOR SUBSTITUTION MODEL

Description	Value / Clarification
Describe how to substitute a value	For attributes with FC = SV (*/subEna, subQ, subID and e.g. subVal) create variables in the HMI project. Then first set values to be substituted (*/subVal, subQ, subID) and then set value TRUE to variable */subEna. Please refer to HMI documentation for more details about setting variable values
<additional items=""></additional>	There is a second method to make substitution only in HMI - e.g. when an IEC 61850 server does not support substitution. Any variable created in the HMI project can be turned to alternative value and that makes the HMI to simulate it. Please refer description of status bit ALT_VAL in the HMI manual for more details.

#### PIXIT FOR SETTING GROUP CONTROL MODEL



Describe how to change the active setting group	not supported
Describe how to get the actual setting group values	not supported
Describe how to edit setting group values	not supported
Describe how the client behaves in case of:	not supported
GetSGCBValues response-	
The configured SG is different than the actual setting group	

### PIXIT FOR REPORTING MODEL

Description	Value / Clarification
Does the client search for RCB in all logical nodes? When not specify the logical nodes	Y All logical nodes* or Y The following logical nodes**:
	▶ LLNO
	• RCBs assigned in the Client configuration
	BRCBs with RptID=zenon_computername_*
	* for automatic allocation of URCBs ** for static allocation of URCBs and BRCBs Please refer to client documentation for more details.
Which dynamic RCB attributes are/can be configured by the client	NRptIDYDataSetY (fix)*Optional fieldsY (fix)*Trigger conditionsNBuffer timeNIntegrity period*are pre-configured; cannot be changeddynamically.
Does the client support IED's with indexed and non-indexed report control blocks (RCB)	Y     Buffered RCB indexed       Y     Buffered RCB not indexed
	<ul><li>Y Unbuffered RCB indexed</li><li>Y Unbuffered RCB not indexed</li></ul>
The supported trigger conditions are	YintegrityYdata changeYquality changeYdata updateYgeneral interrogation



	Please refer to client documentation for more details.
The minimum required optional fields are	Nsequence-numberNreport-time-stampNreason-for-inclusionY*data-set-nameNdata-referenceNbuffer-overflowY*entryIDNconf-rev*by BRCB allocation the Client sends OptFlds =0100100000b. But the Client can receive reportswith any additional optional field, not only thisminimum; the optional fields not required are justignored
Does the client support segmented reports	N
Does the client support pre-assigned RCB	Y
Does the client support reported data set containing structured data objects or data attributes?	Yreporting of data objectsNreporting of data attributes
Describe how the client does respond when an URCB is already reserved	log entry + trying to use another one if dynamically allocated, fallback polling
Describe how the client does respond when a BRCB is already reserved	log entry + trying to use another one if dynamically allocated, fallback polling
Describe how the client does respond on a SetBRCBValues(EntryID) respond-	log entry
Describe how the client does respond when a report has an unknown: dataset, RptId, unexpected number of dataset entries, and/or unexpected data type format entries	Dataset directory and RCB configuration is read out at each associate
Describe how the client detect reporting configuration changes (mismatches). Does it check the "configuration revision" attributes and/or does it check the dataset members?	RCB configuration is read out at each associate, "configuration revision" doesn't care
Describe how to force the client to change the RCB buffer time	not used

#### PIXIT FOR LOGGING MODEL

Description Value / Clarification	
-----------------------------------	--



Does the client search for LCB in all logical nodes? when not specify the logical nodes	not supported
Describe how to change LOG and LCB attributes	not supported

#### PIXIT FOR GENERIC SUBSTATION EVENTS MODEL

Description	Value / Clarification
What elements of a subscribed GOOSE header are checked to decide the message is valid and the allData values are accepted?	not supported
Ignored = element value is not checked, message will be accepted	
SCL match = element value should match with the configuration, otherwise the GOOSE message will be ignored	
For the checked GOOSE header elements describe the checking conditions in more detail when necessary	not supported
What is the behavior when one subscribed GOOSE message isn't received or syntactically incorrect (missing GOOSE)	not supported
What is the behavior when one subscribed GOOSE message exceeds the previous time Allowed to Live (TAL)	not supported
What is the behavior when a subscribed GOOSE message is out-of-order	not supported
What is the behavior when a subscribed GOOSE message is duplicated	not supported
May the GOOSE data set contain structured data objects?	Y/N

#### PIXIT FOR CONTROL MODEL

Description	Value / Clarification
What control modes are supported	Y status-only Y direct-with-normal-security Y sbo-with-normal-security



	Y direct-with-enhanced-security Y sbo-with-enhanced-security For each use of */Oper.ctlVal[CO SP], the driver automatically checks actual */ctlModel[CF]. Depending on the value of that attribute, the corresponding control model is executed. Please refer client documentation for more details.
Is Time activated operate (operTm) supported	N
Is "operate-many" supported	N
Can the client set the test flag?	N
What check conditions can be set	<ul> <li>Y synchrocheck</li> <li>Y interlock-check</li> <li>There are two methods to set check conditions for Operate and SelectWithValue:</li> <li>1. Check condition can be predefined by setting a value to /Oper.Check[CO]. The actual value of this attribute is used for command service parameter;</li> <li>2. in the IEC 61850 interface (HMI): by setting in Command processing: Action its property Qualifier of Command (Please refer HMI Help)</li> </ul>
Which originator categories are supported and what is the originator identification?	orCat =2 (station control) orIdent ='zenon: nnn' where: nnn - computer name ' - apostrophe (CHAR(27))
Describe if and how the client sets/increments the ctlNum	for each use of any ctlVal[CO\SP] the Client increments* ctlNum from 0 to 127 and next turns to 0. * also by ctlModel=0 (no control possible)
What does the client when its receives a LastApplicationError and describe how to view the additional cause?	The Client gives possibility to create (pro /Oper structure) an internal "State Info" variable for received AddCause item value and variables ControlRun and ControlState showing current state and success/fail of command. These internal variables can be display and store in the HMI project. Please refer to client documentation for more details.
What does the client when it receives a Select, SelectWithValue or Operate respond negative ?	The Client sets corresponding values to intern variables ControlRun (-1=error) and AddCause. Optionally writes a LOG entry. Please refer to client documentation for more details.



Can the client change the control model via online services?	Y
What does the client when the ctlModel is not initialized in the SCL?	out of scope The Client does not read ctlModel from SCL, only via MMS
<additional items=""></additional>	

#### PIXIT FOR TIME AND TIME SYNCHRONIZATION MODEL

Description	Value / Clarification
Describes how to view the internal time & quality or how to expose the timestamp and timestamp quality via the IEC 61850 interface	The Client uses Windows time (local PC clock), thus the Client does not cooperate directly with any SNTP application. The Client does not send timestamp quality to control object.
What time quality bits are supported	N LeapSecondsKnown Y* ClockFailure Y* ClockNotSynchronized *only time quality bit received in t attribute
What is the behavior when the time synchronization signal/messages are lost	Not applicable
When is the quality bit "Clock failure" set?	The Client does not set any time quality bits, it supports receipt of ClockFailure
When is the quality bit "Clock not synchronized" set?	The Client does not set any time quality bits, it supports receipt of ClockNotSynchronised
<additional items=""></additional>	<ul> <li>The Client maps time quality bits received in t attribute into Status bits of variables responding same DO in the HMI project:</li> <li>ClockNotSynchronised <ul> <li>status bits T_INVAL &amp; T_EXTERN</li> </ul> </li> </ul>
	<ul> <li>ClockFailure         <ul> <li>status bits T_INVAL &amp; T_INTERN</li> <li>(and changes time attribute to HMI time).</li> </ul> </li> <li>Please refer to client documentation for more details.</li> </ul>

#### PIXIT FOR FILE TRANSFER MODEL

Description Value /	Clarification
---------------------	---------------



Describe when or how to force the client to request GetServerDirectory(FILE) and what it does with the responded filenames	The Client gives possibility to create two internal string variables: a Command and a Directory variable. Setting value of Command to: "DIR <filespec>" results with the name or list of files in Directory variable. Please refer to client documentation for more details.</filespec>
Does the client use a wildcard in the GetServerDirectory(FILE) request	No
Does the client support IED's that include the path in the file name in the GetServerDirectory(FILE) respond?	Y path included Y path not included Y list of files with a char separator
Does the client support IED's that use the file separator	N "/" Y "\"
What is the maximum file name size including path	OS limit, e.g. Windows Vista - 256 chars
Can the client read a file with size 0	Y
Are directory/file name case sensitive	Not case sensitive only Command value is case sensitive: "DIR <filespec>" or "GET <filespec>", the <filespec> is not case sensitive</filespec></filespec></filespec>
Maximum file size	per design 4 GB practical* 25 MB * transfer of 25 MB takes about 40 seconds, bigger transfers wasn't tested
Describe how the client behaves in case of: GetFileAttributes response-	Command Variable value changes to "DIR ERROR" (or "GET ERROR" for GetFile response-)
<additional items=""></additional>	For DeleteFile set Command variable value to "DEL <filespec>"</filespec>