

zenon driver manual

S7_NT

v.7.00



© 2012 Ing. Punzenberger COPA-DATA GmbH

All rights reserved.

Distribution and/or reproduction of this document or parts thereof in any form are permitted solely with the written permission of the company COPA-DATA. The technical data contained herein has been provided solely for informational purposes and is not legally binding. Subject to change, technical or otherwise.

Contents

1. Welcome to COPA-DATA help	5
2. S7_NT.....	5
3. S7_NT - Data sheet	5
4. Driver history	7
5. Requirements.....	7
5.1 PC	8
6. Configuration	9
6.1 Creating a driver.....	9
6.2 Settings in the driver dialog	10
6.2.1 General	11
6.2.2 Driver dialog S7	14
6.3 Definition of a driver in zenon	16
7. Configure PC station	17
8. Creating variables.....	23
8.1 Creating variables in the Editor.....	23
8.2 Addressing.....	27
8.3 Driver objects and datatypes	28
8.3.1 Driver objects	28
8.3.2 Mapping of the data types	30
8.4 Creating variables by importing	31
8.4.1 XML import of variables from another zenon project.....	32
8.4.2 DBF Import/Export	32
8.5 Driver variables	38
8.5.1 additional driver variables.....	43
9. Driver-specific functions	44
10. Driver commands	45

11. Error analysis.....	46
11.1 Analysis tool	47
11.2 Check list	48

1. Welcome to COPA-DATA help

GENERAL HELP

If you miss any information in this help chapter or have any suggestions for additions, please feel free to contact us via e-mail: documentation@copadata.com (<mailto:documentation@copadata.com>).

PROJECT SUPPORT

If you have concrete questions relating to your project, please feel free to contact the support team via e-mail: support@copadata.com (<mailto:support@copadata.com>)

LICENSES AND MODULES

If you realize that you need additional licenses or modules, please feel free to contact the sales team via e-mail: sales@copadata.com (<mailto:sales@copadata.com>)

2. S7_NT

3. S7_NT - Data sheet

General:	
Driver file name	S7_NT.exe
Driver description	S7 driver Softnet
PLC types	Siemens S7 300/400 and other compatible PLCs
PLC manufacturer	Inat; MPI; Profibus DP; Siemens; Vipa; Process-Informatik;

Driver supports:	
Protocol	Profibus DP; MPI; TCP/IP - RFC1006; ISO 8073;
Addressing: address based	x
Addressing: name based	-
Spontaneous communication	-
Polling communication	x
Online browsing	-
Offline browsing	x
Real-time capable	-
Blockwrite	-
Modem capable	-
Serial logging	-
RDA numerical	x
RDA String	-

Prerequisites:	
Hardware PC	CP 5613 (previously:CP 5412 (A2); CP 5611; for TCP/IP and ISO protocol: standard network card; according cable
Software PC	SIMATIC NET (Softnet)
Hardware PLC	according Communication Processors (MPI / H1 / TCP/IP) from Siemens, Inat, Vipa or Prozess-Informatik (S7-LAN: MPI to TCP/IP Gateway)
Software PLC	-
Requires v-dll	-

Platforms:	
Operating systems	Windows XP, Vista, 7, Server 2003, Server 2008/R2;
CE platforms	-;

4. Driver history

Date	Driver version	Change
07.07.08	1100	Created driver documentation

5. Requirements

This chapter contains information on the requirements that are necessary for use of this driver.

5.1 PC

HARDWARE

e.g. CP 5611, MPI interface, MPI cable.

SOFTWARE

Copy the driver file S7_NT.EXE to the current zenon directory (unless it is already there).

Installation of the Siemens software:

- ▶ Install SIMATIC NET SOFTNET S7 (V6.0 or higher) without SIMATIC NCM PC/S7

<input checked="" type="checkbox"/> AuthorSW V2.4.2	7 MB
<input checked="" type="checkbox"/> SIMATIC NET PC-Software V6.0	174 MB
<input type="checkbox"/> SIMATIC NCM PC/S7 V5.1 SP2	190 MB

- ▶ Install SIMATIC NET SCHLÜSSEL-DISK
- ▶ SIMATIC SOFTWARE STEP7 from 5.1 SP3 including NCM S7

The following programs are required for setup: (Siemens)

- ▶ Startup assistant
- ▶ Configure PC station

For a description of the menu entries of the Siemens programs, see the online help of those programs.

CONNECTION:

- ▶ Connection from the CP 5611 via the "Simatic MPI cable" to the interface of the CPU module(s).
Profibus wiring
- ▶ Depending on the employed hardware, the data transmission rate can range from 187.5KB to 1.5MB.

6. Configuration

In this chapter you will learn how to use the driver in a project and which settings you can change.




Info

Find out more about further settings for zenon variables in the chapter Variables (main.chm::/15247.htm) of the online manual.

6.1 Creating a driver

In order to create a new driver:

- ▶ Right-click on **Driver** in the Project Manager and select **Driver new** in the context menu.
- ▶ In the following dialog the control system offers a list of all available drivers.

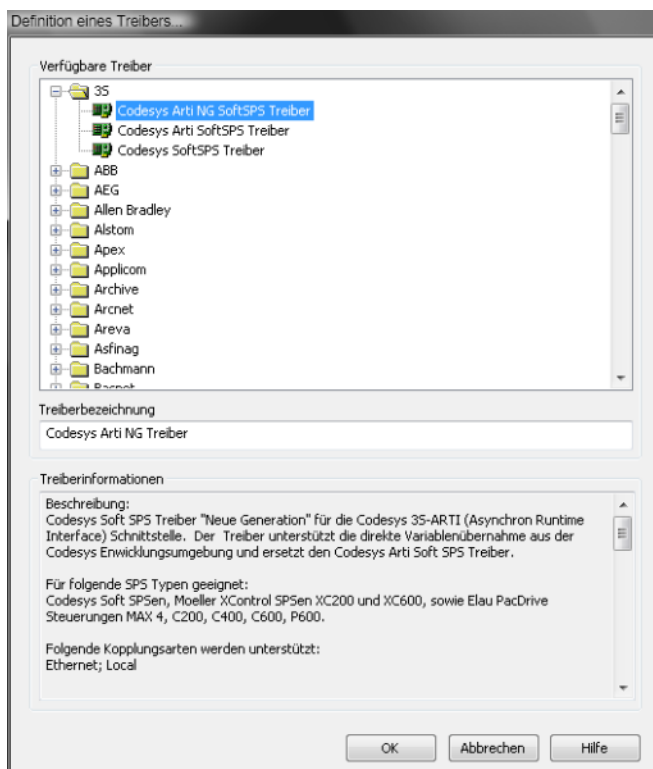

- ▶ Select the desired driver and give it a name:

- The driver name has to be unique, i.e. if one and the same driver is to be used several times in one project, every time a new name has to be given each time.
 - The driver name is part of the file name. Therefore it may only contain characters which are supported by the operating system. Invalid characters are replaced by an underscore (_).
 - **Attention:** This name cannot be changed later on.
- Confirm the dialog with **OK**. In the following dialog the single configurations of the drivers are defined.
- Only the respective required drivers need to be loaded for a project. Later loading of an additional driver is possible without problems.

**Info**

For new projects and for existing projects which are converted to version 6.21 or higher, the following drivers are created automatically:

- Internal
- MathDr32
- SysDrv.


6.2 Settings in the driver dialog

You can change the following settings of the driver:

6.2.1 General

Configuration

General



Mode:

Hardware

☐ Keep update list in memory

☐ Outputs writeable

☐ Variable image remanent

☐ Stopped on Standby-Server

☒ Update time global

Global updatetime in ms:

1000

Priority

normal:

1000

ms

high:

500

ms

higher:

300

ms

highest:

100

ms

OK

Cancel

Help

Parameters	Description
Mode	<p>Allows to switch between hardware mode and simulation mode</p> <ul style="list-style-type: none"> ▶ Hardware: A connection to the control is established. ▶ Simulation static No communication between to the control is established, the values are simulated by the driver. In this modus the values remain constant or the variables keep the values which were set by zenon Logic. Each variable has its own memory area, e.g. two variables of the type marker with offset 79 can have different values in the Runtime and do not influence each other. Exception: The simulator driver. ▶ Simulation - counting No communication between to the control is established, the values are simulated by the driver. In this modus the driver increments the values within a value range automatically. ▶ Simulation - programmed N communication is established to the PLC. The values are calculated by a freely programmable simulation project. The simulation project is created with the help of the zenon Logic Workbench and runs in a zenon Logic Runtime which is integrated in the driver. For details see chapter Driver simulation (main.chm::/25206.htm).
Keep update list in the memory	<p>Variables which were requested once are still requested from the control even if they are currently not needed.</p> <p>This has the advantage that e.g. multiple screen switches after the screen was opened for the first time are executed faster because the variables need not be requested again. The disadvantage is a higher load for the communication to the control.</p>
Output can be written	<p>Active: Outputs can be written.</p> <p>Inactive: Writing of outputs is prevented.</p> <p>Note: Not available for every driver.</p>

Variable image remanent	<p>This option saves and restores the current value, time stamp and the states of a data point.</p> <p>Fundamental requirement: The variable must have a valid value and time stamp.</p> <p>The variable image is saved in mode hardware if:</p> <ul style="list-style-type: none"> ▶ one of the states <code>S_MERKER_1(0)</code> up to <code>S_MERKER8(7)</code>, <code>REVISION(9)</code>, <code>AUS(20)</code> or <code>ERSATZWERT(27)</code> is active <p>The variable image is always saved if:</p> <ul style="list-style-type: none"> ▶ the variable is of the object type <code>Driver variable</code> ▶ the driver runs in simulation mode. (not programmed simulation) <p>The following states are not restored at the start of the Runtime:</p> <ul style="list-style-type: none"> ▶ <code>SELECT(8)</code> ▶ <code>WR-ACK(40)</code> ▶ <code>WR-SUC(41)</code> <p>The mode Simulation - programmed at the driver start is not a criterion in order to restore the remanent variable image.</p>
Stop at the Standby Server	<p>Setting for redundancy at drivers which allow only on communication connection. For this the driver is stopped at the Standby Server and only started at the upgrade.</p> <p>Attention: If this option is active, the gapless archiving is no longer guaranteed.</p> <p>Active: Sets the driver at the not-process-leading Server automatically in a stop-like state. In contrast to stopping via driver command, the variable does not receive status switched off (<code>statusverarbeitung.chm: : /24150.htm</code>) but an empty value. This prevents that at the upgrade to the Server irrelevant values are created in the AML, CEL and Historian.</p>
Global Update time	<p>Active: The set <code>Global update time</code> in ms is used for all variables in the project. The priority set at the variables is not used.</p> <p>Inactive: The set priorities are used for the individual variables.</p>
Priority	<p>Here you set the polling times for the individual priorities. All variables with the according priority are polled in the set time. The allocation is taken</p>


place for each variable separately in the settings of the variable properties. The communication of the individual variables are graduated in respect of importance or necessary topicality using the priorities. Thus the communication load is distributed better.

UPDATE TIME FOR CYCLICAL DRIVER

The following applies for cyclical drivers:

For **Set value**, **Advising** of variables and **Requests**, a read cycle is immediately triggered for all drivers - regardless of the set update time. This ensures that the value is immediately available for visualization after writing. Update times can therefore be shorter than pre-set for cyclical drivers.

6.2.2 Driver dialog S7

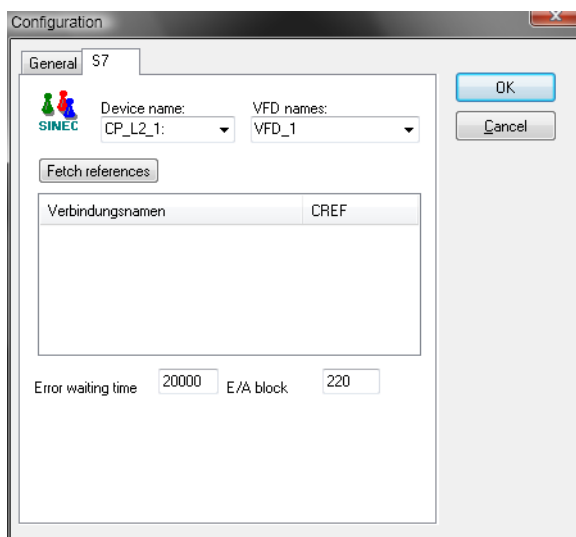

Parameters	Description
Device name	CP_L2_1: corresponds to selected online interface
VFD names	e.g. "zenon" corresponds to the name of the application that was specified in the program HW Config.
Hole references	must list the connection names that were specified in the program HW Config.
Connection names	
CREF	Channel numbers starting with 0; in the sequence of the configuration in the program COM SL7.
Error waiting time (ms)	
E/A block size	Defines the maximum size of a data block for inputs/outputs.

If you see the references after entering the VFD name, close the driver dialog with **OK** and reopen it.


If you cannot see any references, delete and reload the driver.



Attention

Do not make any manual changes in the field **Device name**. The changes will not be considered and you will not be able to establish a connection.

6.3 Definition of a driver in zenon

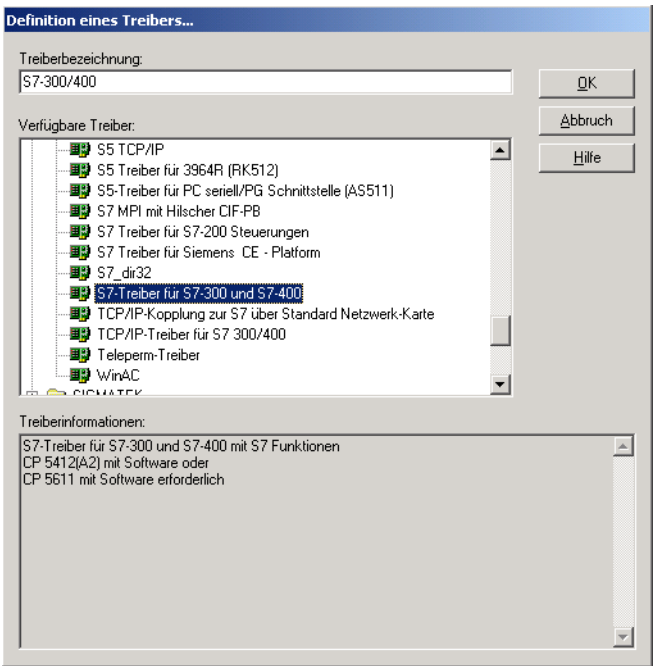


Parameters	Description
Driver description	Enter a free text for the selected driver, e.g. S7 driver for S7-300 and S7-400.
Available drivers	The standard package already contains drivers. Scroll through the list and select one of the drivers by double-clicking on it.

7. Configure PC station


COMPONENT CONFIGURATION TOOL

1. *START -> SIMATIC -> SIMATIC NET -> Settings -> Configure PC station*

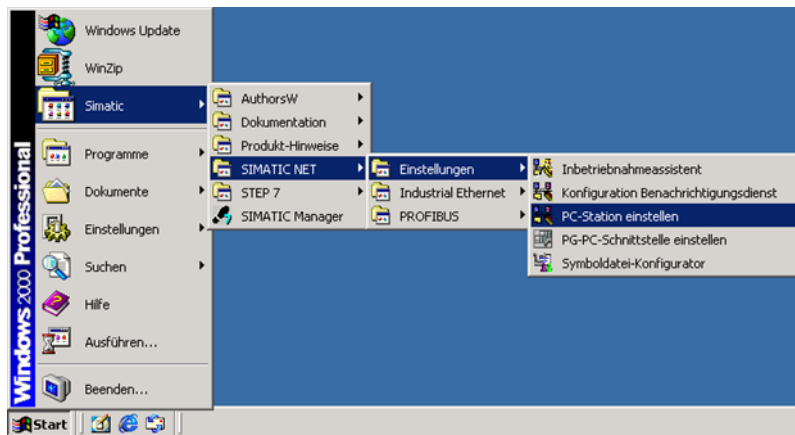

You can adjust all settings via the configuration console.


2. All available assembly groups and access points will be displayed.

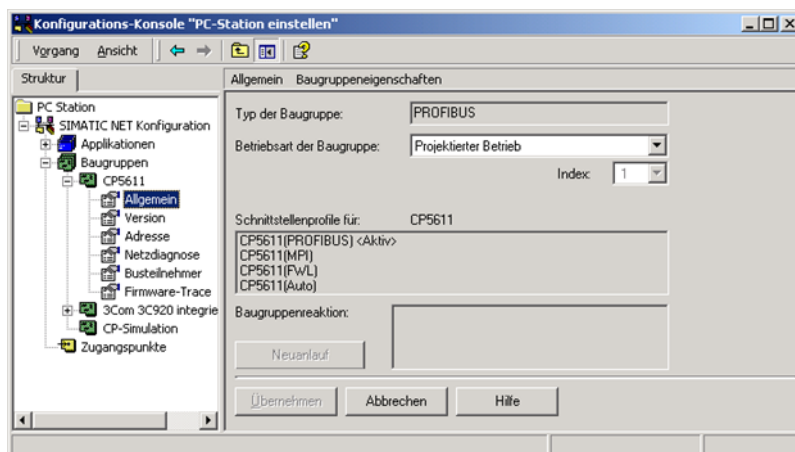


Important: The operation type of the assembly group must be set to "Configured operation".

The index corresponds to the index displayed in the component configuration tool.

3. Open the component configurator.

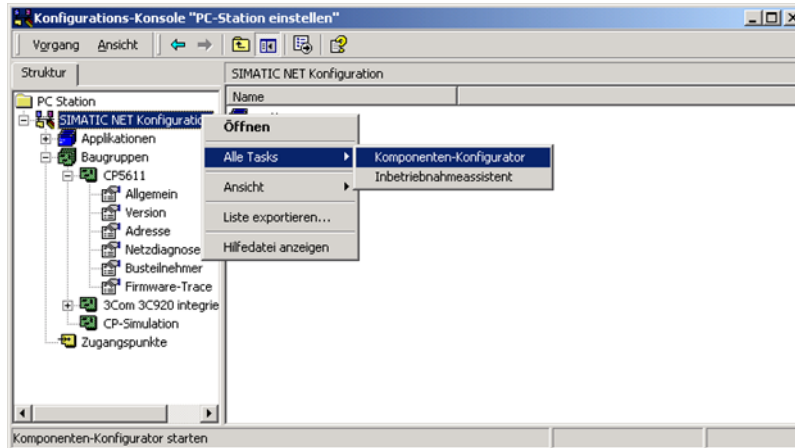


4. Click "Add. . ." in the component configuration tool to create the application.
In this case, the application was called "zenOn".

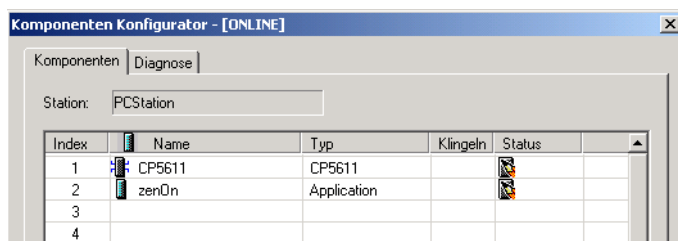


CONFIGURATION ASSISTANT

1. Start the configuration assistant (*START -> SIMATIC -> SIMATIC NET ->*) for further settings:


2. Use the option "Change local settings" to continue with the configuration.

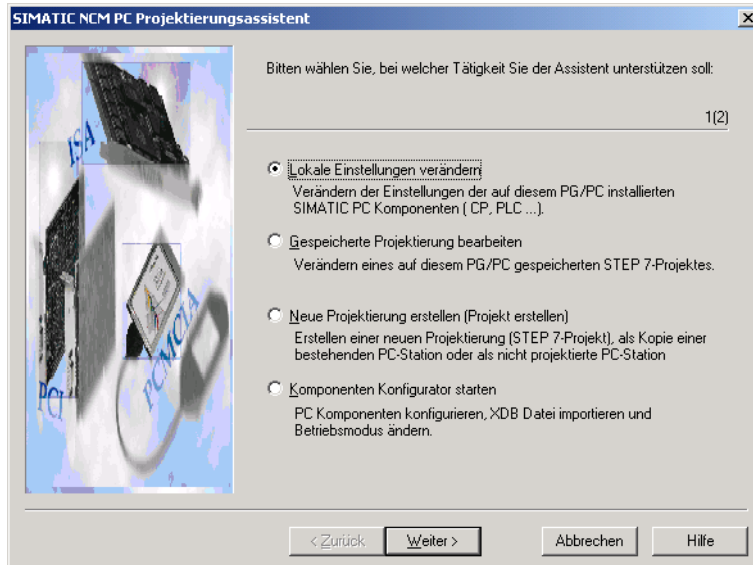

3. You configure the hardware first.

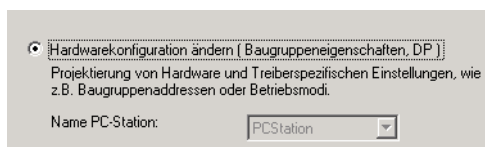


4. Add components.

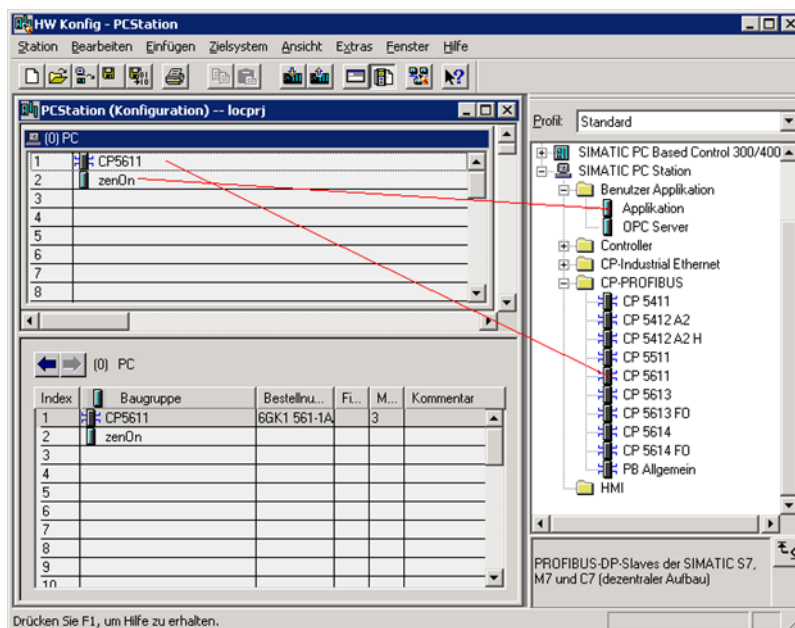


Please follow the right sequence. (see component configuration tool.)

5. Open the properties of the CP5611
6. Change the type of the interface to MPI.

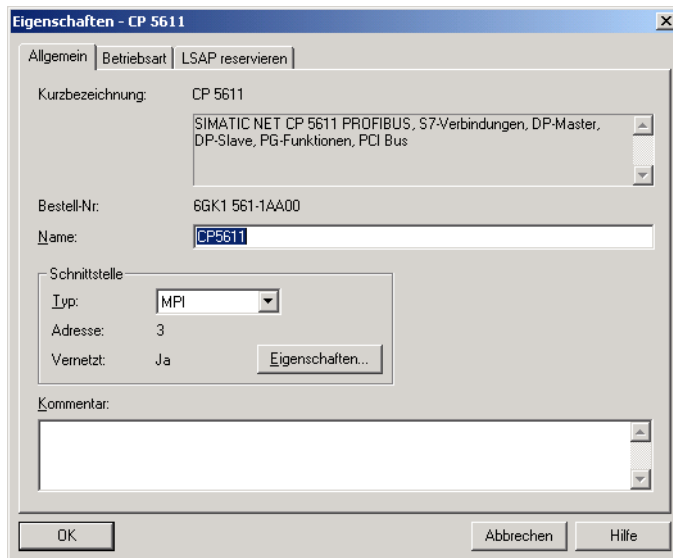

7. Open the properties of the application

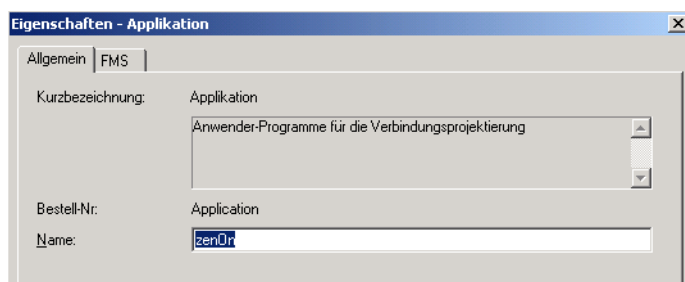


You will find the names again in the component configuration tool. You also enter this name in the driver configuration under "VFD names:".

Attention: (case sensitive)


8. Select, under the "station" menu item, the entry "Save and translate".
9. Now you can transfer the data to the assembly group. To do this, use the *Target system -> Load to assembly group...* menu item
10. Exit the program HW config - PC station

11. Now you have to continue with the configuration of the connections.

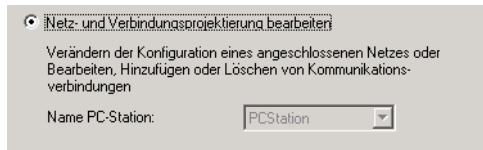

NETWORK

1. Now use the **Netpro** program to configure your network.

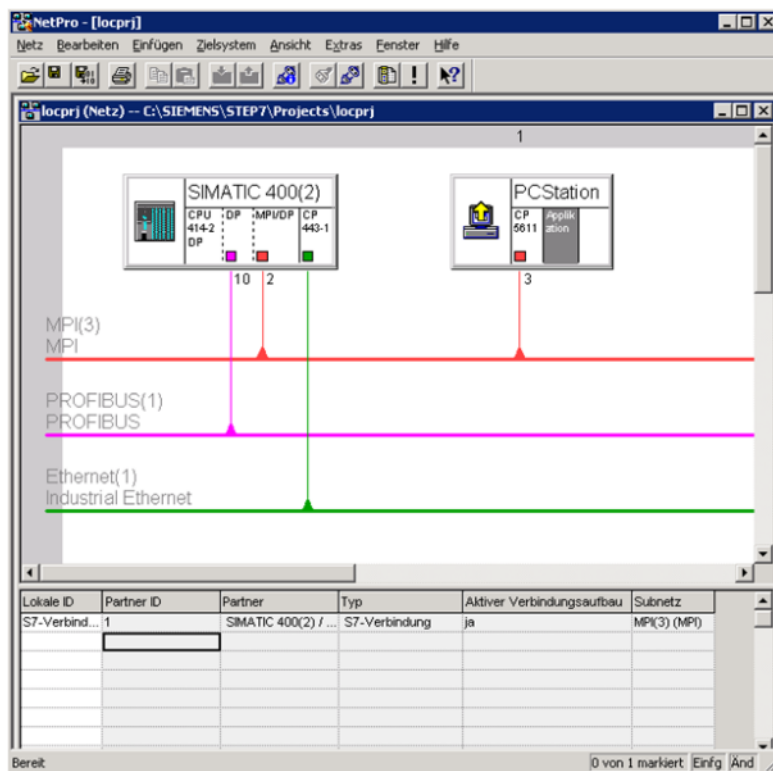

Note: The S7 station is also configured with the HW config program.

2. Now connect the assembly groups with the MPI bus.

Note: Change the baud rate at the MPI bus. First you should change the baud rate of the stations with the program HW config and then transmit it to the stations.

The connection table will only be visible if you select an assembly group that is capable of connections. In this case, either "Application" at the PC station or "CPU 414-2 DP" at the SIMATIC 400.


3. Create a new connection in the table. Select the connection type "S7 connection".

4. Select, under the "Network" menu item, the entry "Save and translate".
5. Transfer the data to the assembly group. To do so, select a station and then select the "Target system -> Load -> Highlighted and partner stations" menu item.
6. Close Netpro program.


TESTING

Test the assembly group in the "Configuration console" program.


1. Checking the baud rate.

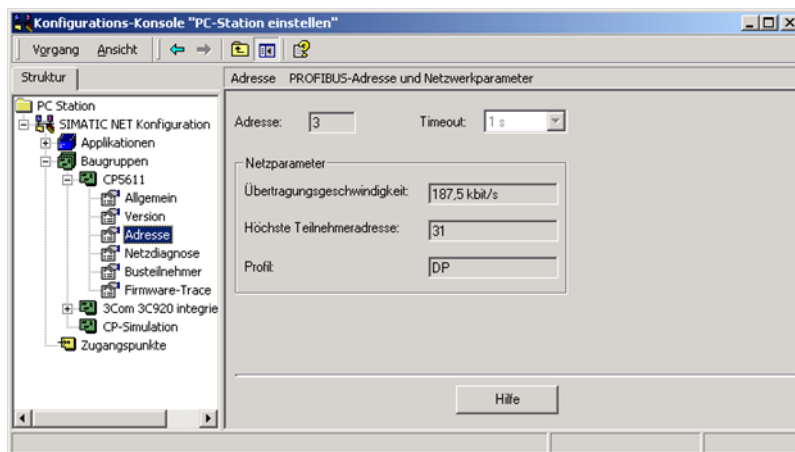


2. Checking the MPI address.

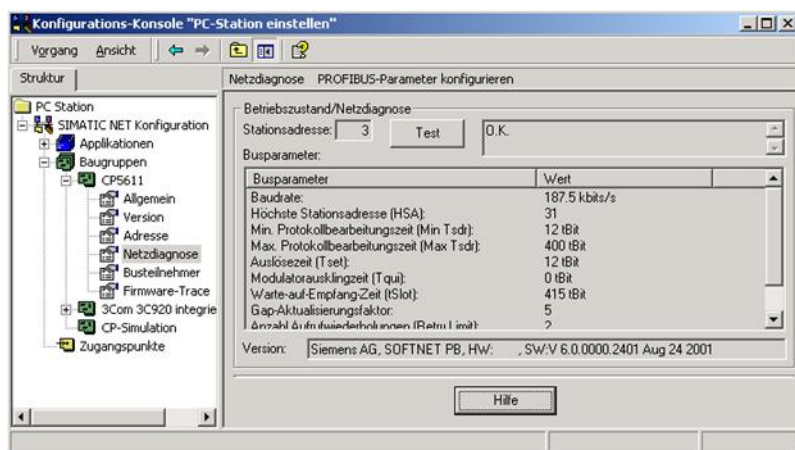

3. The configured bus participants must be displayed.

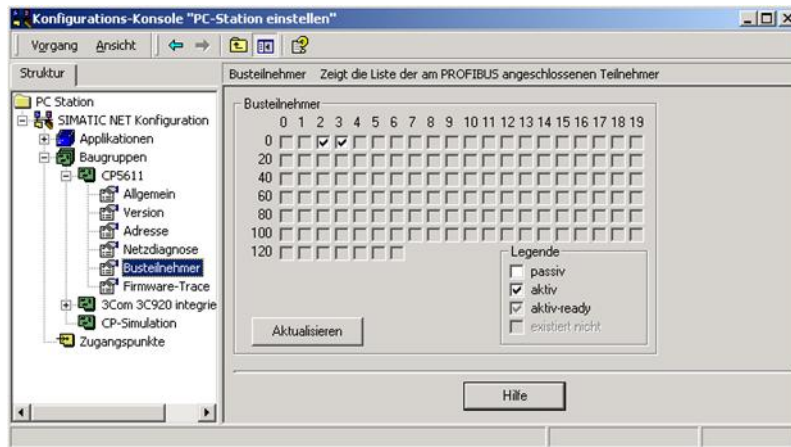

4. Use the access point "CP_L2_1:" in the driver configuration of the S7_NT driver of zenon.

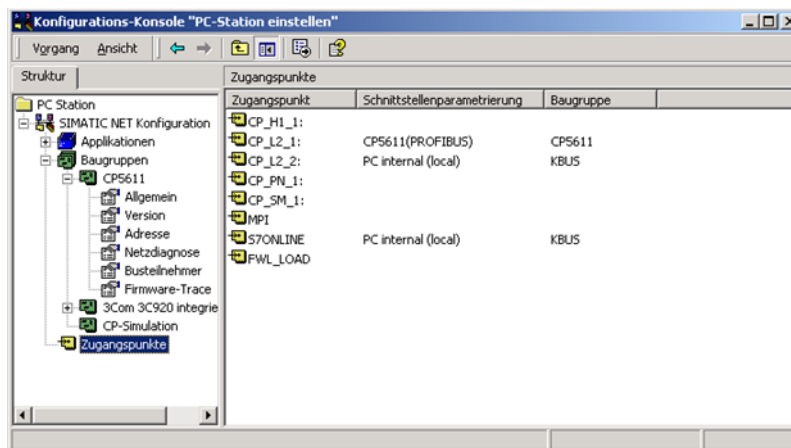

8. Creating variables

This is how you can create variables in the zenon Editor:

8.1 Creating variables in the Editor


Variables can be created:

- ▶ as simple variables
- ▶ in arrays main.chm::/15262.htm
- ▶ as structure variables main.chm::/15278.htm

VARIABLE DIALOG


To create a new variable, regardless of which type:

1. Select the **New variable** command in the **Variables** node in the context menu

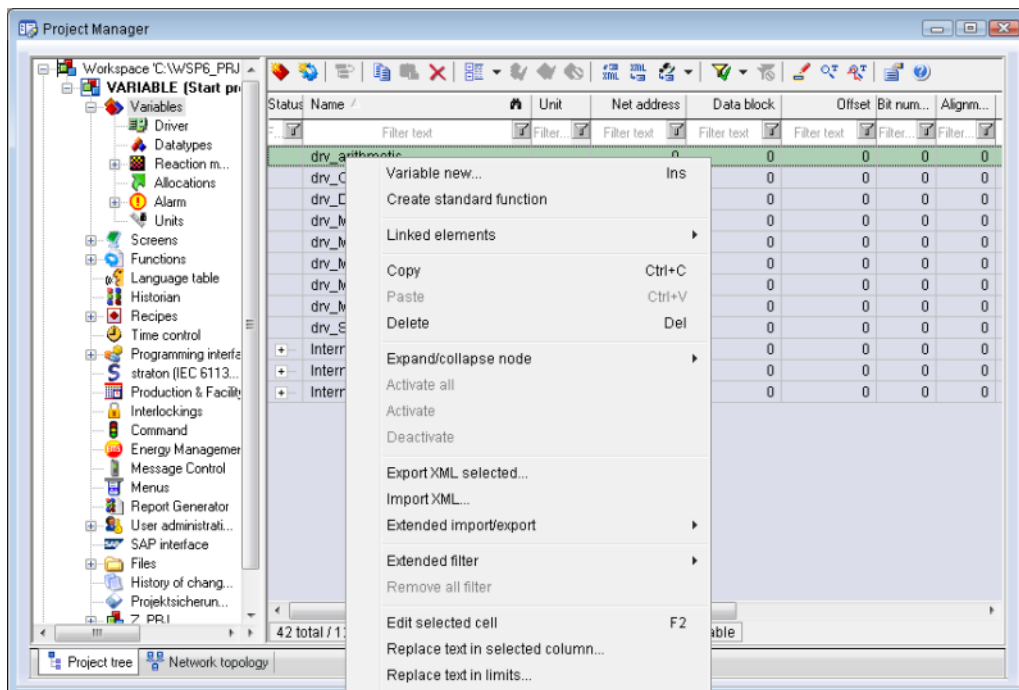

2. The dialog for configuring variables is opened
3. configure the variable

4. The settings that are possible depends on the type of variables

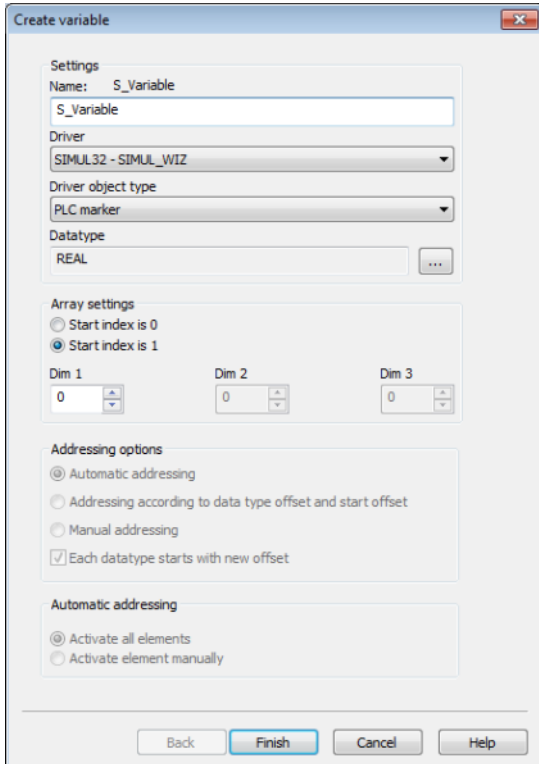

Property	Description
Name	Distinct name of the variable. If a variable with the same name already exists in the project, no additional variable can be created with this name. Attention: The # character is not permitted in variable names. If non-permitted characters are used, creation of variables cannot be completed and the Finish button remains inactive.
Drivers	Select the desired driver from the drop-down list. Note: If no driver has been opened in the project, the driver for internal variables (Intern.exe (Main.chm::/Intern.chm::/Intern.htm)) is automatically loaded.
Driver object type (cti.chm::/28685.htm)	Select the appropriate driver object type from the drop-down list.

Data type	Select the desired data type. Click on the ... button to open the selection dialog.
Array settings	Expanded settings for array variables. You can find details in the Arrays chapter.
Addressing options	Expanded settings for arrays and structure variables. You can find details in the respective section.
Automatic element activation	Expanded settings for arrays and structure variables. You can find details in the respective section.

INHERITANCE FROM DATA TYPE

Measuring range, Signal range and Set value are always:

- ▶ derived from the datatype
- ▶ Automatically adapted if the data type is changed

Note for signal range: If a change is made to a data type that does not support the set signal range, the signal range is amended automatically. For example, for a change from **INT** to **SINT**, the signal range is changed to 127. The amendment is also carried out if the signal range was not inherited from the data type. In this case, the measuring range must be adapted manually.

8.2 Addressing

Property	Description
Name	<p>Freely definable name.</p> <p>ATTENTION: the name must be unique within each control system project.</p>
Identification	Any text can be entered here, e.g. for resource labels, comments ...
Net address	<p>Bus address or net address of the variable.</p> <p>This address refers to the bus address in the connection configuration of the driver. This defines the PLC, on which the variable resides.</p>
Data block	<p>For variables of object type Extended data block, enter the datablock number here.</p> <p>Configurable [0.. 4294967295] . Please look up the exact maximum range for data blocks in the manual of the PLC.</p>
Offset	<p>Offset of the variable; the memory address of the variable in the PLC. Configurable [0.. 4294967295]</p> <p>Most S7 PLCs support a maximum Offset of 65535. Please look up the exact maximum range for objects in the manual of the PLC.</p>
Alignment	not used for this driver
Bit number	<p>Number of the bit within the configured offset.</p> <p>Valid input [0.. 65535], Working range [0..7]</p>
String length	Only available for String variables: Maximum number of characters that the variable can take.
Driver object type	Depending on the employed driver, an object type is selected during the creation of the variable; the type can be changed here later.
Data type	<p>Data type of the variable, which is selected during the creation of the variable; the type can be changed here later.</p> <p>ATTENTION: If you change the data type later, all other properties of the variable must be checked and adjusted, if necessary.</p>

8.3 Driver objects and datatypes

Driver objects are areas available in the PLC, such as markers, data blocks etc. Here you can find out which driver objects are provided by the driver and which IEC data types can be assigned to the respective driver objects.

8.3.1 Driver objects

The following object types are available in this driver:

Driver object type	Channel type	Read / Write	Supported data types	Comment
Output	11	R / W	USINT, BOOL, SINT, UINT, INT	
Ext. data block	34	R / W	REAL, BOOL, DINT, UDINT, USINT, INT, UINT, SINT, STRING	
Input	10	R	USINT, BOOL, SINT, UINT, INT	
PLC marker	8	R / W	REAL, BOOL, DINT, UDINT, USINT, INT, UINT, SINT, STRING	
Counters	23	R / W	UDINT	
Time	22	R	REAL	
Driver variable	35	R / W	BOOL, SINT, USINT, INT, UINT, DINT, UDINT, REAL, STRING	Variables for the statistical analysis of communication. Find out more in the chapter about the Driver variables (on page 38)

OBJECTS FOR PROCESS VARIABLES IN ZENON

Object	Read	Write	Comment
Configuration			
Bit marker	Y	Y	
Byte marker	Y	Y	
Word marker	Y	Y	
DWord marker	Y	Y	
DataBit	Y	Y	
DateByte	Y	Y	

DataWord	Y	Y	
DataDoubleword	Y	Y	
DataFloat	Y	Y	
DataString	Y	Y	
Input bit	Y	N	
InputByte	Y	N	
InputWord	Y	N	
Output Bit	Y	Y	
Output byte	Y	Y	
Output Word	Y	Y	
Timer Float	Y	N	
Counter Dword	Y	Y	
Float marker	Y	Y	
String marker	Y	Y	
Driver variable Bit	Y	Y	
Driver variable Byte	Y	Y	
Driver variable Word	Y	Y	
Driver variable Dword	Y	Y	
Driver variable Float	Y	Y	
Driver variable String	Y	Y	

Net Address = CREF number

8.3.2 Mapping of the data types

All variables in zenon are derived from IEC data types. The following table compares the IEC datatypes with the datatypes of the PLC.

PLC	zenon	Data type
	BOOL	8
	USINT	9
	SINT	10
	UINT	2
	INT	1
	UDINT	4
	DINT	3
	ULINT	27
	LINT	26
	REAL	5
	LREAL	6
	STRING	12
	WSTRING	21
	DATE	18
	TIME	17
	DATE_AND_TIME	20
	TOD (Time of Day)	19

Data type: The property `Data type` is the internal numerical name of the data type. It is also used for the extended DBF import/export of the variables.

8.4 Creating variables by importing

Variables can also be imported by importing them. The XML and DBF import is available for every driver.

8.4.1 XML import of variables from another zenon project

For the import/export of variables the following is true:

- ▶ The import/export must not be started from the global project.
- ▶ The start takes place via:
 - Context menu of variables or data typ in the project tree
 - or context menu of a variable or a data type
 - or symbol in the symbol bar variables

Attention

When importing/overwriting an existing data type, all variables based on the existing data type are changed.

Example:

There is a data type XYZ derived from the type `INT` with variables based on this data type. The XML file to be imported also contains a data type with the name XYZ but derived from type `STRING`. If this data type is imported, the existing data type is overwritten and the type of all variables based on it is adjusted. I.e. the variables are now no longer `INT` variables, but `STRING` variables.

8.4.2 DBF Import/Export

Data can be exported to and imported from dBase.

IMPORT DBF FILE

To start the import:

1. right-click on the variable list
2. in the drop-down menu of **Extended export/import...** select the **Import dBase** command
3. follow the import assistant

The format of the file is described in the chapter File structure.



Info

Note:

- ▶ Driver object type and data type must be amended to the target driver in the DBF file in order for variables to be imported.
- ▶ dBase does not support structures or arrays (complex variables) at import.

EXPORT DBF FILE

To start the export:

1. right-click on the variable list
2. in the drop-down menu of **Extended export/import...** select the **Export dBase** command
3. follow the export assistant



Attention

DBF files:

- ▶ must correspond to the 8.3 DOS format for filenames (8 alphanumeric characters for name, 3 character suffix, no spaces)
- ▶ must not have dots (.) in the path name.
e.g. the path C:\users\John.Smith\test.dbf is invalid.
Valid: C:\users\JohnSmith\test.dbf
- ▶ must be stored close to the root directory in order to fulfill the limit for file name length including path: maximum 255 characters

The format of the file is described in the chapter File structure.



Info

dBase does not support structures or arrays (complex variables) at export.

File structure of the dBase export file

The dBaseIV file must have the following structure and contents for variable import and export:

Attention

dBase does not support structures or arrays (complex variables) when exporting.

DBF files must:

- ▶ correspond to the 8.3 DOS format for filenames (8 alphanumeric characters for name, 3 character suffix, no spaces)
- ▶ Be stored close to the root directory (Root)

DESIGN

Description	Type	Field size	Comment
KANALNAME	Char	128	Variable name. The length can be limited using the MAX_LAENGE entry in project.ini .
KANAL_R	C	128	The original name of a variable that is to be replaced by the new name entered under "KANALNAME" (field/column must be entered manually). The length can be limited using the MAX_LAENGE entry in project.ini .
KANAL_D	Log	1	The variable is deleted with the 1 entry (field/column has to be created by hand).
TAGNR	C	128	Identification. The length can be limited using the MAX_LAENGE entry in project.ini .
EINHEIT	C	11	Technical unit
DATENART	C	3	Data type (e.g. bit, byte, word, ...) corresponds to the data type.
KANALTYP	C	3	Memory area in the PLC (e.g. marker area, data area, ...) corresponds to the driver object type.
HWKANAL	Num	3	Bus address
BAUSTEIN	N	3	Datablock address (only for variables from the data area of the PLC)
ADRESSE	N	5	Offset

BITADR	N	2	For bit variables: bit address For byte variables: 0=lower, 8=higher byte For string variables: Length of string (max. 63 characters)
ARRAYSIZE	N	16	Number of variables in the array for index variables ATTENTION: Only the first variable is fully available. All others are only available for VBA or the Recipe Group Manager
LES_SCHR	R	1	Write-Read-Authorization 0: Not allowed to set value. 1: Allowed to set value.
MIT_ZEIT	R	1	time stamp in zenon (only if supported by the driver)
OBJEKT	N	2	Driver-specific ID number of the primitive object comprises KANALTYP and DATENART
SIGMIN	Float	16	Non-linearized signal - minimum (signal resolution)
SIGMAX	F	16	Non-linearized signal - maximum (signal resolution)
ANZMIN	F	16	Technical value - minimum (measuring range)
ANZMAX	F	16	Technical value - maximum (measuring range)
ANZKOMMA	N	1	Number of decimal places for the display of the values (measuring range)
UPDATERATE	F	19	Update rate for mathematics variables (in sec, one decimal possible) not used for all other variables
MENTIEFE	N	7	Only for compatibility reasons
HDRATE	F	19	HD update rate for historical values (in sec, one decimal possible)
HDTIEFE	N	7	HD entry depth for historical values (number)
NACHSORT	R	1	HD data as postsorted values
DRRATE	F	19	Updating to the output (for zenon DDE server, in [s], one decimal possible)
HYST_PLUS	F	16	Positive hysteresis, from measuring range
HYST_MINUS	F	16	Negative hysteresis, from measuring range
PRIOR	N	16	Priority of the variable
REAMATRIZE	C	32	Allocated reaction matrix

ERSATZWERT	F	16	Substitute value, from measuring range
SOLLMIN	F	16	Minimum for set value actions, from measuring range
SOLLMAX	F	16	Maximum for set value actions, from measuring range
VOMSTANDBY	R	1	Get value from standby server; the value of the variable is not requested from the server but from the standby-server in redundant networks
RESOURCE	C	128	Resource label. Free string for export and display in lists. The length can be limited using the MAX_LAENGE entry in project.ini .
ADJWVBA	R	1	Non-linear value adaption: 0: Non-linear value adaption is used 1: non linear value adaption is not used
ADJZENON	C	128	Linked VBA macro for reading the variable value for non-linear value adjustment.
ADJWVBA	C	128	Linked VBA macro for writing the variable value for non-linear value adjustment.
ZWREMA	N	16	Linked counter REMA.
MAXGRAD	N	16	Gradient overflow for counter REMA.

**Attention.**

When importing, the driver object type and data type must be amended to the target driver in the DBF file in order for variables to be imported.

LIMIT DEFINITION

Limit definition for limit values 1 to 4, and status 1 to 4:

Description	Type	Field size	Comment
AKTIV1	R	1	Limit value active (per limit value available)
GRENZWERT1	F	20	Technical value or ID number of a linked variable for a dynamic limit (see VARIABLEx) (if VARIABLEx is 1 and here it is -1, the existing variable linkage is not overwritten)
SCHWWERT1	F	16	Threshold value for limit
HYSTERESE1	F	14	Hysteresis in %
BLINKEN1	R	1	Set blink attribute
BTB1	R	1	Logging in CEL
ALARM1	R	1	Alarm
DRUCKEN1	R	1	Printer output (for CEL or Alarm)
QUITTIER1	R	1	Must be acknowledged
LOESCHE1	R	1	Must be deleted
VARIABLE1	R	1	Dyn. limit value linking the limit is defined by an absolute value (see field GRENZWERTx).
FUNC1	R	1	Function linking
ASK_FUNC1	R	1	With interrogation before execution
FUNC_NR1	N	10	ID number of the linked function (if "-1" is entered here, the existing function is not overwritten during import)
A_GRUPPE1	N	10	Alarm/event group
A_KLASSE1	N	10	Alarm/event class
MIN_MAX1	C	3	Minimum, Maximum
FARBE1	N	10	Color as Windows coding
GRENZTXT1	C	66	Limit value text
A_DELAY1	N	10	Time delay
INVISIBLE1	R	1	Invisible

Expressions in the column "Comment" refer to the expressions used in the dialog boxes for the definition of variables. For more information, see chapter Variable definition.

8.5 Driver variables

The driver kit implements a number of driver variables. These are divided into:

- ▶ Information
- ▶ Configuration
- ▶ Statistics and
- ▶ Error messages

The definitions of the variables defined in the driver kit are available in the import file `drvvar.dbf` (on the CD in the directory: `CD_Drive:/Predefined/Variables`) and can be imported from there.

Hint: Variable names must be unique in zenon. If driver variables are to be imported from `drvvar.dbf` again, the variables that were imported beforehand must be renamed.



Info

Not every driver supports all driver variants.

For example:

- ▶ Variables for modem information are only supported by modem-compatible drivers
- ▶ Driver variables for the polling cycle only for pure polling drivers
- ▶ Connection-related information such as ErrorMSG only for drivers that only edit one connection at a time

INFORMATION

Name from import	Type	Offset	Description
MainVersion	UINT	0	Main version number of the driver.
SubVersion	UINT	1	Sub version number of the driver.
BuildVersion	UINT	29	Build version number of the driver.
RTMajor	UINT	49	zenon main version number
RTMinor	UINT	50	zenon sub version number
RTSp	UINT	51	zenon service pack number
RTBuild	UINT	52	zenon build number
LineStateIdle	BOOL	24.0	TRUE, if the modem connection is idle
LineStateOffering	BOOL	24.1	TRUE, if a call is received
LineStateAccepted	BOOL	24.2	The call is accepted
LineStateDialtone	BOOL	24.3	Dialtone recognized
LineStateDialing	BOOL	24.4	Dialing active
LineStateRingBack	BOOL	24.5	While establishing the connection
LineStateBusy	BOOL	24.6	Target station is busy
LineStateSpecialInfo	BOOL	24.7	Special status information received
LineStateConnected	BOOL	24.8	Connection established
LineStateProceeding	BOOL	24.9	Dialing completed
LineStateOnHold	BOOL	24.10	Connection in hold
LineStateConferenced	BOOL	24.11	Connection in conference mode.
LineStateOnHoldPendConf	BOOL	24.12	Connection in hold for conference
LineStateOnHoldPendTransfer	BOOL	24.13	Connection in hold for transfer
LineStateDisconnected	BOOL	24.14	Connection stopped
LineStateUnknow	BOOL	24.15	Connection status unknown
ModemStatus	UDINT	24	Current modem status
TreiberStop	BOOL	28	Driver stopped

			For <code>driver stop</code> , the variable has the value <code>TRUE</code> and an OFF bit. After the driver has started, the variable has the value <code>FALSE</code> and no OFF bit.
<code>SimulRTState</code>	<code>UDINT</code>	60	Informs the status of Runtime for driver simulation.

CONFIGURATION

Name from import	Type	Offset	Description
<code>ReconnectInRead</code>	<code>BOOL</code>	27	If <code>TRUE</code> , the modem is automatically reconnected for reading
<code>ApplyCom</code>	<code>BOOL</code>	36	Apply changes in the settings of the serial interface. Writing to this variable immediately results in the method <code>SrvDrvVarApplyCom</code> being called (which currently has no further function).
<code>ApplyModem</code>	<code>BOOL</code>	37	Apply changes in the settings of the modem. Writing this variable immediately calls the method <code>SrvDrvVarApplyModem</code> . This closes the current connection and opens a new one according to the settings PhoneNumberSet and ModemHwAdrSet .
<code>PhoneNumberSet</code>	<code>STRING</code>	38	Telephone number, that should be used
<code>ModemHwAdrSet</code>	<code>DINT</code>	39	Hardware address for the telephone number
<code>GlobalUpdate</code>	<code>UDINT</code>	3	Update time in milliseconds (ms).
<code>BGlobalUpdaten</code>	<code>BOOL</code>	4	<code>TRUE</code> , if update time is global
<code>TreiberSimul</code>	<code>BOOL</code>	5	<code>TRUE</code> , if driver in sin simulation mode
<code>TreiberProzab</code>	<code>BOOL</code>	6	<code>TRUE</code> , if the variables update list should be kept in the memory
<code>ModemActive</code>	<code>BOOL</code>	7	<code>TRUE</code> , if the modem is active for the driver

Device	STRING	8	Name of the serial interface or name of the modem
ComPort	UINT	9	Number of the serial interface.
Baud rate	UDINT	10	Baud rate of the serial interface.
Parity	SINT	11	Parity of the serial interface
ByteSize	SINT	14	Number of bits per character of the serial interface Value = 0 if the driver cannot establish any serial connection.
StopBit	SINT	13	Number of stop bits of the serial interface.
Autoconnect	BOOL	16	TRUE, if the modem connection should be established automatically for reading/writing
PhoneNumber	STRING	17	Current telephone number
ModemHwAdr	DINT	21	Hardware address of current telephone number
RxIdleTime	UINT	18	Modem is disconnected, if no data transfer occurs for this time in seconds (s)
WriteTimeout	UDINT	19	Maximum write duration for a modem connection in milliseconds (ms).
RingCountSet	UDINT	20	Number of ringing tones before a call is accepted
ReCallIdleTime	UINT	53	Waiting time between calls in seconds (s).
ConnectTimeout	UDINT	54	Time in seconds (s) to establish a connection.

STATISTICS

Name from import	Type	Offset	Description
MaxWriteTime	UDINT	31	The longest time in milliseconds (ms) that is required for writing.
MinWriteTime	UDINT	32	The shortest time in milliseconds (ms) that is required for writing.
MaxBlkReadTime	UDINT	40	Longest time in milliseconds (ms) that is required to read a data block.
MinBlkReadTime	UDINT	41	Shortest time in milliseconds (ms) that is required to read a data block.
WriteErrorCount	UDINT	33	Number of writing errors
ReadSucceedCount	UDINT	35	Number of successful reading attempts
MaxCycleTime	UDINT	22	Longest time in milliseconds (ms) required to read all requested data.
MinCycleTime	UDINT	23	Shortest time in milliseconds (ms) required to read all requested data.
WriteCount	UDINT	26	Number of writing attempts
ReadErrorCount	UDINT	34	Number of reading errors
MaxUpdateTimeNormal	UDINT	56	Time since the last update of the priority group Normal in milliseconds (ms).
MaxUpdateTimeHigher	UDINT	57	Time since the last update of the priority group Higher in milliseconds (ms).
MaxUpdateTimeHigh	UDINT	58	Time since the last update of the priority group High in milliseconds (ms).
MaxUpdateTimeHighest	UDINT	59	Time since the last update of the priority group Highest in milliseconds (ms).

PokeFinish	BOOL	55	Goes to 1 for a query, if all current pokes were executed
------------	------	----	---

ERROR MESSAGES

Name from import	Type	Offset	Description
ErrorTimeDW	UDINT	2	Time (in seconds since 1.1.1970), when the last error occurred.
ErrorTimeS	STRING	2	Time (in seconds since 1.1.1970), when the last error occurred.
RdErrPrimObj	UDINT	42	Number of the PrimObject, when the last reading error occurred.
RdErrStationsName	STRING	43	Name of the station, when the last reading error occurred.
RdErrBlockCount	UINT	44	Number of blocks to read when the last reading error occurred.
RdErrHwAdresse	UDINT	45	Hardware address when the last reading error occurred.
RdErrDatablockNo	UDINT	46	Block number when the last reading error occurred.
RdErrMarkerNo	UDINT	47	Marker number when the last reading error occurred.
RdErrSize	UDINT	48	Block size when the last reading error occurred.
DrvError	SINT	25	Error message as number
DrvErrorMsg	STRING	30	Error message as text
ErrorFile	STRING	15	Name of error log file

8.5.1 additional driver variables

In addition to the standard driver variables, the driver also defines the following ones. The file S7DrvVar.DBF contains the definitions of these variables.

S7DEVICE

Offset: 1000 Type: String, Size 63, read only.

Contains the name of the selected device.

S7VFD

Offset: 1001 Type: String, Size 63, read only.

Contains the name of the selected VFD.

S7EABLKLEN

Offset: 1002 Type: Word, read only.

The currently configured I/O block size.

S7ERRRDTIMEOUT

Offset: 1003 Type: DWORD, read only.

The currently configured read timeout.

S7LASTERRNO

Offset: 1004 Type: DWORD, read only.

Contains the error number of the Softnet connection.

S7LASTERRMSG

Offset: 1005 Type: String, Size 63, read only.

Contains the plain text for S7LastErrNo.

9. Driver-specific functions


This driver supports the following functions:

10. Driver commands

This chapter describes standard functions that are valid for most zenon drivers. Not all functions described here are available for every driver. For example, a driver that does not, according to the data sheet, support a modem connection also does not have any modem functions.

Driver commands are used to influence drivers using zenon; start and stop for example. The engineering is implemented with the help of function **Driver commands**. To do this:

- ▶ create a new function
- ▶ select *Variables -> Driver commands*
- ▶ The dialog for configuration is opened

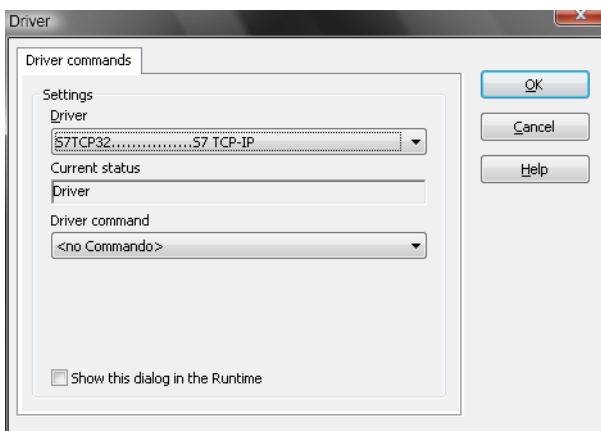

Parameters	Description
Drivers	Drop-down list with all drivers which are loaded in the project.
Current state	Fixed entry which has no function in the current version.
Driver commands	Drop-down list for the selection of the command.
▶ Start driver (online mode)	Driver is reinitialized and started.
▶ Stop driver (offline mode)	Driver is stopped. No new data is accepted. Note: If the driver is in offline mode, all variables that were created for this driver receive the status switched off (OFF; Bit 20).
▶ Driver in simulation	Driver is set into simulation mode. The values of all variables of the driver are simulated by the

mode	driver. No values from the connected hardware (e.g. PLC, bus system, ...) are displayed.
▶ Driver in hardware mode	Driver is set into hardware mode. For the variables of the driver the values from the connected hardware (e.g. PLC, bus system, ...) are displayed.
▶ Driver-specific command	Enter driver-specific commands. Opens input field in order to enter a command.
▶ Activate driver write set value	Write set value to a driver is allowed.
▶ Deactivate driver write set value	Write set value to a driver is prohibited.
▶ Establish connection with modem	Establish connection (for modem drivers) Opens the input fields for the hardware address and for the telephone number.
▶ Disconnect from modem	Terminate connection (for modem drivers)
Show this dialog in the Runtime	The dialog is shown in Runtime so that changes can be made.

DRIVER COMMANDS IN THE NETWORK

If the computer, on which the **driver command** function is executed, is part of the zenon network, additional actions are carried out. A special network command is sent from the computer to the project server, which then executes the desired action on its driver. In addition, the Server sends the same driver command to the project standby. The standby also carries out the action on its driver.

This makes sure that Server and Standby are synchronized. This only works if the Server and the Standby both have a working and independent connection to the hardware.

11. Error analysis

Should there be communication problems, this chapter will assist you in finding out the error.

11.1 Analysis tool

All zenon modules such as Editor, Runtime, drivers, etc. write messages to a joint log file. To display them correctly and clearly, use the Diagnosis Viewer (main.chm::/12464.htm) program that was also installed with zenon. You can find it under *Start/All programs/zenon/Tools 7.00 -> Diagviewer*.

zenon driver log all errors in the log files. The default folder for the log files is subfolder `LOG` in directory `ProgramData`, example: `C:\ProgramData\zenon \zenon700\LOG` for zenon version 7.00 SP0. Log files are text files with a special structure.

Attention: With the default settings, a driver only logs error information. With the **Diagnosis Viewer** you can enhance the diagnosis level for most of the drivers to "Debug" and "Deep Debug". With this the driver also logs all other important tasks and events.

In the Diagnosis Viewer you can also:

- ▶ follow currently created entries live
- ▶ customize the logging settings
- ▶ change the folder in which the log files are saved

Hints:

1. In Windows CE even errors are not logged per default due to performance reasons.
2. The Diagnosis Viewer displays all entries in UTC (coordinated world time) and not in local time.
3. The Diagnosis Viewer does not display all columns of a log file per default. To display more columns activate property **Add all columns with entry** in the context menu of the column header.
4. If you only use **Error logging**, the problem description is in column **Error text**. For other diagnosis level the description is in column **General text**.
5. For communication problems many drivers also log error numbers which the PLC assigns to them. They are displayed in **Error text** and/or **Error code** and/or **Driver error parameter (1 and 2)**. Hints on the meaning of error codes can be found in the driver documentation and the protocol/PLC description.
6. At the end of your test set back the diagnosis level from **Debug** or **Deep Debug**. At **Debug** and **Deep Debug** there are a great deal of data for logging which are saved to the hard drive and

which can influence your system performance. They are still logged even after you close the **Diagnosis Viewer**.



Info

You can find further information on the Diagnosis Viewer in the Diagnose Viewer (main.chm::/12464.htm) chapter.

11.2 Check list

- ▶ Cable disconnected
- ▶ Wrong network parameters in the CP or PC.
- ▶ Data block does not exist
- ▶ CP5611 and other PCI card use the same interrupt.
- ▶ Wrong data block size (too short)
- ▶ Too slow: scattered data areas increase update time
- ▶ Maybe try deleting and reloading the driver (if no "CREF" connection are displayed)