

zenon manual

Production and Facility Scheduler (PFS)

v.7.20



©2015 Ing. Punzenberger COPA-DATA GmbH

All rights reserved.

Distribution and/or reproduction of this document or parts thereof in any form are permitted solely with the written permission of the company COPA-DATA. Technical data is only used for product description and are not guaranteed qualities in the legal sense. Subject to change, technical or otherwise.



Contents

1.	Welc	ome to COPA-DATA help	7
2.	Prod	uction and Facility Scheduler (PFS)	7
3.	Gene	ral	8
4.	Tool	par and context menu PFS	9
5.	View	s in the Production Facility Scheduler	11
	5.1	Tree view	. 11
	5.2	Table view	. 11
6.	Engir	eering with the Production and Facility Scheduler	11
	6.1	Task description	. 12
	6.2	Step 1: Preparatory work	. 12
	6.3	Step 2: Settings Production and Facility Scheduler	. 13
	6.4	Step 3: Create time model groups	. 13
	6.5	Step 4: Create model	. 14
	6.6	Step 5: Create shifts and breaks	. 14
	6.7	Step 6: Define holiday model	. 15
	6.8	Step 7: User-defined event horn duration	. 15
	6.9	Step 8: Thoughts about schedule structure	. 16
	6.10	Step 9: Schedule for the hall	. 16
	6.11	Step 10: Thoughts about the times	. 17
	6.12	Step 11: Times for the schedule Hall	. 18
	6.13	Step 12: Switching points schedule Hall	. 19
	6.14	Step 13: Schedule line I	. 22
	6.15	Step 14: Schedule line II	. 23
	6.16	Step 15: Thoughts about calendar allocation	. 23
		6.16.1 Absolute times	. 23
		6.16.2 Relative times	. 23
	6.17	Step 16: Execute calendar allocation	. 24
	6.18	Step 17: Checking the engineering	. 25



	6.19	Step 18: PFS in the Runtime	25
	6.20	Step 19: Execution in the Runtime	25
		6.20.1 Positive time change	26
		6.20.2 Negative time change	26
	6.21	Step 20: Resume	27
7.	Adva	nced configuration in the Production and Facility Scheduler	
	7.1	Drag&Drop	27
	7.2	Filtering the PFS configuration	
	7.3	Mass processing	
	7.4	Structure schedules	
	7.5	Configuring Screen switch for PFS windows	
	7.6	Permissions for the Runtime environment	
	7.7	Using the PFS in a network	
	7.8	Converting projects	
	7.9	VBA interface	
8.	Obje	ct types	
	8.1	Fixed object types	
	8.2	Editable object types	
	8.3	Production and Facility Scheduler object	
	8.4	Object time model groups	
	8.5	Object editable time model groups	
	8.6	Schedule object	
		8.6.1 New schedule context menu	
		8.6.2 Context menu time display new schedule	
	8.7	Editable schedule object	
	8.8	Functions list object	
	8.9	Object time	
		8.9.1 Absolute time type	
		8.9.2 Relative time type	
		8.9.3 Offset	
		8.9.4 Time context menu	41
	8.10	Object switching point	
		8.10.1 Active	
		8.10.2 Type of link	



		8.10.3	Replace	42
		8.10.4	Action	42
		8.10.5	Authorizations	43
	8.11	Object t	ime model	43
		8.11.1	Context time model group	45
	8.12	Shift obj	ect	45
	8.13	Break of	oject	46
	8.14	Event of	oject	46
	8.15	Object u	iser event	47
	8.16	Calenda	r object	48
		8.16.1	Absolute time	49
		8.16.2	Relative time	49
		8.16.3	Month view	49
		8.16.4	Week view	50
		8.16.5	Day view	51
		8.16.6	Types of model allocations	52
		8.16.7	Schedule allocation types	52
		8.16.8	Model allocations in the Calendar view	53
		8.16.9	Model context menu	53
		8.16.10	Context menu schedule	54
	8.17	Variable	list object	55
		8.17.1	Object variable	56
	8.18	Functior	ns object	57
9.	Prope	erties		58
	9.1	Time cha	ange	59
	9.2	Holidays	5	61
	9.3	-	lors	
	9.4	Link of a	equipment model	63
	9.5		time model groups	
		9.5.1	Time model group properties	
		9.5.2	Default allocation of the models	
	9.6		schedules	
	-	9.6.1	Time context menu	
		9.6.2	Calendar filling	



10.	Dialo	gs 68
	10.1	PFS switching point preview
	10.2	PFS filter dialog71
	10.3	Authorizations71
	10.4	Cyclic creation of switching times72
	10.5	Schedule selection73
	10.6	Schedule activation period73
	10.7	Model selection76
	10.8	Table view schedule editing
	10.9	Table view model editing
	10.10	Change time
	10.11	Adjusting offset
	10.12	Change value
	10.13	Creating switching points
	10.14	Duplicate
		te PFS event
12.	Scree	n type Production and Facility Scheduler82
13.	Scree	n switch - PFS
	13.1	Filter tree view for screen switch
	13.2	Filter table view for screen switch



1. Welcome to COPA-DATA help

GENERAL HELP

If you cannot find any information you require in this help chapter or can think of anything that you would like added, please send an email to documentation@copadata.com (mailto:documentation@copadata.com).

PROJECT SUPPORT

You can receive support for any real project you may have from our Support Team, who you can contact via email at support@copadata.com (mailto:support@copadata.com).

LICENSES AND MODULES

If you find that you need other modules or licenses, our staff will be happy to help you. Email sales@copadata.com (mailto:sales@copadata.com).

2. Production and Facility Scheduler (PFS)

The Production & Facility Scheduler (PFS) allows executiong actions (e.g. changing of a variable's set value, executing a function) for a period of time or in a time grid.



License information


Must be licensed in Editor and Runtime.

CONTEXT MENU PROJECT MANAGER

Menu item	Action
New time model group	Opens the wizard for creating a new time model group.
New event	Creates a new event.
Editor profile	Opens the drop-down list with predefined editor profiles.
Help	Opens online help.

3. General

The optional module Production & Facility Scheduler (PFS) enables actions to be executed in relation to a specific period of time or according to a time model.

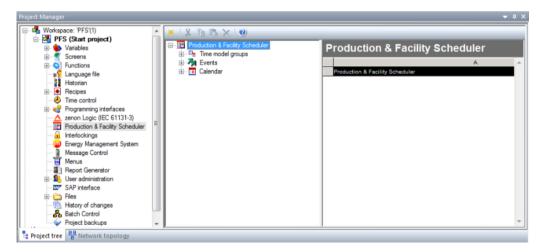

The PFS can be configured in both the Editor and Runtime environments. Configuration within the Runtime environment can be restricted by applying user rights. All configurations established in relation to the Runtime environment can be read back to the Editor; otherwise these configurations are specific.

All stated times are independent of time zone and daylight saving time and standard time.



Information

If the project is not displayed after the Editor is started:

- open the menu Option
- select the command Project manager

4. Toolbar and context menu PFS





Symbol	Description
Function new	Depend on the selected element, a new element is created and the respective dialog is opened.
Cut	Cuts the selected element.
Сору	Copies selected element.
Paste	Pastes the element from the clipboard.
Delete	Deletes selected element
Help	Opens online help.

CONTEXT MENU

Menu item	Action
Save	Saves changes in the engineering of the PFS.
Reject	Rejects all changes since the last time the PFS has been saved.
Properties	Opens the dialog for configuring:
	Time change
	Holidays
	Table color
	Record shift times
Switching point preview	Opens the switching point preview dialog.
Filter criteria	Opens the dialog for selecting filters.
Help	Opens online help.

Information

You can find explanations on context menus of individual elements of the tree and the table in the respective chapters especially in chapter Object types (on page 31).



5. Views in the Production Facility Scheduler

The PFS environment display is divided into two areas: The hierarchical tree view (on page 11) on the left side and the table view (on page 11) on the right side.

5.1 Tree view

The tree view enables users to easily identify on which level an object is located, and to which element(s) it relates. The tree view's congruence is illustrated by level lines. This is important information as the behaviour of objects depends on their relations.

A context menu, specifically related to each type of object, can be opened by right-clicking on the required object.

This area also enables users to copy, move and delete objects, provided that they are authorised to perform such operations.

5.2 Table view

The right-hand area of the PFS environment displays, according to the type of object selected in the tree view, the data related to the object. Some objects (e.g. schedules) can be configured in greater detail in this area, whereas other objects only enable users to display their current configuration, which cannot be modified here. For example: Events

If editing in the table is possible, you can access the necessary commands via context menus. So you can define the desired settings.

With some object types, users can also enter data directly into the table's cells e.g. times to be used in schedules.

6. Engineering with the Production and Facility Scheduler

In this section, we will proceed, step by step, to create a first PFS project; throughout this procedure, we will perform the following operations:

- Creating time model groups, models and schedules.
- Creating absolute and relative times using links to variables and/or functions.



- Creating and executing user-defined events.
- Using editing functions such as copying, moving and deleting.
- Linking schedules and models within the calendar.
- Checking over the created configuration using the switching point preview mode.
- Creating schedules in relation to the Runtime environment.

You should be familiar with creating projects, variables, functions, frames and screens. In this regard, only descriptions of the settings directly related to the PFS will be provided in the following section. If you need more information on these basic functionality, please refer to the appropriate chapter in the documentation.

Information

Labels in lists such as calendar, schedules, events etc, are always displayed in the language the project was created.

6.1 Task description

The task we must create is set as follows: a factory workshop (Hall I), containing two production lines (Line I and Line II) running on a shift from 06.00 to 18.00, must be heated, and its lighting system switched on and off. The heating needs a pre-heating time of 2 hours for line I and 1 hour for line II, where production line I has to be heated to 83° and production line II to 45°. If there is no production, heating should go down to 20°. Lights should be switched on 10 minutes earlier or switched off 10 minutes later. The production shift's start and end, as well as the various breaks' start and end, are signalled by a six-second horn tone. A break is scheduled for 15 minutes at 9.00, lunch break is scheduled for one hour at 12.00, and another break is scheduled for 15 minutes at 15.00. Production takes place 5 days a week; no production is scheduled on holidays or weekends. This workshop is located in Austria. Every 6 hours, the waste water pump must be activated for 30 seconds.

6.2 Step 1: Preparatory work

In this step, we will carry out some preparatory tasks prior to configuring the PFS. We will create a project, a driver is implemented and the necessary variables for our example are created.

- 1. Create a new project named **PfsSample** in a new workspace.
- 2. In the context menu of the project select Runtime files ->RT changeable files....
- 3. Deselect the Do not generate and transfer checkbox for the PFS. This way, any changes made to the PFS in the Editor will be recompiled; changes made in the Runtime environment will however be lost.



- 4. Deselect the Do not decompile checkbox for the PFS. Changes made in the Runtime are transferred to the Editor with decompiling.
- 5. Integrate the simulation driver. Accept all settings of the configuration.
- 6. Create the following variables:
 - HD-Bit; Offset 10; Bit 0; Name: Horn
 - HD-Bit; Offset 10; Bit 1; Name: Light I
 - HD-Bit; Offset 10; Bit 2; Name: Light II
 - HD-Bit; Offset 10; Bit 3; Name: Waste water pump
 - HD-Word; Offset 11; Name: Heating P I
 - HD-Word; Offset 12; Name: Heating P II
- 7. Activate the PFS by clicking on the appropriate node in the project manager. The empty PFS workspace should now be displayed on the screen.
- 8. Maximize the window Project info by activating the option Float in main window or deactivating the option Allow docking in the context menu of the window. An enlarged display area within the project window proves very useful when configuring the PFS.

6.3 Step 2: Settings Production and Facility Scheduler

In this step, we will configure parameters that apply to the whole of the PFS environment. To determine the appropriate holidays, you must specify in which country the current PFS project is set.

6.4 Step 3: Create time model groups

In this step, we will create a new time model group, and configure it according to our requirements.

In this case, Hall I will be designated as the time model group, as this hall requires specifically designed models (refer to time model object). Whenever several different models are required for one same calendar day, you will be required to divide a project into several different time model groups.

Expand the main node Production & Facility Scheduler. You should now see 3 additional entries. Time model groups, Events and Calendar

Right-click on the Time model group entry to open the context menu, and click on the Create item. Now page Time model group properties of the time model group is displayed. The Label field remains empty, as we are creating a new time model group.

Type Hall I in the Name field - i.e. the new time model group name. The time model group's designation (i.e. label) must be unique throughout the whole of the PFS environment. In this particular case, we are quite sure it is.



The Start of day (00:00:00) and End of Day (23:59:59) parameters can remain as such. These statements define the time model group's cycle for one full day.

Once you have made sure that the time model group designation is valid, click on ox to save these settings and create the new time model group.

You can now see a new entry has appeared under the **Time model group** header, called **Hall I**; this entry contains two further entries: **Schedules** and **Time models**.

6.5 Step 4: Create model

Models are required to define relative times, and contain all the shift and break time information.

Select the **Create** menu item in the **Time** model context menu.

A new time model, named New time model has now been created. When it appears on screen, this entry automatically switches to "Rename" mode, as the presence of the input field reveals. Rename the entry to Workday. Should you involuntarily click anywhere else on the screen, the program exits "Rename mode" for this entry, and the model designation New time model remains. Click twice (but don't double-click!) on the New time model label to switch back to "Rename mode". You can also do this by selecting the Rename item in the relevant context menu. The designation provided must be unique throughout all of the time model group.

6.6 Step 5: Create shifts and breaks

Shifts are a decisive element in the process of defining relative switching times. This consideration not only concerns relative events such as shift start and shift end, but also the identification of production start and production end times.

Select the top cell in the shift/Break column. To create a new shift, select the create shift context menu item. Be sure to provide a unique designation for the new shift. We name the shift shift 1. With the tab key or the mouse we move to the column start time. Our shift should start at 06:00:00 a.m. and last until 06:00:00 p.m. So as a start time we enter 06:00:00 and as an end time 18:00:00.

Shifts are displayed on a grey background, whereas breaks are displayed as white areas.

Our working forces fortunately also get to take some breaks throughout the day, which we shall now define. To do so, select a cell from a line within the shift, and open the relevant context menu. To define a new break, select the **Create break** menu item. We shall call this new break **Morning**. We want our first break to start at 09:00:00 and end at 09:15:00.

We shall now proceed to create the lunch break. Designation: Lunch break; start: 12:00:00; End: 1:00:00 PM



There remains one break, namely the afternoon break, which we have yet to create. Name: Afternoon; start: 15:00:00; End:

Our model named working day should now be configured as follows:

E-Ø Anlagen	Schichten/Pausen	Einschaltzeit	Ausschaltzeit	Anmerkungen	
B B Fahrpläne	· Schicht 1	06:00:00	18:00:00		
B 3 Zeit-Modelle	Vormittag	09:00:00	09:15:00		
	Mittagspause	12:00:00	13:00:00		
🕒 🗈 Werktag 🗸 🚽	Nachmittag	15:00:00	15.15:00		

6.7 Step 6: Define holiday model

As no production takes place on bank holidays - whereas such holidays can occur on any day between Monday and Friday -, holidays require the use of a specific model. This model is very simple, as it contains no shifts. In this situation, you should always remember that a model related to a special day has priority over default models used for "usual" Monday-to-Sunday weeks. The emphasis lies on "default models". To briefly explain this, let us simply say that single-day allocations have a higher priority level than special days. A model which does not comprise any shifts possesses the same priority level as a day to which no models are linked.

As described in step 4, create a model named Holiday. No shifts whatsoever are to be defined in this model.

6.8 Step 7: User-defined event horn duration

We shall now configure the project in order to make a horn sound for 6 seconds, both at the start of shifts and breaks as well as at the end of shifts and breaks. This six-second horn tone can be defined very efficiently by means of a user-defined event.

What is a user-defiend event? User-defined events are in fact relative switching times, which are special owing to the fact that they can be defined by the user proceeding to define the project. To initiate a user-defiend event, select the **PFS**: **execute event** menu item. This function will define the execution time point for the function as a trigger for the required user-defined event. The actual execution of the event will then occur, according to any offset value you may have configured.

Now that we have broached the principle, let us proceed to the creation. Right-click on the Event entry to open the context menu, then create a new event by clicking on the Create item. The event is created with the name New user event, and the new entry automatically switches over to "Rename mode". As you recall, the procedure is very similar in style to that described in step 4, "Creating Models". Change the event's designation to Horn tone. The event's designation must be unique throughout the whole of the PFS environment.



Access the function administration area, and add the **PFS**: **execute event** function to the **Horn Tone** user-defined event.

6.9 Step 8: Thoughts about schedule structure

The project we are currently defining comprises two production lines, which we shall include in separate schedules. At the same time however, some tasks will be identical for both lines. On both lines, the lights must be switched on 10 minutes before the shift starts, and be left on for 10 minutes after the shift has ended. This will be represented in an additional, upper-level schedule. We shall here make good use of the program's capacity to hand times from previously defined schedules down to subsequent schedules. However, only the switching point in fact remains identical here, as each production line is equipped with its own lighting system. The waster water pump must also be activated, and this will follow in the additional upper-level schedule.

After this, we will still need to configure the horn. This configuration is identical on both lines, since only one horn equips both halls; hence, this will be treated in the additional upper-level schedule.

Hall schedule. Hall designation. We must configure the horn, the waste water pump and the lighting system's timing.

Schedule for Line I: Additional lower-level Hall schedule. Designation for Line I; lights must be switched on and off. Set temperature.

Schedule for Line II: Additional lower-level Hall schedule. Designation for Line II; lights must be switched on and off. Set temperature.

Now that we have established these principles, we shall create the schedules themselves.

6.10 Step 9: Schedule for the hall

The first schedule we must create contains the switching points for Hall I. In addition, it also contains all the switching times, which must be identical in the additional lower-level schedules.

Let us start by creating our first schedule. In order to do so, expand the Production & Facility Scheduler, Time model group, Hall I branches in the tree view so that the schedule entry located near time model group Hall I is visible. Right-click on the schedule entry to open the appropriate context menu, and click on the create item. The various schedule-related settings are now displayed on screen. In the field Name specify the schedule name Hall. The schedule should now be active (i.e. the checkbox Activate schedule checkbox should be selected), and should not be defined as a structure schedule (the Structure schedule checkbox should not be selected).

We must be able to execute the user-defined event Horn Tone. To do so, we will add this specific function to the list of functions used in the schedule. Right-click on the Function list entry to open the appropriate context menu, and click on the item Add function. Confirm the previously defined function



PFS - execute event [Horn tone]. This function shall now be added to the schedule's list of functions, and can be used as of now.

In addition, we want to create and save the variables Horn and Waste water pump, which will serve to activate the horn and waste water pump. To do so, we must add these variables to the schedule-specific list of variables. Open the relevant context menu, and click on the item Add variable. The list of variables that then appears onscreen enables you to add the required variables; to do so, double-click on a variable in the list of available variables, or select a variable before clicking on the button Add.

Once you have defined these actions, your schedule should be configured as follows.

ampian Eigenet	haften Kolender-Belegung	<u>0</u> K
Bezeichnung:	Halle	Abbruch
🔽 Fahrplan akt	v	Hilfe
Struktur-Fahr	plan	
Verknüpfte Vari	ablen/Funktionen:	
🖯 😋 Halle 🖯 🕢 Funkt	ionsliste	
PI PI	-S-Ereigniss anstossen - [Hupendauer] blenliste	
- 🔨 H	ibe	
	owasserpumpe	
		STI EXCIL: END

6.11 Step 10: Thoughts about the times

Times serve to define the point in time for the execution of switching points. Two different types of time are available:

Absolute time: this type requires you to directly provide a specific time. The execution time itself will not change, regardless of whether the switching point has been executed or not. Execution will only be withheld if the schedule or the switching point have been deactivated, or if the schedule has not correctly been linked to the day. This type of time is ideal when an execution time has been categorically defined.

Relative time: In this case, the effective execution time depends not only on the configured type of event, but also on the way models are positioned in the calendar, on the type of day (standard day or holiday), and a number of other factors. The execution conditions are described in detail in the Time types section. Basically, the execution point of time depends on a number of other factors, hence the "relative time" denomination. The interest in using this type of time is that, in the event where a reference needs to be modified, all related execution times will be updated automatically. However, there is also one disadvantage which users should bear in mind. Owing to the fact that the execution time is not directly displayed, times defined using this time type cannot be supervised as easily as absolute times. The switching point preview mode however provides a solution to this problem.



So, which time types should we use to meet the requirements of our task? To answer this question, let us briefly consider how and why various actions should be carried out and various elements switched on/off.

First of all, the horn. It should sound for 6 seconds whenever shifts and breaks start or end. The start of the horn tone is directly related to each shift or break. We know when the shifts and breaks start and end. Thus, it should be possible to use these times directly. However, when a shift changes, these times must be adapted; therefore, other related times (e.g. silencing the horn) will need to be adapted likewise. This can be the cause of quite a few mistakes. By using the relative times shift start, shift end, Break start and Break end, any necessary adjustments will be performed automatically. To obtain a 6-second horn tone, we shall apply a 6-second offset to our user-defined event, which will define the horn deactivation.

The production lines lighting system. These depend directly on the shift times, and shall therefore be executed as shift start and shift end.

The production lines temperatures. These also depend directly on the shift.

The waste water pump. This element should be activated at specific intervals - every 6 hours - for 30 seconds. There is no specific relation to the shifts or breaks. Therefore, absolute times are definitely recommended here.

Now that we have analysed the various execution times, we can proceed to the configuration itself.

6.12 Step 11: Times for the schedule Hall

We shall start by creating the starting time for the waste water pump operation. To do so, select the cell in the first row near the column Type of time. Open the relevant context menu, and select Create time grid; this opens a dialog, enabling you to create a time grid. Once you activate the checkbox As cyclic time, the additional fields are activated.

t-Eigenschaften				
eit-Eigenschaften				
Zyklus:	00:00	als Zyklische Z	eit	Abbruch
Passwortlevel:	0 *			Hilfe
Zyklische Eige	inschaften:			
Startzeit:	00:00:00	Endzeit:	23:59:59	in the second second

Fill in the required fields in the dialog according to the screen capture above. With our settings four absolute times are created. Midnight, 6:00 a.m., noon and 6:00 p.m.

30 seconds after activation, the pump must be switched off. Therefore, we shall now define another 4 switching times, applying, as we do so, a 30-second offset to the times we have already set. To obtain this offset, specify 00:00:30 as a start time.



We shall now proceed to configure the horn. Right-click on the table view to open the relevant context menu, and select create time. A new absolute time period has now been created. However, we now require a relative time. Switch over to the Type of time column in the same line, and change the time type to Relative. Now, if you change back to the column Time, the time indication disappears, and a list box containing the available relative events is activated. Select the event shift start. The offset value remains 0, as the horn must be activated immediately at the start of the shift. The horn must not only announce shift starts, but should also sound at shift ends, break starts and break ends. Therefore, create 3 additional relative times with the matching relative events. The horn should be switched off 6 seconds after being activated. To configure this, add a relative time with the relative event Horn Tone to the list. Horn Tone is the user-defined event we previously defined. Specify a 0.1 minute offset, i.e. 6 seconds. This value defines the horn tone duration.

We shall now deal with the heating issue. Create 2 relative times - for the shift start, use offset values of -120 and -60, respectively.

We are still missing the activation times for the lighting system. Create 2 relative times - for the shift start, use an offset value of -10, and for the shift end, use an offset value of 10.

Zeittyp	Uhrzeit	Offset	Aktiv	Verknüpfungstyp	Verknüpfungen	1
Absolute Zeit 🛃	00.00.00	0,00	1			
Absolute Zeit	00:00:30	0,00				
Absolute Zeit	06:00:00	0,00				
Absolute Zek	06:00:30	0,00				
Absolute Zeit	12:00:00	0,00				
Absolute Zeit	12:00:30	0,00				
Absolute Zeit	18:00:00	0,00				
Absolute Zeit	18:00:30	0,00				
Relative Zeit	Pausenende	0,00				
Relative Zeit	Hupendauer	0,10				
Relative Zeit	Pausenbeginn	0,00				
Relative Zeit	Schichtende	0,00				
Relative Zeit	Schichtbeginn	-120,00				
Relative Zeit	Schichtende	10,00				
Relative Zeit	Schichtbeginn	-10,00				
Relative Zeit	Schichtbeginn	-60,00				
Relative Zeit	Schichtbeginn	0.00				

6.13 Step 12: Switching points schedule Hall

We have used times to define moments at which events are executed, and must now define what will actually happen at the specified time. This is what switching times are used for.

Let us begin with the waste water pump. Select the absolute time period 00:00:00. In the context neu click the entry **Create** switching point. A new line is added just after the selected time; this line represents the switching point. Switching points contain the following columns: Active, Type of link, Links, Action and Password. Let us take a quick look at these fields.

Active: This field enables you to deactivate a switching point. You can use it to block a switching point's execution.

Type of link: This field specifies if a variable must be modified, for instance, or if a function must be performed. The other types of links are broached in the Switching point object section.

Links: According to the selected type of link, this field enables users to select the required variable or function.



Action: When the Variable link type is selected, this field contains the set value which must be written. When dealing with functions, this field is just as important as the Active field.

Password: Enables specific permissions to be requested for the configuration of the Runtime environment.

We shall now proceed to define the switching point. The currently selected column is Type of link. Select the item Variable from the list box. Now, change to the column Links. Select the Waste water pump from the list box. Now, change over to the column Action. In this column, specify a value of "1". This means that at 00:00:00, the set value will be set to 1 for the Waste water pump variable.

Now, create the following switching points, proceeding as described above:

- ▶ 12:00:30 AM Variable: Waste water pump; Set value: 0
- 6:00:00 AM Variable: Waste water pump; Set value: 1
- ▶ 6:00:30 AM Variable: Waste water pump; Set value: 0
- ▶ 12:00:00 PM Variable: Waste water pump; Set value: 1
- ▶ 12:00:30 PM Variable: Waste water pump; Set value: 0
- 6:00:30 PM Variable: Waste water pump; Set value: 1
- ▶ 6:00:30 PM Variable: Waste water pump; Set value: 0



We shall now deal with the horn. As you recall, we have defined a number of relative times for the horn. Shift start offset 0, Shift end offset 0, Break start offset 0, Break end offset 0 and Horn Tone offset 0,1. Two switching points must be executed for the horn tone start and end, respectively. The first switching point activates the horn. The second switching point triggers the user-defined event Horn Tone. The relative time Horn Tone must then deactivate the horn. So, let us proceed to create the required switching points. Unlike the waste water pump configuration above, this configuration uses 4 different times, thus requiring several switching points. For instance, for the time shift start offset 0 we could activate the Create switching points function twice consecutively. However, a more convenient solution is provided. To do this select the time shift start offset 0. In the context menu activate Add switching points. The program now displays the Create switching points dialog. Select the function **PFS** Event [Horn Tone] and the variable Horn. Then click on Add to effectively add these to the results list. After you have clicked on ox, two switching points using the relevant Type and Link parameters will be created. You must still set the set value to 1 for the switching point variable Horn. Now, use the same method to define the switching points for the relative times Shift end, Break start and Break end. We shall now create the final switching point for the horn by defining for the relative time Horn tone a switching point which will sets the variable Horn to 0.

Absolute Z 1 000000 0,00 Image: Constraint of the second		Zeittyp	Uhrzeit	Offset	Aktiv	Verknüpfungstyp	Verknüpfungen	Aktion	Passw
Absolute Zeit 00.00.30 0.00 FR Variable Absolute Zeit 0 Absolute Zeit 00.00.00 00 FR Variable Absolute Zeit 0 Absolute Zeit 00.00.00 FR Variable Absolute Zeit 0 0 Absolute Zeit 00.00.00 FR Variable Absolute Zeit 12.00.00 0.00 Absolute Zeit 12.00.00 0.00 FR Variable Absolute Zeit 12.00.00 0.00 Absolute Zeit 12.00.00 0.00 FR Variable Absolute Zeit 18.00.00 0.00 Absolute Zeit 18.00.00 0.00 FR Variable Absolute Zeit 18.00.00 0.00 Absolute Zeit 18.00.00 0.00 FR Variable Absolute Zeit 18.00.00 0.00 Relative Zeit Schichtende 10.00 FR Variable Absolute Zeit Absolute Zeit Schichtende 10.00 FR FR Fr FR Fr FR		Absolute Z 🛓	00.00.00	0,00	1				
Absolute Zeit D6 00.00 0.00 F Vaiiable Absolute Zeit 0 0.00 Absolute Zeit 0 0.00 0.00 F Vaiiable Absolute Zeit 12.00.00 0.00 Absolute Zeit 12.00.00 0.00 FK Vaiiable Absolute Zeit 12.00.00 0.00 Absolute Zeit 12.00.30 0.00 FK Vaiiable Absolute Zeit 12.00.30 0.00 Absolute Zeit 12.00.30 0.00 FK Vaiiable Absolute Zeit 18.00.00 0.00 Absolute Zeit 18.00.00 0.00 FK Vaiiable Absolute Zeit 18.00.00 0.00 Absolute Zeit 18.00.00 0.00 FK Vaiiable Absolute Zeit 10.00 Relative Zeit Schichteginn 10.00 FK Vaiiable Absolute Zeit Schichteginn 10.00 Palative Zeit Schichteginn 10.00 FK Vaiiable Hupendaue Aktiv FK Vaiiable Funktion FS Ereigris					x	Variable	Abwasserpumpe	1	0
Absolute Zeit 06:00:00 0.00 F Variable Absolute Zeit 06:00:30 0.00 Absolute Zeit 06:00:30 0.00 FK Variable Absolute Zeit 1 Absolute Zeit 12:00:00 0.00 FK Variable Absolute Zeit 12:00:00 0.00 Absolute Zeit 12:00:00 0.00 FK Variable Absolute Zeit 12:00:00 0.00 Absolute Zeit 12:00:00 0.00 FK Variable Absolute Zeit 12:00:00 0.00 Absolute Zeit 18:00:00 0.00 FK Variable Absolute Zeit 10:00:00 Relative Zeit Schichteighn 10:00 FK Variable Absolute Zeit Schichteighn 0.00 Relative Zeit Schichteighn 10:00 FK Variable Hupe 1 Relative Zeit Schichteighn 0:00 FK Funktion FS Ereigniss anstossen - [Hupendaue Aktiv Relative Zeit Pausenende 0:00 FK	4	Absolute Zeit	00:00:30	0,00					
Absolute Zeit 06:00.30 00.00 FK Variable Absolute Zeit 1200.00 0.00 1 Absolute Zeit 1200.00 0.00 FK Variable Absolute Zeit 1200.00 0.00 1 1 Absolute Zeit 1200.00 0.00 FK Variable Absolute Zeit 1200.00 0 1 Absolute Zeit 1200.00 0.00 FK Variable Absolute Zeit 1200.00 0 1 Absolute Zeit 1800.00 0.00 FK Variable Absolute Zeit 1800.00 0 1 Absolute Zeit 1800.00 0.00 FK Variable Absolute Zeit 10.00 1 1 Absolute Zeit Schrichterder 10.00 1 <					X	Variable	Abwasserpumpe	0	0
Absolute Zeit 06 00 30 0.00 FK Vaiable Abwasserpumpe 0 Absolute Zeit 12 00 00 0.00 FK Vaiable Abwasserpumpe 1 Absolute Zeit 12 00 30 0.00 FK Vaiable Abwasserpumpe 1 Absolute Zeit 12 00 30 0.00 FK Vaiable Abwasserpumpe 0 Absolute Zeit 18 00 00 0.00 FK Vaiable Abwasserpumpe 0 Absolute Zeit 18 00 00 0.00 FK Vaiable Abwasserpumpe 0 Absolute Zeit Schichterdet 10.00 FK Vaiable Abwasserpumpe 0 Relative Zeit Schichtberginn 60.00 FK Vaiable Abwasserpumpe 0 Relative Zeit Schichtberginn 60.00 FK Vaiable Hupendaue Aktiv R Vaiable Furktion FS Ereigriss anstossen - [Hupendaue Aktiv FK Vaiable Hupe 1 1 <	•	Absolute Zeit	06:00:00	0,00					
Absolute Zeit 12 00.00 K Variable Absolute Zeit 12 00.00 0 Absolute Zeit 1 2 00.00 0.00 K Variable Abwasserpumpe 1 Absolute Zeit 1 2 00.00 0.00 K Variable Abwasserpumpe 0 Absolute Zeit 1 8 00.00 0.00 K Variable Abwasserpumpe 0 Absolute Zeit 1 8 00.00 0.00 K Variable Abwasserpumpe 1 Absolute Zeit 1 8 00.00 0.00 K Variable Abwasserpumpe 1 Absolute Zeit Schichtbeginn 10.00 K Variable Abwasserpumpe 0 Relative Zeit Schichtbeginn 10.00 K Funktion FS Ereigniss anstossen - [Hupendaue Aktiv Relative Zeit Schichtbeginn 0.00 K Variable Hupe 1 Relative Zeit Pausenende 0.00 K Variable Hupe 1 Relative Zeit Hupendauer <t< td=""><td></td><td></td><td></td><td></td><td>x</td><td>Variable</td><td>Abwasserpumpe</td><td>1</td><td>0</td></t<>					x	Variable	Abwasserpumpe	1	0
Absolute Zeit 12 00 00 IR Variable Absolute Zeit 12 00 30 00 Absolute Zeit 12 00 30 0.00 IR Variable Absolute Zeit 12 00 30 0.00 Absolute Zeit 18 00 00 0.00 IR Variable Absolute Zeit 18 00 00 0.00 Absolute Zeit 18 00 30 0.00 IR Variable Absolute Zeit 10.00 IR Pelative Zeit Schichtende 10.00 IR Absolute Zeit Schichteginn 10.00 Relative Zeit Schichteginn 10.00 IR Absolute Zeit Schichteginn 10.00 Relative Zeit Schichteginn 10.00 IR Variable Hupen Zeit Ativ IR Pausenende 0.00 IR Variable Hupe 1 Relative Zeit Pausenende 0.00 IR Variable Hupe 1 Relative Zeit Hupendaue 0.10 IR Variable Hupe 1 <td< td=""><td>•</td><td>Absolute Zeit</td><td>06.00.30</td><td>0.00</td><td></td><td></td><td>10000000000000000000000000000000000000</td><td></td><td></td></td<>	•	Absolute Zeit	06.00.30	0.00			10000000000000000000000000000000000000		
File File Variable Absolute Zeit 120.30 0.00 1 Absolute Zeit 120.30 0.00 File Absolute Zeit 18.00.00 0.00 1 Absolute Zeit 18.00.30 0.00 File Absolute Zeit 18.00.30 0.00 Absolute Zeit 18.00.30 0.00 File Absolute Zeit 18.00.30 0.00 Relative Zeit Schichtende 10.00 File Absolute Zeit Schichteginn 10.00 Relative Zeit Schichteginn 10.00 File File <td></td> <td></td> <td></td> <td></td> <td>X</td> <td>Variable</td> <td>Abwasserpumpe</td> <td>0</td> <td>0</td>					X	Variable	Abwasserpumpe	0	0
Absolute Zeit 12:00:30 0,00 FR Variable Absolute Zeit 12:00:30 0,00 Absolute Zeit 18:00:00 00 FR Variable Absolute Zeit 18:00:00 0 Absolute Zeit 18:00:30 0,00 FR Variable Absolute Zeit 18:00:30 0,00 Relative Zeit Schichtende 10:00 FR Variable Absolute Zeit Schichtegran 0.00 Relative Zeit Schichtegran 10:00 FR Variable Absolute Zeit Schichtegran 60:00 Relative Zeit Schichtegran 0.00 FR Funktion FS Ereigniss anstossen - [Hupendaue Aktiv Relative Zeit Pausenende 0.00 FR Variable Hupe 1 Relative Zeit Hupendauer 0.10 FR Variable Hupe 1 Relative Zeit Hupendauer 0.00 FR Variable Hupe 1 Relative Zeit Hupendauer 0.00 FR Variable<	•	Absolute Zeit	12:00:00	0,00					
Absolute Zeit 18 0.00 00 0 Absolute Zeit 18 0.00 0.00 K Variable Abwasserpumpe 1 Absolute Zeit Schichtende 10.00 Relative Zeit Schichterde 10.00 Relative Zeit Schichteginn 10.00 Relative Zeit Schichtbeginn 10.00 Relative Zeit Schichtbeginn 10.00 Relative Zeit Schichtbeginn 0.00 <					x	Variable	Abwasserpumpe	1	0
Absolute Zeit 18 00.00 0.00 F Variable Abwasserpumpe 1 Absolute Zeit 18 00.30 0.00 F Variable Abwasserpumpe 1 Absolute Zeit 18 00.30 0.00 F Variable Abwasserpumpe 0 Relative Zeit Schichtende 10.00 F F F F Relative Zeit Schichtbeginn 10.00 F F F F Relative Zeit Schichtbeginn 60.00 F	•	Absolute Zeit	12:00:30	0,00					
Absolute Zeit 18 00.30 0.00 F Variable Absolute Zeit 1 Absolute Zeit 18 00.30 0.00 F Absolute Zeit 10.00 1 Relative Zeit Schichtlende 10.00 F Absolute Zeit Schichtlende 10.00 Relative Zeit Schichtlengen 10.00 F 1 1 Relative Zeit Schichtlengen 0.00 F 1 1 Relative Zeit Schichtlengen 0.00 F 1 1 Relative Zeit Schichtlengen 0.00 F 1 1 Relative Zeit Pausenende 0.00 F 1 1 Relative Zeit Pausenende 0.00 F 1 <td></td> <td></td> <td></td> <td></td> <td>x</td> <td>Variable</td> <td>Abwasserpumpe</td> <td>0</td> <td>0</td>					x	Variable	Abwasserpumpe	0	0
Absolute Zeit 18 00.30 0.00 FX Variable Abwasserpumpe 0 Relative Zeit Schichtende 10.00 FX Variable Abwasserpumpe 0 Relative Zeit Schichtende 10.00 FX Variable Abwasserpumpe 0 Relative Zeit Schichterigen 10.00 FX FX FX FX Relative Zeit Schichteginn 60.00 FX FX FX FX Relative Zeit Pausenede 0.00 FX FX Variable Hupe 1 Relative Zeit Pausenede 0.00 FX FX Variable Hupe 1 Relative Zeit Hupendauer 0.10 FX Variable Hupe 1 Relative Zeit Pausenbeginn 0.00 FX Funktion FS Ereigniss anstossen - [Hupendauer 0 FX Variable Funktion FS Ereigniss anstossen - [Hupendauer 1 1 Relative Zeit Schichtende 0.0	<u>с</u>	Absolute Zeit	18:00:00	0,00					
Image: Problem in the second secon					X	Variable	Abwasserpumpe	1	0
Relative Zeit Schichtende 10,00 Image: Constraint of the second seco	•	Absolute Zeit	18:00:30	0,00			13 · · · · · · · · · · · · · · · · · · ·		
Relative Zeit Schichtberginn 10,00					x	Variable	Abwasserpumpe	0	0
Relative Zeit Schrichtberginn 60.00 Relative Zeit Schrichtberginn 60.00 Relative Zeit Schrichtberginn 60.00 Relative Zeit Pausenende 0.00 Relative Zeit Pausenende 0.00 Relative Zeit Pausenende 0.00 Relative Zeit Hupendauer 0.10 Relative Zeit Pausenbegrin 0.00 Relative Zeit Pausenbegrin 0.00 Relative Zeit Pausenbegrin 0.00 Relative Zeit Pausenbegrin 0.00 Relative Zeit Schichtende 0.00 Relative Zeit Schichtende 0.00 Relative Zeit Schichtende 0.00 Relative Zeit Schichtende 0.00		Relative Zeit	Schichtende	10,00					
Relative Zeit Schichtbeginn 0.00 Filt IV IV IV Funktion FS Ereigniss anstossen (Hupendaue Aktiv) IV Vaiable Hupe 1 Relative Zeit Pausenende 0.00 IV IV IV Vaiable Hupe 1 Relative Zeit Hupendauer 0.10 IV IV IV Vaiable Hupe 0 IV Relative Zeit Hupendauer 0.10 IV IV IV Relative Zeit Pausenbeginn 0.00 IV IV IV Relative Zeit Pausenbeginn 0.00 IV IV IV IV Relative Zeit Schichtende 0.00 IV IV IV IV Relative Zeit Schichtende 0.00 IV IV IV IV Relative Zeit Schichtende 0.00 IV IV IV IV IV Relative Zeit Schichtende 0.00 IV IV IV IV IV Risk Vaiable Function FS Ereigriss anstossen - [Hupendaue Aktiv IV IV Risk Vaiable Hupe IV IV		Relative Zeit	Schichtbeginn	-10,00					
IX Funktion FS Ereigniss anstossen - [Hupendaue Aktiv Relative Zeit Pausenende 00 1 1 Relative Zeit Pausenende 00 IX Funktion FS Ereigniss anstossen - [Hupendaue Aktiv Relative Zeit Hupendauer 0.00 IX Funktion FS Ereigniss anstossen - [Hupendaue Aktiv Relative Zeit Hupendauer 0.00 IX Variable Hupe 0 Relative Zeit Pausenbegin 0.00 IX Funktion FS Ereigniss anstossen - [Hupendaue Aktiv IX Variable Hupe 1 1 Aktiv IX Funktion FS Ereigniss anstossen - [Hupendaue Aktiv IX Variable Hupe 1 1 IX Funktion FS Ereigniss anstossen - [Hupendaue Aktiv IX Variable Hupe 1 1 IX Funktion FS Ereigniss anstossen - [Hupendaue Aktiv		Relative Zeit	Schichtbeginn	-60,00					
Relative Zeit Pausenende 0,00 R Variable Hupe 1 - Relative Zeit Pausenende 0,00 FX Funktion FS Ereigniss anstossen - [Hupendaue Aktiv - Relative Zeit Hupendauer 0,10 FX Variable Hupe 1 - Relative Zeit Pausenbeginn 0,00 FX Variable Hupe 0 - Relative Zeit Pausenbeginn 0,00 FX Variable Hupe 0 - Relative Zeit Schichtende 0,00 FX Variable Hupe 1 - Relative Zeit Schichtende 0,00 FX Variable Hupe 1 - Relative Zeit Schichtende 0,00 FX Variable Hupe 4	-	Relative Zeit	Schichtbeginn	0,00					
- Relative Zeit Pausenende 0,00 IX Funktion FS-Ereigniss anstossen - [Hupendaue Aktiv - Relative Zeit Hupendauer 0,10 IX Variable Hupe 1 - Relative Zeit Pausenbeginn 0,00 IX Variable Hupe 0 - Relative Zeit Pausenbeginn 0,00 IX Funktion FS-Ereigniss anstossen - [Hupendaue Aktiv - Relative Zeit Schichtende 0,00 IX Variable Hupe 1 - Relative Zeit Schichtende 0,00 IX Variable Hupe 1						Funktion	FS-Ereigniss anstossen - [Hupendaue	Aktiv	0
Image: state in the s					x	Variable	Hupe	1	0
Relative Zeit Hupendauer 0,10 R Variable Hupe 1 Relative Zeit Pausenbeginn 0,00 IfX Variable Hupe 0 Relative Zeit Pausenbeginn 0,00 IfX Funktion FS.Ereigniss anstossen (Hupendaue Aktiv IfX Variable Hupe 0 IfX Variable Hupe 1 - Relative Zeit Schichtende 0,00 IfX Funktion FS.Ereigniss anstossen (Hupendaue Aktiv IfX Variable Hupe 1 IfX Variable Hupe 1	•	Relative Zeit	Pausenende	0,00					
Relative Zeit Hupendauer 0,10 IX Relative Zeit Pausenbeginn 0,00 IX Funktion FS-Ereigniss anstossen - [Hupendaue Relative Zeit Schichtende 0,00 IX Vaniable Hupe						Funktion	FS-Ereigniss anstossen - [Hupendaue	Aktiv	0
Relative Zeit Pausenbegin 0.00 Relative Zeit Pausenbegin 0.00 IX Funktion FS Ereigniss anstossen - [Hupendaue IX Variable Hupe IX Funktion FS Ereigniss anstossen - [Hupendaue IX Variable Hupe IX Funktion FS Ereigniss anstossen - [Hupendaue IX Funktion FS Ereigniss anstossen - [Hupendaue IX Funktion FS Ereigniss anstossen - [Hupendaue					x	Variable	Hupe	1	0
Relative Zeit Pausenbeginn 0.00 I I Relative Zeit Schichtende I Relative Zeit Schichtende I I		Relative Zeit	Hupendauer	0,10					
FX Funktion FS-Ereigniss anstossen - [Hupendaue Aktiv IX Vaiable Hupe 1 - Relative Zeit Schichtende 0,00 IX FS-Ereigniss anstossen - [Hupendaue Aktiv IX Vaiable FS-Ereigniss anstossen - [Hupendaue Aktiv III III					X	Variable	Hupe	0	0
Relative Zeit Schichtende ØX Variable Hupe 1 • Relative Zeit Schichtende 0,00 FX Funktion FS Ereigniss enstossen - [Hupendoue Aktiv • ØX Variable Hupe 1 1	-	Relative Zeit	Pausenbeginn	0,00					
Relative Zeit Schichtende 0,00 IX Funktion FS-Ereigniss anstossen (Hupendaue Aktiv IX IX Variable Hupe 1						Funktion	FS-Ereigniss anstossen - [Hupendaue	Aktiv	0
IX Funktion FS-Ereigniss anstossen - [Hupendaue Aktiv IX Variable Hupe 1					x	Variable	Hupe	1	0
Variable Hupe 1	•	Relative Zeit	Schichtende	0,00					
						Funktion	FS-Ereigniss anstossen - [Hupendaue	Aktiv	0
					X	Variable	Hupe	1	0
Helative Zeit Schichtbeginn -120,00		Relative Zeit	Schichtbeginn	-120,00					
									18

Information

A decimal value can be entered with a colon as well as with a point, the decimal point will automatically be changed to a point.



6.14 Step 13: Schedule line I

When we previously considered the facility's structure, we decided to deal with the temperature and lighting system in additional, lower-level schedules.

Thus, we shall now create the schedule for Line I. To do so, select the schedule Hall in the tree view. Open the context menu and select Create to activate the Schedule Properties dialog, as we have already discussed. The Name should be Line I, and we shall not add any variables to the contents already provided. This section will provide the opportunity to learn about the subsequent modification of variable and function links.

Select Line I in the new schedule and the variable list in the tree view. We link the variable Light i and Heating P I with the schedule via the context menu and Add variable.

When you select schedule Line I, all times defined in previous schedules are displayed on a grey background in the table. Times displayed on a grey background identify times that have been "inherited" from previously defined schedules. If a previously defined item is altered in the "parent" schedule, times in the "child" schedules will be updated automatically.

We shall now define the switching times for the Temperature and Lighting system elements. To do so, proceed as you did in the schedule Hall.

Zeit	typ	Uhrzeit	Offset	Aktiv	Verknüpfungstyp	Verknüpfungen	Aktion	owase
Absolut	e Zeit	00:00:00	0,00	:				
Absolut	e Zeit	00.00.30	0.00					
Absolut	le Zeit	06:00:00	0,00					
Absolut	e Zeit	06:00:30	0,00					
Absolut	e Zeit	12:00:00	0,00					
Absolut	e Zeit	12:00:30	0,00					
Absolut	e Zeit	18.00.00	0,00					
Absolut	te Zeit	18:00:30	0,00					
Relativ	e Zeit	Schichtende	10,00					
				×	Variable	Licht I	0	0
Relativ	e Zeit	Schichtbeginn	-10,00					
				×	Variable	Licht I	1	0
Relativ	e Zeit	Schichtbeginn	-60,00					
Relativ	e Zeit	Schichtbeginn	0,00					
Relativ	eZek	Pausenende	0.00					
Relativ	e Zeit	Hupendauer	0,10					
Relativ	e Zek	Pausenbeginn	0.00					
Relativ	e Zeit	Schichtende	0,00					
				x	Variable	Heizung PI	20	0
Relativ	e Zeit	Schichtbeginn	-120,00					
				x	Variable	Heizung P I	83	0



6.15 Step 14: Schedule line II

Create a new schedule, named Line II, with the identical purpose of managing switching points.

Zeittyp	Uhrzeit	Offset	Aktiv	Verknüpfungstyp	Verknüpfungen	Aktion	Passwor
Absolute Zeit	00.00.00	0,00					
Absolute Zeit	00.00.30	0,00					
Absolute Zeit	06:00:00	0,00					
Absolute Zeit	06:00:30	0.00					
Absolute Zeit	12:00:00	0,00					
Absolute Zeit	12:00:30	0,00					
Absolute Zeit	18:00:00	0,00					
Absolute Zeit	18:00:30	0,00					W
Relative Zeit	Schichtende	10,00					
			×	Variable	Licht II	0	0
Relative Zeit	Schichtbeginn	-10,00					
	· · · · · · · · · · · · · · · · · · ·		×	Variable	Licht II	1	0
Relative Zeit	Schichtbeginn	-60,00					
			×	Variable	Heizung P II	43	0
Relative Zeit	Schichtbeginn	0,00					i modolimi
Relative Zeit	Pausenende	0.00					
Relative Zeit	Pausenbeginn	0,00					0.000
Relative Zeit	Schichtende	0.00					
- manage rear			×	Variable	Heizung P II	20	0
Relative Zeit	Hupendauer	0,10					
Relative Zeit	Schichtbeginn	-120,00					

6.16 Step 15: Thoughts about calendar allocation

Times defined in schedules are not related to any dates; these relations will be defined by allocating the times to days in a calendar. This allocation process must be carried out separately for absolute and relative times. Allocations can be carried out for each separate time model group.

6.16.1 Absolute times

When dealing with absolute times, the linking of the schedule to specific calendar days is a decisive element. In this case, the following types of links are supported:

Use schedule on this day.		
Do not use schedule on this day.		
Use schedule on this holiday.		
Use schedule on weekdays.		

6.16.2 Relative times

When dealing with relative times, the allocation of a model to a day is as decisive an aspect as the shifts defined within the model. In this case, the following types of links are supported:



Use model on this day.

Use holiday model if the concerned day is a holiday

Use model on weekdays.

6.17 Step 16: Execute calendar allocation

Select the entry calendar in the tree view. The table now displays the current month. Each week comprises the Model - Hall I and Schedule - Hall I lines; select the Schedule - Hall I cell for Monday. Access the appropriate context menu, and select the Selecting schedules item to activate the schedule selection dialog. Select the schedule Hall, then click on the button Add to add this item to the results list. The complete identification Hall I. Hall, as derived from the schedule, is now displayed. Exit the dialog by clicking on ok; the Duration of series dialog is now displayed onscreen. Our schedule must be executed on a weekly basis, without any defined ending date, on days from Monday to Sunday. To define allocations to special days, access the Properties of the schedule Hall Calendar filling. This section also enables you to perform weekday allocation tasks. No calendar filling is necessary for schedules Line I and Line II, as these schedules do not use any switching points with absolute times.

Relative times will require model allocation tasks to be carried out, which we will proceed with as follows. Select the cell Model Hall I Monday. Access the appropriate context menu, and select select model to activate the model linking dialog. Select the model Workday, then add this item to the results list. Click on OK to close the dialog; you will be asked to confirm whether this model should be defined as a default. Click on Yes: this model will now be linked to every Monday. If you click on No, the model will only be linked to this particular Monday. We shall activate this model for every Monday. You can now repeat this process for weekdays from Tuesday to Friday. However, a simpler possibility would be to access the page Properties - Calendar filling for time model group Hall I, and to proceed with allocations from there. Select the model Workday for weekdays ranging from Tuesdays to Fridays, and select the model Holiday for special days. If you now switch back to the calendar view, you will see which models are allocated to which days.

	Montag	Dienstag	Mittwoch	Donnerstag	Freitag	Samstag	Sonntag
The second s	1	2	3	4	5	6	7
Modelle - Halle I	Werktag	Weiktag	Werktag	Werktag	Weiktag	00000000000	
Fahrpläne - Halle I	Hale I.Halle;	Halle I.Halle;	Halle I.Halle;	Halle I.Halle;	Halle I.Halle;	Halle I.Halle;	Halle I.Halle;
	8	9	10	11	12	13	14
Modelle - Halle I	Werktag	Werktag	Werktag	Werktag	Werktag	0.000.000000000000000000000000000000000	
Fahrpläne - Halle I	Halle I.Halle;	Halle I.Halle;	Halle I.Halle;	Halle I.Halle;	Halle I.Halle;	Halle I.Halle;	Halle I.Halle;
	15	16	17	18	19	20	21
Modelle - Halle I	Werktag	Weiklag	Werktag	Werktag	Werktag		
Fahrpläne - Hale I	Hale I.Hale;	Halle I.Halle;	Halle I.Halle;	Halle I.Halle:	Halle I.Halle;	Halle I.Halle;	Halle I.Halle;
	22	23	24	25 -	Nationalfeiertag	2734	Wi Umschaltung
Modelle - Halle I	Werktag	Werktag	Werktag	Werktag	Feiertag		
Fahrpläne - Halle 1	Halle I.Halle;	Halle I.Halle;	Halle I.Halle;	Halle I.Halle;	Hale I.Halle;	Halle I.Halle;	Halle I.Halle;
	29	30	31	1 - Allerheiligen	2	3	4
Modelle - Halle I	Werktag	Weiktag	Werktag	Feiertag	Werklag		
	Hale I. Hale:	Hale I.Hale:	Hale I.Hale:	Hale I. Hale:	Hale I.Hale:	Halle L Halle:	Hale I.Hale:



6.18 Step 17: Checking the engineering

The Editor allows you to check over the current schedule configuration and calendar filling. To do so, you will use the switching point overview mode. This preview mode enables you to view any requested period of time, including past periods.

6.19 Step 18: PFS in the Runtime

In the Runtime environment, the activated switching points are processed and executed second by second. This process begins when the Runtime environment is started up, and remains active until the Runtime environment is closed.

The PFS also enables you to proceed to the entire configuration within the Runtime environment, which differs only slightly from the Editor.

The main differences are as follows:

- Auhtorization for viewing, modifying, adding and deleting entries is active.
- Context menu functions can be activated in the screen type by means of switches.
- The switching point preview mode displays user-defined events with reference to the event's existing triggering times.
- Saving a modified configuration activates these triggering times instantaneously.

For our Runtime environment tests, we will configure:

- ► A starting screen using the screen type **Standard**.
- ▶ A PFS screen using the screen type Production and Facility Scheduler.
- ▶ In the PFS screen, the default objects.
- ► In the start screen, a button which activates the "Screen: Switch to" function to switch over to the PFS screen. We shall not broach filter settings at this point.
- ▶ In the start screen, several display fields, which will be used to display the variables' states.

6.20 Step 19: Execution in the Runtime

When executing an absolute switching point, date and time indications are decisive. Relative and absolute times, which bear no relation to dates, are defined - using the calendar filling process - in relation to absolute switching times. To proceed to our tests now, we will have to change the system time - the alternative being that you have a lot of time on your hands, and can afford to wait for the end of the day!



The PFS is well aware of any changes made to the time, and such alterations can therefore, according to the current configuration and actual change in time, generate diverse reactions. For proof, let us take a look at the **Properties** section of the **Production & Facility Scheduler**. The **Time change** page defines the way the PFS will react when the time is changed.

6.20.1 Positive time change

The Make up for switching points command initiates the execution of the switching points comprised in the period of time ranging from the command's execution to the corrected time, until the moment matching the new (i.e. corrected) time is reached.

The Recalculate switching points control initiates a recalculation of the switching points, proceeding from the corrected time onwards. Any switching points comprised in the period ranging from the command's execution time to the new (i.e. corrected) time are not executed.

6.20.2 Negative time change

The Reject switching points command does not initiate any new calculations; thus, switching points will only be executed again once the command's execution time (i.e. former time) has been reached.

The Recalculate switching points control redefines the absolute switching points, proceeding from the corrected time onwards. With this command, the switching points will be executed again.

The above statements related to time correction issues are only applicable as long as the Runtime environment has not been closed down. In the event of a restart, the calculation of all switching points will always occur on the basis of the current system time. In addition, any corrections made to the system time must be greater than the time tolerance defined in the program.

Bearing in mind the way the PFS reacts in the event of change of time, we recommend that you only "increase" (i.e. proceed to "positive" time changes) the time when attempting to check over a configuration you have created. If you need to reinitialise the time, close the Runtime environment, change the time, and restart the Runtime environment.

For the time being, restart the Runtime environment, and change the time. For the sake of testing, a particularly "exciting" moment occurs at 12 o'clock: at this time indeed, the horn must be activated for 6 seconds. Test this function.

As we have only one trigger defined for the Horn Tone user-defined event, only the execution time point appears in the switching point overview. Execution time point: 12:00:06.



6.21 Step 20: Resume

Throughout these 20 steps, we have learned about the basics of the PFS. You should now be able to create your own PFS projects.

The separation of the switching times into 3 schedules is not mandatory; we proceeded this way in order to illustrate the possibility of using "inherited" (i.e. previously defined) times. Had we used only one schedule, the configuration process would have required fewer operations.

Here is a short recap of the required steps:

- 1. Create user-defined events.
- 2. Creating the time model group
- 3. Create the models.
- 4. Create the schedule.
- 5. Create the absolute times.
- 6. Create the relative times.
- 7. Create the switching points.
- 8. Link the schedule to the calendar for the absolute times.
- 9. Link the models to the calendar for the relative times.

7. Advanced configuration in the Production and Facility Scheduler

7.1 Drag&Drop

Objects can be moved quickly and easily from one to another via drag&drop. Basically, this process is equivalent to a cut and paste operation. You must be aware that objects can only be moved towards objects of similar nature. The mouse pointer will visually indicate whether you can drop an object or not. If you attempt to drop an object on a forbidden target, the process is cancelled. This detail can prove useful, for instance if you have accidentally selected and started dragging an unrequested object to another branch in the tree view.



7.2 Filtering the PFS configuration

As the number of time model groups, models, schedules and switching times grows, you will find it harder to find a specific object, or to display a relevant detailed overview. A filtering function has been designed to lessen this problem. In the tree view window, select the Filter criteria item in the Production & Facility Scheduler context menu to activate the Filter dialog. You can read more specifically about the Filter dialog in the PFS filter dialog (on page 71) section; for the time being, we will concentrate on utilizing the function.

Filtering is only performed on the actual display of objects. An object which does not match the filter is not be displayed. However it still exist. This indication should clear any misunderstanding that may arise - for instance, when a new schedule is created, and its name is added to a filtered schedule. This situation will indeed display an error message stating that the specified name already exists.

If new objects are created that do not correspond to the filter, these remain visible until the display is next updated. For example, the creation of a time that is outside of the filter. As long as you do not exit the current schedule, this time will remain visible. However, when the screen is next updated, the specified time will disappear - but it nonetheless remains available. The filter is first reused when the display is called up again.

Linked schedules and models within the calendar can be filtered in the same way.

7.3 Mass processing

Now, who has never run into the following problem: All absolute times between 06:00:00 a.m. and 08:00:00 p.m. should be moved by 00:43:25. Then you sit there, calculate and correct all the times, and that perhaps for a dozen of times. Mass processing was integrated to the PFS in order to meet such requirements. This function enables users to make changes to selected cells on a specific schedule level, according to the required type of column. The problem we previously mentioned can therefore be solved with just a few mouse clicks and data inputs.

By using this function in conjunction with filters, you can efficiently reduce the number of elements you wish to modify.

The following columns support the mass processing function:



Parameters	Description
Type of time	Enables you to change the type of time used.
Time	For absolute times the time can be changed. To do this open the dialog Change time.
Offset	For relative times the offset can be changed. To do this open the dialog Change offset.
Active	Allows you to change the activation status.
Action	Depending on the type of link, the activation or the macro to be executed can be changed. To do this open the dialog Change value.

7.4 Structure schedules

Structure schedules are used to create a visual structure for schedules in the tree view. A schedule becomes a structure schedule when you activate the structure schedule checkbox in the schedule properties dialog.

Structure schedules have no allocated variables or functions, nor do they have any allocated times or switching points. Structure schedules can replicate lower-level additional schedules, thus visually creating a logical congruence with these.

7.5 Configuring Screen switch for PFS windows

When used on PFS screens, the filter dialog for the Screen: Switch to function allows you to define which type of data you wish to display, and to customise the table display accordingly.

Parameters	Description
Filtering the tree view	Select the object you wish to activate when switching to the screen. The object must match the defined filter criteria, or you must first deactivate the filter. Also refer to Tree view filter for Screen switch.
Filtering the table view	This function defines the table view format. Also refer to Table view filter for Screen switch.



7.6 Permissions for the Runtime environment

Permissions can be granted for each object contained in the tree view, according to the concerned object's functionality. In the Runtime environment, the currently logged in user can only execute a function if he knows the appropriate password. Permissions are always object-related.

If a user does not have the rights to see an object, this object and all it sub-objects are hidden. Even if the user has rights for one of the sub-objects.

The permission required to modify an object includes the right to modify permissions.

7.7 Using the PFS in a network

The PFS can be installed within a network, in which case the execution of switching points will only occur at server level. If a standby server is available, it will process the switching point list appropriately, but will however not execute any of the switching points it contains. Process synchronisation is carried out according to the system's time.

The way in which the PFS reacts when changing from the standby to the server can be configured. The problem with such changes is that the standby server cannot tell when the last switching process from the server took place. This is why the setting Reject SB switch (accessible by successively selecting Properties, Time change in the Production & Facility Scheduler) was designed.

Reject switching points	When switching points are cancelled, the process continues onwards from the current position in the standby server. This can imply that a number of switching points may not be executed.
Recalculate switching points	Switching points are recalculated on the basis of the current time -30 seconds, and their execution then begins immediately. This can imply that a number of switching points may be executed twice.

When the server once again becomes available on the network and the standby server switches over to it, the server is synchronised using the current PFS data. This ensures that the execution of the switching points continues seamlessly.



Server	Executes switching points. Saves the current PFS configuration. Rejects changes made by clients (without confirmation) if the configuration changes have not been saved.
Client	Does not ensure any switching point execution. Project data can be edited. Receives notification whenever project data items have been changed following external changes made to the project. Triggering time points for user events are always defined according to the client's system time.
Standby	As long as the standby server is the client Reaction in the event of a changeover can be configured. Saves the current PFS configuration.

7.8 Converting projects

When a project created using a program version prior to version 5.50 is activated, the profiles contained in the structure schedules are converted. Profiles are no longer supported in version 5.50 or later versions. For each profile, a structure schedule is created, containing the linked schedules. The linked schedules contain all the times which fall within the profile's activation/deactivation times.

The day information contained in the profile schedule is input into the calendar.

The configuration process can be viewed in the Editor's output window.

7.9 VBA interface

The PFS contains a VBA interface, which is integrated to the VBA object Project. In addition, switching points can be linked to a VBA macro of the Execute_Value type. In this case, the switching point is applied as a parameter to the VBA Macro.

Further, the VBA Macro is responsible for performing switching processing tasks.

8. Object types

Objects contain the configuration which users have defined for them. Two types of object types can be identified:



Editable object types (on page 32) and Fix defined object types (on page 32)

8.1 Fixed object types

Provided that the previous object (i.e. 'parent object') has been created and that the relevant display permission has been granted to users, these object types are always available. They cannot be moved, renamed or deleted. If these objects are masked, all the related 'child objects' also become unavailable. For example: Time model groups always contain the fixed object types schedules and Time models.

8.2 Editable object types

These object types are created according to the number of objects required during the configuration process.

8.3 Production and Facility Scheduler object

This constitutes the root object type for the whole of the PFS. Any settings defined in this object are then applied to the whole of the PFS. This is a fixed-type object.






Parameters	Description
Save	Saves the changes you have made.
	In the Runtime environment, all parameters are saved in the Runtime data, and a new calculation of the switching points is performed on the basis of the modified configuration.
Reject	After you have validated your choice by closing the confirmation dialog, all the changes you have made will be rejected. Please be aware that no cancellation is possible!
Properties	This item displays the settings pages for the PFS Properties section.
Switching point preview	Activates the switching point preview mode.
Filter criteria	Activates the Filter dialog.
Help	Activates the online help.

8.4 Object time model groups

This object contains all time model groups defined in the PFS. This is a fixed-type object.

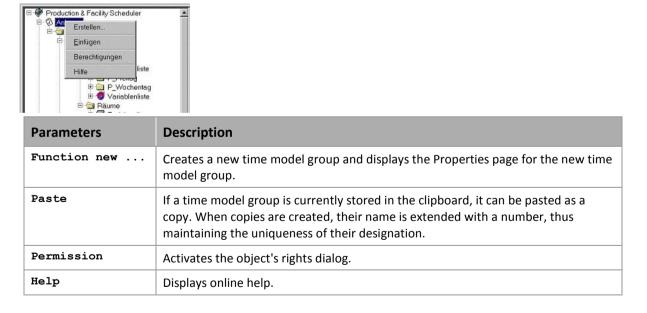




8.5 **Object editable time model groups**

Time model groups contain their specific schedules and time models. In addition, these objects allow users to define fundamental settings related to relative switching times.

In the calendar, users can allocate schedules and models to each day for each time model group listed.

Each time model group always contains the schedules and Time models fixed object types.

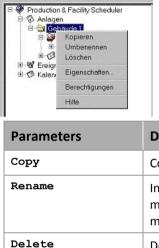

Parameters	Description
Parameters	Description
Сору	Copies the selected time model group or groups to the clipboard.
Rename	In the tree view the identification of the time model group changes to the edit mode. Only the identification can be changed. The new designation provided must be unique throughout the whole of the PFS environment.
Delete	Deletes all selected time model groups after a safety dialog requests you to confirm your choice.
Properties	Displays the page containing the time model group.
Authorizations	Opens the Permissions dialog.
Help	Activates online help.

Schedule object 8.6

This object contains all schedules of first order. This is a fixed-type object.



CONTEXT MENU

Menu item	Action
Function new	Creates a new schedule.
Paste	Pastes a schedule from the clipboard.
Authorizations	Opens the authorization dialog.
Help	Opens the Onlinehelp.

8.6.1 New schedule context menu

Menu item	Action
Function new	Creates a new schedule.
Сору	Copies selected schedules.
Cut	Cuts selected schedules.
Paste	Pastes schedules from the clipboard.
Inactive/Active	Switches between active and inactive for selected schedules.
Rename	Makes it possible to rename the schedules.
Delete	Deletes the selected schedules after a confirmation message.
Properties	Opens the Properties window for the selected entry.
Authorizations	Opens the authorization dialog.
Help	Opens online help.

8.6.2 Context menu time display new schedule

The displayed menu items depend on the area in which the right-click was carried out. Entries which are not displayed all the time receive the additon (optional).




Menu item	Action
Create time grid	Opens the dialog for creating a time grid.
Create time	Inserts a new time in the list.
Create switching point	Creates a new switching point.
Creating switching points	Opens the dialog for creating several switching points.
Delete time	Deletes the selected time.
Delete switching points	Deletes the selected switching point.
Change time(optional)	Opens the dialog for changing the time.
Absolute point of time(optional)	Activates option Relative point of time
Relative point of time(optional)	Activates option Absolute point of time
All values active(optional)	Sets valueactive.
All values inactive(optional)	Sets value inactive.
Help	Opens online help.

8.7 Editable schedule object

Schedules are the core of the PFS. They contain the times and switching points necessary to the execution of important objects.

Schedules can be replicated into new schedules, in which case the "child" schedules "inherit" any times defined in the "parent" schedules. No limitations apply to the multiple schedule's organisational depth.

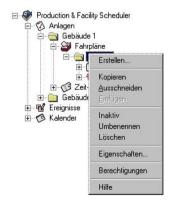



Parameters	Description
Function new	Creates a new "child" schedule, and displays the relevant settings page.
Сору	The selected schedules are copied to the clipboard.
Cut	The selected schedules are cut and placed in the clipboard. Cut schedules are identified in a special manner, and will only disappear fully once they have been inserted (i.e. pasted) in another schedule. A schedule which you have cut cannot be pasted into itself or into the schedule located directly above it.
Paste	Inserts (i.e. pastes) schedules from the clipboard. The inserted schedule's designation is then modified, in order to preserve the uniqueness of each schedule's name.
Inactive/Active	Activates or deactivates the schedule. Switching points contained in deactivated schedules will not be executed!
Rename	Allows users to change the schedule's name. The new designation must be unique throughout the schedule level.
Delete	Deletes the selected schedules and their "child" schedules, after asking you to confirm your choice by answering a safety question.
Properties	This command displays the settings pages for the Schedule properties section.
Authorizations	Opens the Permissions dialog.
Help	Activates online help.

8.8 Functions list object

This object contains the array of functions related to the schedule. Only functions related to a schedule can indeed be used in said schedule. This is a fixed-type object.





CONTEXT MENU FUNCTION LIST

Menu item	Action
Add function	Enables users to allocate a new function to the schedule. When the list of defined functions appears onscreen, select the required function and validate it by clicking on or .
Insert function	Inserts (i.e. pastes) functions from the clipboard into the list.
Authorizations	Opens the authorization dialog.
Help	Opens online help.

CONTEXT MENU FUNCTION

Menu item	Action	
Сору	Copies selected functions.	
Cut	Cuts selected functions.	
Replace function	Opens the dialog for replacing selected functions.	
Remove function	Deletes selected functions from the list.	
Authorizations	Opens the Permissions dialog.	
Help	Activates online help.	

8.9 Object time

Times define the time point at which linked switching points must be executed.

Two different types of time are available:

- absolute
- ▶ relative

Previously defined times are replicated in "child" schedules, in which they are displayed on a grey background.

8.9.1 Absolute time type

Times are directly defined in the Time field. If the schedule is linked to a specific day, any active switching times linked to the absolute time point are executed. The Offset field is of no importance here.



The time model group cycle and model allocation fields are not used here either.

8.9.2 Relative time type

For this time type an event is selected at the time. This event is changed to an absolute switching point in the preview or in the Runtime. The criteria according to which the absolute switching point is created, depends on the event and the related engineering. An offset can be specified for each event, and will delay the execution time point accordingly.



Parameters	Description					
Start of cyle	Performed daily at midnight.					
Start of cycle without production	Activated on days which are not linked to any shift. The time point is the start of the day for the relevant time model group.					
	A day is also considered to be without production when, for instance, the last shift ends at only 02:00:00 on the same day.					
Start of cycle with production	Activated on days for which at least one shift has been defined. The time point is the start of the day for the relevant time model group.					
Begin of production	This event is executed at the start of the first shift, provided that the first shift follows a day without production.					
End of production	This event is executed at the end of the last shift, provided that the last shift is followed by a day without production. Thus, if further production is scheduled to take place on the following day, the shift at the end of the day is not considered as an end of production.					
Start of shift	This event is executed at the start of each shift.					
End of shift	This event is executed at the end of each shift.					
Start of break	This event is executed at the start of each break.					
End of break	This event is executed at the end of each break.					
User-defined event	Various previously defined user-defiend events can be allocated. The switch point will be initiated when the trigger event related to the user-defined even occurs.					
Shift start first shift	Executed at the start of the first shift in the time model group's cycle.					
Shift end last shift	Executed at the end of the last shift in the time model group's cycle.					
Shift-free start	Activated at the end of the shift, if the start of the next shift occurs with an offset greater than 1 second.					
Shiftfree end	Activated at the start of a shift following a shift-free period of time.					
Shift-free start without production end	Activated at the start of a shift-free period of time, provided that no End of production is scheduled immediately after.					
Shift-free end without production start	Activated at the end of a shift-free period of time, provided that no Start of production is scheduled immediately after.					
Shift start first shift without production start	Activated at the start of the first shift, provided that no Start of production is scheduled simultaneously.					
Shift end first shift without production end	Activated at the end of the last shift, provided that no End of production is scheduled simultaneously.					
Shift start without production start	Activated at the start of the shift, provided that no Start of production is scheduled simultaneously.					
Shift end without production end	Activated at the end of the shift, provided that no end of production is scheduled simultaneously.					



8.9.3 Offset

When working with relative times, the execution time point can be modified by means of an offset. An offset cannot be greater than +/- 1 day -1 second. When working with user-defined events, only positive offsets can be specified. The offset is specified in minutes, seconds being defined after the decimal point with a precision of 1/100th of a minute.

Abteilung PFS Abteilung PFS Bolat Uhrzei Bolat Uhrzei Bolat Schalt Schalt Bolat Schalt Schalt Bolat Schalt Schalt	Uhrzeit Offset Aktiv Verknüptungstyp Verknüptungen Aktion ter erstellen Vaiiable Licht Produktion 1 sunkt grstellen Funktion antossen - [Pauser Aktiv valiable Pausenhupe 1 valiable Pausenhupe 1			
Parameters	Description			
Create time grid	This command displays the settings page required for the cyclic creation of an absolute time period.			
Create time	Creates a new time.			
Create switching point	Creates a new switching point at the given time.			
Creating switching points	Enables users to define switching points for several variables or functions within once same task, if no switching points have previously been defined.			
Delete time	Deletes the selected times, including all related switching points.			
Delete switching points	Deletes the selected switching points.			
Absolute time period	Changes the type of time to Absolute.			
Relative time	Changes the type of time to Relative.			
Help	Activates online help.			

8.9.4 Time context menu

The menu items not broached here are identical to those described in the Time type context menu section.

• Change time: This menu item activates the time change dialog.



8.10 Object switching point

The switching point defines the action to be executed once the execution time point is attained.

8.10.1 Active

This setting enables users to authorise or block the execution of a switching point.

8.10.2 Type of link

The type of link defines which element must be executed. The following types of links can be specified:

Parameters	Description
Variable	The set value is defined using the value specified for the action.
Function	The function specified for the action is executed.
VBA Macro with Variable	The macro defined in Macro -> Browser -> ModuleScheduler -> ExecuteValue referring to the specified variable is executed.
VBA Macro with function	The macro defined in Macro -> Browser -> ModuleScheduler -> ExecuteValue referring to the specified function is executed.

8.10.3 Replace

Contains the list of the variables or functions linked to the schedule.

8.10.4 Action

According to the selected link type, the cell has the following significance:



Parameters	Description
Variable	The set value which must be defined for the relevant variable.
Function	Contains the state of the Active parameter.
VBA Macro with Variable	Name of the macro which must be executed.
VBA Macro with function	Name of the macro which must be executed.

8.10.5 Authorizations

Necessary authorization level (on page 71) needed for editing in the Runtime.

8.11 Object time model

This object contains all the time models defined for the current time model group. This is a fixed-type object.

A time model contains the definition of the shifts and pauses which are required for the relevant relative events.





CONTEXT MENU TIME MODEL

Menu item	Action
New time model	Creates a new time model.
Paste	Pastes time models from the clipboard.
Authorizations	Opens the authorization dialog.
Help	Opens online help.

CONTEXT MENU TIME MODEL

Menu item	Action
Сору	Copies the selected models.
Cut	Cuts selected models.
Rename	Makes it possible to rename the time model.
Delete	Deletes selected models.
Authorizations	Opens the Permissions dialog.
Help	Opens online help.



8.11.1 Context time model group

CONTEXT TIME MODEL GROUP

Menu item	Action
Function new	Creates a new time model. When creating a new time model, you can immediately specify a new and unique name for it.
Paste	Inserts (I.e. pastes) time models from the clipboard to the list.
Authorizations	Opens the authorization dialog.
Help	Opens online help.

CONTEXT MENU TIME MODEL

Menu item	Action				
Save	Saves changes in the engineering of the PFS.				
Reject	Rejects all changes since the last time the PFS has been saved.				
Properties	Opens the Properties window for the selected entry.				
Switching point preview	Opens the switching point preview dialog.				
Filter criteria	Opens the dialog for selecting filters.				
Help	Opens online help.				

8.12 Shift object

A time model contains the defined shifts. Shifts are required to execute relative events. Shifts must not overlap, and must be defined within the limits of the time model group cycle.

Shifts are displayed on a grey background in the table view.

Production & Facility Scheduler Anlagen Gebäude 1 Gebäude 1 Gebäude 2 Fahrpläne Gebäude 3 Feiertag Dereitag Deventag	Zei	Zeit-Modelle: Freitag					
		Schichten/Pausen Schicht1	Einschaltzeit	Ausschaltzeit	Anmerkungen		
		Pause	Schicht erstellen Pause erstellen				
			Schicht löschen				
			Hilfe			753	



Parameters	Description
Create shift	Creates a new shift.
Create break	Creates a new break during the shift.
Delete shift	Deletes the selected shift, including all related breaks.
Help	Opens online help.

Note: Time is saved as local time. For details see chapter Handling of date and time in chapter Runtime.

8.13 Break object

Several breaks can be defined for one same shift. Breaks must not overlap, and must be defined within the shift.

Production & Facility Scheduler	Zei	Zeit-Modelle: Freitag				
 S Anageh Gebäude 1 Gebäude 1 Gebäude 1 Gebäude 1 Fahrpläne Zeit-Modelle Freitag Reues Zeit-Modell Neues Zeit-Modell Wochentag 			en Einschaltzeit 08:00:00 10:00:00 Pause erstellen Pause löschen Hilfe	Ausschaltzeit 12:00:00 10:15:00	Anmeikungen	
Parameters	Des	cription				
Create break	Creates a new break during the shift.					
Delete break	Deletes the break during the shift.					
Help	Displays online help.					

8.14 Event object

This object contains various user-defined events for the PFS. This is a fixed-type object.





Parameters	Description
Function new	Creates a new user-defined event. When creating a new user event, you must specify a new and unique name for it.
Paste	Inserts (i.e. pastes) user-defined events from the clipboard.
Authorizations	Opens the Permissions dialog.
Help	Activates online help.

8.15 Object user event

User events are events created by the user. These are defined for the whole of the PFS environment. User events are initiated when a triggering time point is input by means of the Execute PFS event. The number of user events is only limited by the available disk space or memory.

Owing to the missing required triggers, the Editor does not display user events in the switching point preview mode. In the Runtime environment, triggers are kept in the memory for 14 days at most to allow previous switching points to be analyzed. When the Runtime environment is closed down, these triggers are deleted.

The table view window contains a list of all the defined user events (displayed on a grey background) as well as the schedules they are linked to.





CONTEXT MENU EVENT

Menu item	Action
Function new	Creates a new user event.
Paste	Pastes a user event from the clipboard.
Authorizations	Opens the Permissions dialog.
Help	Activates online help.

CONTEXT MENU USER EVENT

Menu item	Action
Сору	Copies the selected user event to the clipboard.
Rename	Enables users to specify a new name for the required user event.
Delete	Deletes the selected user events.
Authorizations	Opens the Permissions dialog.
Help	Activates online help.

8.16 Calendar object

The absolute and relative switching times defined in a schedule bear no actual relation to days, as only times are defined for them. The calendar enables users to define on which days a specific schedule must be executed. To this end, users can allocate an active model and active schedules to each day, for each time model group listed.

The calendar offers various views, which can be selected according to the level of detail required for the information.

CONTEXT MENU CALENDAR

Menu item	Action
Function new	Creates a new calendar.
Paste	Pastes a calendar from the clipboard.
Authorizations	Opens the Permissions dialog.
Help	Activates online help.



Information

In the calendar you can define single days as special days. On these days the schedules defined for special days are carried out. Every day (Monday to Sunday) can be defined as special day.

8.16.1 Absolute time

In order to execute absolute switching points on a specific day, the relevant schedule must be linked to the required day. To do so, select the schedules cell on the required day. Open the context menu to access the schedule selection dialog, and create the link. The linked schedule identification is input into the cell. In Day view, these schedules can be displayed in full detail.

8.16.2 Relative time

When executing relative times in conjunction with absolute switching points, the way a model is linked (or not) to a specific day is a decisive element. The calendar day always starts with the start of day defined for the time model group. Should the time model group's cycle extend beyond the day, any times defined prior to the start of the day are considered to belong to the previous day.

For example: Start of day, 02:00:00 - End of day, 01:59:59. When only one user-defined event trigger occurs on Monday 15.10.2001 at 00:30:00, the model defined for Sunday 14th shall be used. If the trigger in fact occurs around 02:00:00, the model defined for Monday shall be used.

e.g.: Start of day, 6:00:00 AM - End of day, 9:59:59 PM. When only one user-defined event trigger occurs on Monday 15.10.2001 at 00:30:00, the model defined for Monday15th shall be used.

8.16.3 Month view

31

The month view aims to display the complete month in the calendar window. Should the available display space not be sufficient, the interface will attempt to display the current day in the window. The large display area is designed to allow a quick overview.



Double-click on a schedule cell to open the relevant schedule(s) in the table view, where you can edit it (or them).

	Montag	Dienstag	Mittwoch	Donnerstag	Freitag	Samstag	Sonntag
	1	2		4	5	6	
Modelle - Gebäude 1	Wochentag	Wochentag		Wochentag	Freitag		S
Fahipläne - Gebäude 1	klion.P_Wochentag;	tion P_Wochentag;	ktion P_Wochentag;	klion.P_Wochentag:	toduktion.P_Freitag;		0
	8	1	10	11	12	13	2
Modelle - Gebäude 1	Wochentag	Wochentag		Wochentag	Freitag		
Fahipläne - Gebäude 1	dion.P_Wochentag:	tion P_Wochentag	ktion P_Wochentag;	dion.P_Wochentag:	roduktion.P_Freitag;		
	15	16	17	18	19	20	8
Modelle - Gebäude 1	Wachentag	Wochentag	Wochenta	Wochentag	Freitag		
Fahiplane - Gebäude 1	dion.P_Wochenlag:	tion P_Wochentag	ktion P_Wochentag;	klion.P_Wochentag;	toduktion.P_Freitag;		
	22	23	24	25	- Hationalfeiertag	27	MWi Umschaltur
Modelle - Gebäude 1	Wochentag	Wochentag		Wochentag	Feierlag		3
Fahipläne - Gebäude 1	ktion.P_Wochentag;	ktion P_Wochentag;	ktion P_Wochentag;	ktion.P_Wochentag;			
	29	34	31	1 - Allerheiligen	2	3	
Modelle - Gebäude 1	Wochentag	Wochentag	Second contractor	Feiertag	Freitag		
Fahiplane - Gebäude 1	tion D Monhaster	tion P Wochenter	ktion P Wochentag;		roduktion, P_Freitag;		

CONTEXT MENU MONTH VIEW

Menu item	Action
Selecting models	Opens the dialog for selecting a model.
Select schedules	Opens the dialog for selecting schedules.
Day view	Switches to daily view.
Week view	Switches to weekly view.
Month view	Switches to monthly view.
Go to today	Switches to the current date.
Switch to date	Opens the dialog for selecting a date.
Show previous element	Displays the previous element.
Show next element	Displays the next element.
Help	Activates online help.

8.16.4 Week view

7



The weekly view displays the allocation pattern on a weekly basis.

riday , 26. October - Nationalfeiertag	Monday , 22. October 🖥			
Feiertag	Wochentag	Modelle - Gebäude 1		
	Abteilung PFS.Produktion.P_Wochentag;	Fahrpläne - Gebäude 1		
Saturday , 27. October	Tuesday , 23. October			
n e construction e co	Wochentag	Modelle - Gebäude 1		
	Abteilung PFS. Produktion. P_Wochentag;	Fahrpläne - Gebäude 1		
Sunday , 28. October -	Wednesday , 24. October			
		Modelle - Gebäude 1		
Gebäude 1. Abteilung PFS. Produktion;	Abteilung PFS.Produktion.P_Wochentag;	Fahrpläne - Gebäude 1		
	Thursday , 25. October			
	Wochentag	Modelle - Gebäude 1		
	Abteilung PFS.Produktion.P_Wochentag;	Fahrpläne - Gebäude 1		

CONTEXT MENU WEEKLY VIEW

Menu item	Action
Selecting models	Opens the dialog for selecting a model.
Select schedules	Opens the dialog for selecting schedules.
Day view	Switches to daily view.
Week view	Switches to weekly view.
Month view	Switches to monthly view.
Go to today	Switches to the current date.
Switch to date	Opens the dialog for selecting a date.
Show previous element	Displays the previous element.
Show next element	Displays the next element.
Help	Activates online help.

8.16.5 Day view

The Day view offers detailed information about the way schedules are linked to days.

Kalenderansicht: 22.10.2001				
	Aktiv	Fahrplan	Struktur	Passwort
Gebäude 1	X	Gebäude 1.Abteilung PFS.Räume		0
	x	Gebäude 1. Abteilung PFS. Räume. R_Büro Müller		0
	Г	Gebäude 1. Abteilung PFS. Räume. R_Büro Meier		0
	X	Gebäude 1. Abteilung PFS. Produktion		0
	x	Gebäude 1.Abteilung PFS. Produktion.P_Wochentag		0



CONTEXT MENU DAILY VIEW

Menu item	Action
Select schedules	Opens the dialog for selecting schedules.
Show schedule	Opens the selected schedule in a new window.
Day view	Switches to daily view.
Week view	Switches to weekly view.
Month view	Switches to monthly view.
Go to today	Switches to the current date.
Switch to date	Opens the dialog for selecting a date.
Show previous element	Displays the previous element.
Show next element	Displays the next element.
As default	The schedule must systematically be executed on the current weekday.
As single day	The schedule is executed on this day only.
Delete	When a schedule is defined as a default, an exception is made for this day. In the event of an execution on this day only, the single-day execution will be deleted.
Help	Activates online help.

8.16.6 Types of model allocations

When using models, the following allocation types can be defined:

Use model on this day.
Use holiday model if the concerned day is a holiday
Use model on weekdays.

8.16.7 Schedule allocation types

Schedules can be allocated to days as follows:



Use schedule on this day.

Do not use schedule on this day.

Use schedule on holiday, if the concerned day is a holiday

Use schedule on weekdays.

8.16.8 Model allocations in the Calendar view

Models can also be allocated directly in the Calendar view. Once you have selected the cells to define the models you wish to use for a specific time model group and day, the various models available for the time model group are listed. Select a model to allocate it to the current day. When you exit the cell, the PFS will ask you to confirm whether or not you wish to use the selected model as a default model for that day.

8.16.9 Model context menu

This context menu can be accessed by right-clicking on the Model field in the monthly and weekly calendar view window.





Parameters	Description
Selecting models	Opens the model selection dialog.
Show model	Activates the table view Edit model.
Day view	Switches over to Day view.
Week view	Switches over to Week view.
Go to today	Switches over to Day view for the current date.
Switch to date	Switches over to Day view for the selected date.
Previous element	Accesses the previously displayed element.
Next element	Accesses the next element.
As default	Defines the current model as a standard model for the weekday for the current time model group.
Delete	Deletes the model allocation for the selected day. If the allocation concerns the standard model selected for the day, the weekday allocation for the time model group is deleted.
Help	Activates online help.

8.16.10 Context menu schedule

To activate this context menu, select the schedules' cell for a specific day, and right-click on a time model group. The menu items not specifically broached here are identical to those described in the Model context menu section.





Parameters	Description	
Select schedules	Opens the schedule selection dialog.	
Show schedule	Activates the table view Edit schedule.	
As default	The schedule is entered as default for the selected week day.	
As single day	The schedule is executed on this day only.	
Delete	Opens a dialog for selecting what should be deleted:	
	• Delete all elements : All schedule of this type are deleted.	
	 Delete only this element: For this element an exception is created for the selected day. 	

8.17 Variable list object

This object contains the array of variables related to the schedule. Only variables related to a schedule can indeed be used for the relevant switching points. This is a fixed-type object.



Context menu variable list




Menu item	Action
Add variable	Adds a new variable to the schedule. This is also possible during Runtime.
Insert variable	Inserts (i.e. pastes) variables from the clipboard.
Authorizations	Opens the authorization dialog.
Help	Opens online help.

CONTEXT MENU VARIABLE

Menu item	Action
Сору	Copies selected variables
Cut	Cuts selected variables.
Replace variable	Opens the dialog for replacing selected variables.
Remove variable	Deletes selected variables from the list.
Authorizations	Opens the Permissions dialog.
Help	Activates online help.

8.17.1 Object variable

The set value of variables linked to a schedule can be modified using the switching points.

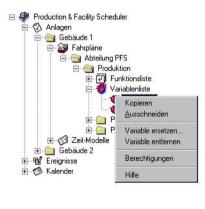



Parameters	Description
Сору	Copies the selected variables to the clipboard.
Cut	Copies the selected variables to the clipboard, and marks them for deleting. The variables are only deleted once they have effectively been inserted into another schedule. Switching points using these variables will be deleted.
Replace variable	Allows users to replace a variable with another variable. If the new variable is already available in the schedule, the original variable is deleted. All switching points using the original variable are transferred to the new variable.
Delete variable	Deletes the variable allocation link to the schedule. Switching points using these variables will be deleted.
Authorizations	Opens the Permissions dialog.
Help	Activates online help.

8.18 Functions object

Functions linked to the schedule can be allocated at the level of the switching points, and executed this way.





Parameters	Description
Сору	Copies the selected functions to the clipboard.
Cut	The selected functions are copied to the clipboard and are marked for deletion. The functions are only deleted once they have effectively been inserted (i.e. pasted) into another schedule. Switching points using these functions will be deleted.
Replace function	Allows users to replace a selected function with another function. All switching points using the source function are modified in order to match the target function. If the target function is already linked to the schedule, the source function's allocation is deleted.
Remove function	Deletes the function's allocation link to the schedule. Switching points using this function will be deleted.
Authorizations	Opens the Permissions dialog.
Help	Activates online help.

9. Properties

In order to configure the properties of the Production & Facility Scheduler:

- ▶ right-click Production & Facility Scheduler in the detail view of the project manager
- select Properties in the context menu
- select the tab you want to edit
 - Time change (on page 59): offers settings for switching between daylight saving time and standard time
 - National holidays (on page 61): configures national holidays
 - Table colors (on page 62): defines the colors of the switching points
 - Record shift times: makes it possible to record shift data



9.1 Time change

This page defines the PFS' reaction in the event where the system time is changed (e.g. summer time to winter time).



Possible options are:



Parameters	Description
Positive time change	The time is set ahead, the Systemtime is set into the future (e.g. summer time)
Make up for switching points	Actions between the current time and the newly set time, are executed directly after the time setting.
Recalculate switching points	Actions between the current time and the newly set time, are ignored and not executed. Switching points are recalculated.
Negative time change	The time is set back, the Systemtime is set into the past (e.g. winter time)
Reject switching points	Switching points are recalculated. Switiching points are calculated when the original time is reached.
Recalculate switching points	Action, between the current time and the newly set time, are recalculated. (That means that when the defined time is reached, they are executed.) This causes a double execution of swithing points in the corrected time period.
SB Switch	Standby Server switch, valid for timeout during redundance switch.
Reject switching points	The execution of switching points starts according to the current position of the Standby. Switching points in the switching period might not be executed.
Recalculate switching points	The switching points are recalculated and exectued according to the new time. This might cause a double execution of switching points.
Tolerance zone for time deviation	Tolerance, in how far the systemtime can be changed, without causing a recalculation of switching points according to the criteria described above.

▲ Attention

Always carry out a switch to daylight saving time/standard time with the automatic Windows time switching. Never change the time manually, because this could lead to errors with times that are relevant to zenon.



9.2 Holidays

This page is used to select country-specific holidays.

eitumstellung Feiertage Tabellenfarben	
	<u><u> </u></u>
Im Kalender werden die Feiertage aus dem selektierten	Abbruch
Land eingetragen.	Hilfe
Länder:	
Malaysia.	
Marakka	
Mexiko	Alexandre and the second second
Neuseeland	
Niederlande	
Norwegen	
Oman	
Osterreich	
Paraguay Peru	
Philippinen	
Polen	
Portugal	
Puerto Rico (USA)	
Rumänien	
Bussland	
Saudiarabien	All and a second s

The base data for the official holidays are in file Holidays.txt in folder

%programdata%\COPA-DATA\zenon[Version]. It can be edited with a text editor.

Entries specific to a country begin with the country's identification, enclosed in angle brackets, followed by a key number as in Microsoft Office. The definition of holidays can be found in the following line, the name and date of the holiday.

For example:

```
[Austria] 45
All Saint's Day, 2006/11/1
All Saint's Day, 2007/11/1
All Saint's Day, 2008/11/1
All Saint's Day, 2009/11/1
All Saint's Day, 2010/11/1
All Saint's Day, 2011/11/1
All Saint's Day, 2012/11/1
Ascension Day, 2006/5/25
Ascension Day, 2007/5/17
Ascension Day, 2008/5/1
Ascension Day, 2009/5/21
Ascension Day, 2010/5/13
Ascension Day, 2011/6/2
Ascension Day, 2012/5/17
Assumption Day, 2006/8/15
Assumption Day, 2007/8/15
```



```
Assumption Day, 2008/8/15
Assumption Day, 2009/8/15
Assumption Day, 2010/8/15
Assumption Day, 2011/8/15
Assumption Day, 2012/8/15
...
```

9.3 Table colors

This section defines the colors used to represent switching points in the calendar.

Possible options are:



Parameters	Description
Days	
Default	Calendar day without any specific characteristics.
Special day	Date is a holiday.
Change day light saving time -> standard time	Date of the change from day light saving time to standard time.
Change standard time -> day light saving time	Date of the change from standard time to day light saving time.
Time models	
Default	Time model used for this weekday is active.
Exception	Use time model on this day only.
Special day	The specific time model for holidays is being used.
Schedules	
Default	The schedule is active on this weekday
Special day	Schedule is active on this special day
Skip	Schedule is not active on this day only.
Single day	Schedule is active on this day only.
Multiple entry	Several properties match this day.

9.4 Link of a equipment model

To link an equipment group with a time model group:

- 1. select the time model group
- 2. Select the **Property** command in the context menu
- 3. the settings dialog of the time model is opened



Time model groups	×
Properties Calendar filling Equipment modeling	OK Cancel Help
Add Remove	

4. select Equipment modeling tab

- 5. select the desired equipment group
- 6. add it via button Add
- 7. confirm by clicking ox as soon as you have added all desired equipment groups

Note: The linking of equipment model groups with time model groups is the requirement for recording shift times in a SQL data base. If several equipment model groups are linked, historic shift data are saved in several tables. If the link of a equipment model group to a time model group is changed, a new table with the GUID of the new equipment model group is created. For this, the following applies:

- The data of the existing table are not taken over.
- The existing table is however not deleted.

9.5 Editable time model groups

The properties of the time model groups make it possible to adjust the time model group cycle times and to make model allocations. To open the dialog, access an existing time model group's context menu and click on menu item **Properties**



9.5.1 Time model group properties

This settings page contains the designation and the time model group cycle information.

lagen-Eigensch	ften	
Anlagen-Eigenscha	tten Kalender-Belegung	1 <u>Q</u> K
Bezeichnung:	Gebäude 2	Abbruch
Tagesbeginn:	00.00.00	<u>H</u> ilfe
Tagesende:	23:59:59	

The following settings can be defined:

Setting	Description
Description	Defines the time model group's name. This field cannot be left empty, and the designation provided must be unique throughout the PFS environment.
Start of day	Defines the start of the day for this time model group.
End of day	Defines the end of the day for this time model group.

Note: Time is saved as local time. For details see chapter Handling of date and time in chapter Runtime.



9.5.2 Default allocation of the models

This settings page enables users to specify a default model to be used on each weekday, as well as on holidays.

	oment settings Calenc		<u></u> K
nte	er the default time-mode	Is for this equipment here.	Cancel
	Type of day	Calender filling	Help
1	Monday	Schichtmodell 2	
2	Tuesday	Schichtmodell 2	
3	Wednesday	Schichtmodell 2	
4	Thursday	Schichtmodell 2	
5	Friday	Schichtmodell 2	
6	Saturday	< no time-model >	
7	Sunday	< no time-model >	
8	Special day	< no time-model >	

9.6 Editable schedules

The settings page enable users to configure schedules, and to proceed to calendar-filling operations. To open the dialog box, access an existing schedule's context menu and click on the Properties item.

9.6.1 Time context menu

This page enables users to configure the schedule, and to allocate the available variables or functions to the schedule.

	schaften Kalender-Belegung	1 <u>o</u> k
Bezeichnung:	Produktion	Abbruch
🔽 Fahrplan a	ktiv	<u>H</u> ilfe
🗂 Struktur-Fe	hrplan	
Verknüpfte Va	viablen/Funktionen:	
B 🔄 Produi	tion ktionsliste	
#	PFS-Ereigniss anstossen - [Pausenhupe Dauer]	
0	Licht F Variable hinzutugen	
	Paus: Hilfe Temperatur Produktion	
	•	



Parameters	Description
Description	Displays the schedule's name. This name (i.e. designation) must be unique throughout the whole of the schedule's level.
Schedule active	Switches the schedule to active or inactive mode. Switching points contained in inactive schedules will not be executed.
Structure schedule	A structure schedule does not comprise any allocated functions or variables. It is only used to structure the schedules.
List of functions	Contains the functions which have been linked to the schedule. Processing is carried out as usual with Functions objects.
Variable list	Contains the variables which have been linked to the schedule. Processing is carried out as usual with Variables objects.

9.6.2 Calendar filling

This settings page enables users to perform the weekday allocation process for the schedule.

ahrplan Eigensch	aften Kalender-Belegung	
		<u><u> </u></u>
tier kann die Det verden.	ultbelegung für die Wocher	ntage/Sondertage des Fahrplans festgelegt
Tagesty	Kalender-Bele	gung
1 Montag	X	
2 Dienstag	X	
3 Mittwoch	X	
4 Donnerstag	X	
5 Freitag	X	
6 Samstag		
7 Sonntag		
8 Sondertag		

Activates the schedule for the relevant weekday. For more information, please also refer to the Calendar section.



10. Dialogs

10.1 PFS switching point preview

The **Production & Facility Scheduler** context menu enables users to access the switching point preview mode.

The switching point preview mode is a powerful diagnosis tool enabling users to check over the PFS configuration. It defines and displays, according to the selected filter criteria, absolute and relative switching points and absolute execution times. Therefore, it enables users to assess the effects of the changes they have made before they actually apply them to the equipment. This preview can also be used to display a history of times. The definition is always performed on the basis of the current configuration.

User-defined events can not be executed in the Editor. In the Runtime environment, trigger time points for user-defined events are kept in memory for 14 days at the most; therefore, the history of execution times can only be traced back in time over this period of time.

You can also filter the configured objects, for instance if you only wish to search within a specific schedule.

When you close the dialog by clicking on or, the settings you have defined are saved, and will remain available until the next time you open access the dialog.

SEARCH DIALOG IN TEXT FIELDS

Fields Time model group, Schedule, Variable and Function support wildcards at the filtering:



fill-in	Meaning
Text	The naming have to be Text
*Text	The naming have to end with Text
Text*	The naming have to start with Text
T??t	Any character is possible on second and third place.

Switching point preview	ew					
Selection of the filter criter	ia:					Close
Time model group:	•					Help
Schedule:	•					
Variable:	•					
Function:	•					
Filtering of	saved data	•				
Switching point criteria:						Preview
Start time:	08.03.2011	*	11:37:09	*		TIONOW
Time of the	08.03.2011	÷	11:37:09			
Switching point Switching point	is executed is not executed (schedu	le or switching	point deactiva	ted)		
Switching point	is not executed (schedu	le or switching	point deactiva	-	vitching point	is: 0
Switching point User defined events are not	is not executed (schedu t displayed in the Editor!	ile or switching erknüpfungsar/4		-	witching point Passwort	s: 0 Schaltpunktty A
Switching point User defined events are not	is not executed (schedu t displayed in the Editor! pläne Uhrzeit 'e			found s		-



Property	Description
Selection of the filter criteria	
Time model group	Defines the filter to use with the equipment you are examining. Only switching points inherent to the relevant equipment will appear in the preview. ATTENTION: Input is case sensitive!
Schedule	Defines the filter to use with the schedule you are examining. Only switching points inherent to the relevant schedules will be displayed in the preview window. ATTENTION: Input is case sensitive!
Variable	Defines the filter to be applied to the variables you are searching. Only switching points linked to relevant variables and matching the criteria defined in the mask will be displayed in the preview window. ATTENTION: Input is case sensitive!
Function	Defines the filter to be applied to the functions you are searching. Only switching points linked to relevant functions and matching the criteria defined in the mask will be displayed in the preview window. ATTENTION: Input is case sensitive!
Filtering of	Selection of the data which are used for the creation of the preview via drop-down list:
	editable data considers the changed data for determine the preview. The preview thus enables you to check over your configuration before saving any new settings.
	saved data creates the preview on the basis of the configuration used for the switching points execution.
Switching point criteria	This option enables you to define the period of time for which you wish to create a preview.
Preview	Starts defining execution times according to the established criteria.
	Contains the table with the switching points which are executed throughout the specified period and match the filter criteria. Deactivated switching points or switching points contained in deactivated schedules are highlighted.

10.2 PFS filter dialog

The filter dialog enables you to reduce the number of visible objects in the PFS to the objects matching the filter criteria.

Auswahl der Filter-Kri	terien	
🗗 Gefilterte Daten	anzeigen	Production & Facility Scheduler G- Anlagen
Anloge:	•	😑 🔁 Gebäude 1
Fahrplan:	P_*	B B Fahrplone B B Abteilung PFS
Variable:	F	Produktion
Funktion:	F	* @ P_Freitag * @ P_Wochentag
Zeit-Modell:	F	* 🕈 Vanablenliste 🖲 🖓 Zeit-Modelle
Ereignis:	F	e ereignisse e ereignisse
Schaltzeitpunkte		
Schaltzeitpunkte f	ihern:	
Absolute von:	00:00:00 and bis: 23:59:59 and and	
Relativ:	ŀ	Aktuelisieren

Note: Time is saved as local time. For details see chapter Handling of date and time in chapter Runtime.

The filter function enables you to fill in a filter mask to isolate certain types of objects. When a filter is activated, the filtered branch is identified with a funnel symbol, designating the filtering process. The filtering function is case-sensitive.

fill-in	Meaning
Text	The naming have to be Text
*Text	The naming have to end with Text
Text*	The naming have to start with Text
T??t	Any character is possible on second and third place.

Fields Time model group, Schedule, Variable and Function Support wildcards at the filtering:

When "child" objects match the filter criteria, the "parent" objects are also displayed, even if they do not match the criteria defined in the filter. The exception to this rule is the time model group. If the time model group filter does not match the time model group criteria, the whole of time model group is masked, even in the event where some lower-level objects indeed match the filter criteria.

10.3 Authorizations

These enable you to define the user password level required to perform the relevant actions on the object. If the object does not support a specific functionality, this setting is locked.

If the permissions are edited in the Runtime environment, these can then only be modified on levels at which the logged in user currently owns permissions.



Permissions are only taken into account in the Runtime environment.

hte		
asswortebene		ОК
Anzeigen	1 🗄	Abbruch
Erstellen	0 🐣	
Ándern	0 *	Hilfe
Jmbenennen	0 🕂	
Löschen	0 *	

Parameters	Description
Display	These levels enable users to display an object and all its related lower-level branches.
Function new	These levels enable users to authorise or block the creation of lower-level objects.
Change	These levels enable users to modify the object's settings or permissions.
Rename	Levels allowing renaming operations.
Delete	Levels enabling users to delete an object and all its related lower-level branches.

10.4 Cyclic creation of switching times

This dialog enables you to create, in one single process, several absolute switching times within a defined period of time for a specific, configurable domain.

To open the dialog , access an existing schedule's context menu in the table view, and click on the "Create time grid" item.

/eit-Eigenschaften					1 <u>o</u> k
Zyklus:	01:00:00	🗖 als Zyklische Zeit			Abbruch
Passwortlevel:	0 *				Hilfe
– Zyklische Eige	enschaften:				
Startzeit:	06:00:00	Endzeit:	0:59:59	<u>*</u>	



Parameters	Description
Cycle/Time	Defines the time or the creation grid.
As cyclic time	When this option is activated, several switching times can be created.
Password level	Is not yet supported! Should be 0.
Start time	Time with which the creation process begins.
End time	Time with which the creation process ends.

Note: Time is saved as local time. For details see chapter Handling of date and time in chapter Runtime.

10.5 Schedule selection

This dialog enables you to select schedules which shall be linked to a day. When you select the required schedules and add these to the list, the schedules are then inserted into the list of linked schedules.

To open the dialog, access the calendar Day view's context menu, and click on the Selecting schedule item.


t-Eigenschaften					
eit-Eigenschaften					1 <u>o</u> k
Zyklus:	01:00:00	∗ I als Zyklische	Zeit		Abbruch
Passwortlevel:	0 *]			Hilfe
Zyklische Eige	anschaften:				
Startzeit:	06:00:00	Endzeit:	10:59:59	<u>^</u>	

10.6 Schedule activation period

This dialog enables you to define the required schedules for a specific period or time, or to select them according to a model in the calendar.

To open the dialog:

 - 1. right click a line or cell with schedule in the calendar view
- 2. select schedules in the context menu



Link schedules at 15.02.2012	×
Production & Facility Scheduler	OK Cancel Help
	Add Remove

- 4. highlight the desired schedules and confirm them by clicking ox
- 5. the dialog for setting the duration of series is opened

Ouration of series: No end date (default)				T	ОК
Starts on:	15.02.2012 -	Ends on:	22.02.2012	-	Cancel Help
attem of series:					
Daily	Monday	Friday			
 Weekly 	Tuesday	Saturday			
Monthly	Wednesday	Sunday			
Yearly	Thursday				
elected schedules			Selection		
			Jelection		



DURATION OF SERIES

Parameters	Description
Duration of series	Settings for the duration of series.
No end date	Execution starts with creating the series and does not have an end date (default setting).
	Series is executed weekly.
Starts on	Date for start.
Ends on	Date for end.

SERIAL PATTERN

Parameters	Description		
Recurrence Pattern	Type of execution.		
Detail field	Options for serial pattern depending on the selection of:		
	▶ Daily		
	Weekly		
	Monthly		
	Yearly		
Daily	Execution can be set in the detail field to:		
	 Every [number] days: Enter a number for the execution rhythm. Default: 1 		
	 Every work day: Series is executed on every work day (in accordance with the set official holiday calendar). 		
Weekly	Execution can be set in the detail field to certain week days.		
Monthly	Execution can be set in the detail field to:		
	on: Selection of the date		
	 every month: Enter a number for the execution rhythm. 		
Yearly	Execution can be set in the detail field to certain dates.		



SELECTED SCHEDULES

Parameters	Description
Selected schedules	List of selected schedules.
Select	Click on button in order to open the schedule selection dialog.
ОК	Accepts input and closes dialog.
Cancel	Discards entries and closes the dialog.
Help	Opens online help.

10.7 Model selection

This dialog enables you to allocate one model per time model group to the required day.

1. click on cell Models in the calendar view

Link models at 15.02.12	×
Production & Facility Scheduler Production & Facility Scheduler Production & Facility Scheduler Production & Time models Production & Time m	OK Cancel Help
	Add Remove

- 2. select **select** models in the context menu
- 3. select the desired model
- 4. click on button Add
- 5. confirm the dialog by clicking ox



10.8 Table view schedule editing

Right click on a schedule in the calendar view in order to open the context menu. Command Display schedule opens the configuration dialog.

🗒 🗸 🎩 🔺 📷	1 7						
Type of time	Time	Offset	Active	Type of link	Links	Action	asswo
Absolute point of time	10:30:00	0.00					
			×	Variable	e disk space - Export	0	0
			×	Variable	e disk space - Export (0	0
			x	Variable	-1		0
			x	Variable	-1		0
				Variable	Free memory [%]	0	0
			×	Variable	-1		0
Relative point of time	0	0.00					

This view enables you to modify the schedules linked within the calendar. The function scope is identical to that of the Time or Switching point tables.



10.9 Table view model editing

Right click on a time model in the calendar view in order to open the context menu. Command **Display model** opens the configuration dialog.

	ng time Notes A
Shifts/breaks Starting time End	
Shift i 16:00:00 23	59:59

This view enables you to modify the models linked within the calendar. The editing possibilities are identical to those for shifts and breaks.

10.10 Change time

This dialog enables you to delay the selected times according to an offset you have defined.

To open the dialog box, access a selected time entry's context menu, and click on the Change time command.

Change time by		×
Hour:	1 +/-	ОК
Minute:	0 💠 +/-	Cancel
Second:	0 🚔 +/-	Help

10.11 Adjusting offset

Enables you to modify the selected offsets.

To open the dialog box, access a selected offset's context menu, and click on the Adjust offset command.

Change offset			X
 Change offset by: Change offset to: 	0	÷ +/-	OK Cancel Help

10.12 Change value

This command enables you to change the selected cells in the Action column.

Π	X 电 @ 2		+ 9	?				
1	Zeittyp	Uhrzeit	Offset	Aktiv	Verknüpfungstyp	Verknüpfungen	Aktion	Passwor
	Absolute Zeit	06:00:00	0,00					
8	Absolute Zeit	07:50:00	0,00					
			1	x	Variable	Licht Meier	1	0
	Absolute Zeit	17:00:00	0,00					
2	Absolute Zeit	17:10:00	0.00					
				x	Variable	Licht Meier	0	0
110								

To open the dialog box, access a selected value's context menu, and click on the **Change value** command.

Change value		×
Variable Change value by: Change value to: Linear increasing starting with: Linear decreasing starting with:	0 * +	OK Cancel Help
Function Change status to:		
Macro Change macro to:	v	



Parameters	Description
Variable	
Change value by	Changes the contents of the currently selected cells by the specified amount.
Change value to	Changes the contents of the currently selected cells to the specified amount.
Linear increasing starting with	Changes the contents of the currently selected cells by a defined amount. The amount is increased by one with each modified cell.
Linear decreasing starting with	Changes the contents of the currently selected cells by a defined amount. The amount is reduced by one with each modified cell.
Function	
Change status to	Changes the activation of the currently selected switching points to the specified state: active inactive
Macro	
Change macro to	Changes the macro to the selected macro.

10.13 Creating switching points

The dialog box is opened via the context menu of a selected time entry and the command Create switching points.

reate switching points	tching points	ОК
Please select variables/functions, for which you want to create swi ✓ Variable list ✓ Free disk space - Database [%] ✓ Free disk space - Export [%] ✓ Free disk space - Export [%] ✓ Free memory [%] ✓ Free memory [%] ✓ Intem_Variable_UINT_1 ✓ WIZ_WAR_10 WIZ_VAR_10 WIZ_VAR_11 WIZ_VAR_11	Itching points	Cancel Help

In the upper list, select the entries for which you wish to create switching points, and insert these by clicking on the Add button in the lower list.




Per default switching points are always created as inactive in the Runtime and must be activated decidedly in order for them to work. Per default switching point are created as active in the Editor.

10.14 Duplicate

The dialog can be called up during copying a schedule in order to control:

- whether subordinate child schedules should be also copied when pasting
- whether variables are substituted when pasting

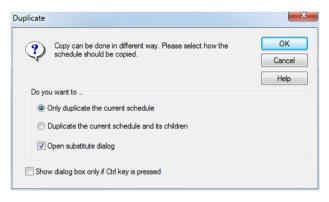



Parameters	Description
only duplicate the current schedule	Inserts (i.e. pastes) only the top-level schedule from the clipboard.
duplicate the current schedule and the child schedule	The schedule will be inserted (i.e. pasted) along with all its related lower-level schedules. This embodies the standard method when this dialog is deactivated.
Open substitute dialog	Display the replacement dialog. This enables you to exchange variables when inserting them.
Display dialog box only if Ctrl-key is pressed	Suppresses the dialog. The schedule and the child schedules are always copied without substitution. In this case, pressing the Ctrl key during pasting will enable you to display the dialog.
	Note: This function can also be controlled via an entry in project.ini:
	[PFM]
	AnzeigenMitStrg = [Value]
	Values:
	1: The dialog is only shown if the Ctrl button is pressed whilst the schedule is inserted.
	0: The dialog is always displayed.
OK	Applies entries and closes the dialog.
Cancel	Discards entries and closes the dialog.
Help	Opens online help.

11. Execute PFS event

By using this function a defined PFS event can be executed in the Runtime in order to trigger a relative time in the PFS.

12. Screen type Production and Facility Scheduler

By using a Production & Facility Scheduler screen you can administer schedules and time models.

This screen type is only available, if the PFS has been licensed, otherwise the screen type Scheduler can be selected. (You will find more information on the pre-defined screen types in the chapter 'Screens / Pre-defined screen types'.)



The creation of the PFS screen is done by the definition of a new screen of the screen type **Production &** Facility Scheduler.

On opening the screen an empty screen is opened and the Drop-down list **Control elements** in the menu line is filled.

By selecting the entry Add template in the menu control elements pre-defined control elements are loaded with default values at pre-defined positions.

Filter	Settings	Properties				witching point preview.
Sheduler screen Typ: STATIC						Create
ID: 53553						Time model group
						Time model
						Event
						Schedule
						Add variable
						Remove variable
						Replace links
						Remove function
						Activate schedule
Rename	Copy	Cut	Insert	Delete	l	Save



Control element	Description
Insert template	Opens the dialog for selecting a template for the screen type.
	Templates are shipped together with zenon and can also be created by the user.
	Templates add pre-defined control elements to pre-defined locations in the screen. Elements that are not necessary can also be removed individually once they have been created. Additional elements are selected from the drop-down list and palced in the screen. Elements can be moved in the screen and placed individually.
Schedule window	The schedule is displayed.
General	General control elements:
Save	
Reject	
Switching point preview	
Filter criteria	
Cut	
Сору	
Paste	
Rename	
Delete	
Properties	
Settings	
Ascending	
Descending	
Lists	
Schedule window	
Buttons	
Time model group	Create time model group
Schedule	 Create schedule Activate schedule Add variable Remove variable Remove function Replace links Create time grid Create time Create switching point Creating switching points



	- Delete time
	- Delete switching points
Time model	- Create time model
	- Create shift
	- Create break
	- Delete shift
	- Delete break
Event	- Create events
Calendar	- Selecting model
	- Select schedule
	- Show this day
	- Go to today
	- Switch to date
	- As default
	- As single day
	- Forwards
	- Backwards
	- Day view
	- Week view
	- Month view
Mass processing	- All values active
	- All values inactive
	- abolute time period
	- time relative
	- Change time
	- change the value
	- Selecting event
	- Adjusting offset

You will find more information on changed Runtime files in the chapter Project and Workspace / RT changeable files.



13. Screen switch - PFS

13.1 Filter tree view for screen switch

The available settings are identical to those in the PFS filter dialog. An additional option enables you to specify whether or not you wish to activate the filter dialog before switching to screen activation. The object selected in the tree view will be selected again when you switch back to the screen.

itter Column settin Selection of filter or Galaxies of filter of Equipment: Schedule: Variable: Function: Time modet Event: Svitching time poin	iteria f* f* f* f* f* f* f* f* f* f	Production & Facility Scheduler Production & Facility Scheduler Facility Sched	<u>Q</u> K <u>C</u> ancel <u>H</u> elp
Filter switching			
Absolute of:	00:00:00 * to: 23:59:59 *		
Relative:	×	Refresh	

Note: Time is saved as local time. For details see chapter Handling of date and time in chapter Runtime.

13.2 Filter table view for screen switch

This settings page enables you to define the columns and titles which will be used in the various table views.

		OK
Offset ändern um	0 +/-	Abbruch
C Offset ändern auf:		Hilfe



Parameters	Description
Available fields	According to the selected view, the available columns are displayed in the list. Only selected columns will be displayed at a later point.
Labeling	Contains the table's heading. This text can be identified as requiring translation by means of a @ character.
Width	Column width
Alignment	Alignment of the columns' headings.
Objects	Lists the various objects for which views can be configured.
Preferred view	Lists the possible views for the requested object.