



©2016 Ing. Punzenberger COPA-DATA GmbH

All rights reserved.

Distribution and/or reproduction of this document or parts thereof in any form are permitted solely with the written permission of the company COPA-DATA. Technical data is only used for product description and are not guaranteed qualities in the legal sense. Subject to change, technical or otherwise.



Table of contents

1.	Welcome to COPA-DATA help4		4
2.	Remote Transport		
3.	Toolbar Remote Transport		
	Context menu Remote Transport		
•	Come		
5.	Engin	eering in the Editor	11
	5.1	TCP/IP	15
		5.1.1 Automatic setting in network projects	16
	5.2	Serial	17
	5.3	Define files	18
	5.4	Files that can be changed in Runtime	23
	5.5	Windows CE	26
6.	Estab	lish connection	28
	6.1	Encryption	29
		6.1.1 Change connection password	32
		6.1.2 Configure the encryption of the network connection	33
7	Ratch	nrocessing Transfer to several computers at the same time	3/1



1. Welcome to COPA-DATA help

GENERAL HELP

If you cannot find any information you require in this help chapter or can think of anything that you would like added, please send an email to documentation@copadata.com (mailto:documentation@copadata.com).

PROJECT SUPPORT

You can receive support for any real project you may have from our Support Team, who you can contact via email at support@copadata.com (mailto:support@copadata.com).

LICENSES AND MODULES

If you find that you need other modules or licenses, our staff will be happy to help you. Email sales@copadata.com (mailto:sales@copadata.com).

2. Remote Transport

The Remote Transport is used to transport Runtime files to a target system. Information about saving and reloading Editor files can be found in the chapter project backups.



Ma

License information

Part of the standard license of the Editor and Runtime.

GENERAL INFORMATION

If Runtime and the Editor are on the same PC, the Runtime files now are directly available to the Runtime. If Runtime is on a different computer, the Runtime files are transferred via Remote Transport to provide them locally there.

With Remote Transport:

- ▶ Only the respective necessary files are transferred in the network
- Other desired files can also be transported (ActiveX controls, fonts, etc.)
- ▶ Automatic upload to Server 1 and Server 2 can be instigated
- Many other functions can be used

Hint: Use the **network topology** view in the Editor to configure all Runtime computers and the transport of Runtime files.

Note: Note, with multi-project administration, the correct transfer of the individual projects.



Attention

PNG graphics files cannot be overwritten if they are currently being displayed in Runtime.

Background: The Runtime protects opened **.png** files. This prevents these being overwritten.

Solution: Before Remote Transport is instigated, it must be ensured that screens with *.png files:

- Are not called up in Runtime
- Are not being used by another program

This also applies for the reloading of amended Runtime files. The Runtime sync in the network does not work for a *.png screen if this is switched on a zenon computer that is involved in the process (standby server, client).

FUNCTIONALITIES

In addition to the pure copy function, Remote Transport also offers a range of other functionalities:



Parameters	Description
Incremental copy	The Editor automatically recognizes which files on the target system differs from the files which should be transferred and transfers only the changed files.
Set start project	With the Remote Transport the start project on the remote station can be set.
Starting and stopping the Runtime	The Runtime can be started and closed in the remote computer.
Transfer the system status	The current status of the remote PC (operating system, zenon version, existing drives etc.) can be found out.
PC reboot	A remote PC can be rebooted.
Online reload	Remote Runtime is updated online in the process
Start Remote desktop connection	Creates a Remote desktop connection
Copy back project data	An entire project can be copied back from the remote system.
Copy and register data	Files are not only copied, but also registered on the target system. Particularly interesting for fonts and ActiveX elements.
Copy and execute data	Executable files are copied and started.

Attention

Note the following when starting Runtime via Remote Transport:

- ▶ The 32-bit **zensyssrv.exe** starts the 32-bit Runtime
- The 64-bit **zensyssrv.exe** starts the 64-bit Runtime



Ô

Information

In theory, transfer via Windows Explorer or the approval of network drives is possible. We expressly advise against this procedure. Transfer via Remote Transport is more secure and systematic and reduces the load on the network connection. When connecting as a network device, whether Runtime works or not depends on the drive being available and that it offers sufficient performance.

3. Toolbar Remote Transport

A development computer can set up remote connections to other stations. The **Remote transport** toolbar provides functions for the transfer and request of data.





Symbol	Function
(from left to right)	
Remote Transport: Connection settings	Opens the configuration dialog of the Remote Transport (on page 11) for setting the target system and the target folder.
Remote Transport: Establishing a connection	Establishes a Remote Transport connection (on page 28) to the remote system.
Remote: Transfer changed Runtime files	Transfers all Runtime files that were changed on the development computer to the target computer since the last change.
Remote: Read back all Runtime files	Restores all files that can be edited in Runtime (such as recipes or user administration) from the remote system back to the local Runtime folder.
Remote: Set start project	Sets the active project as the start project on the remote system.
Remote: Start Runtime	Starts Runtime on the remote system.
Remote: Exit Runtime	Stops Runtime on the remote system.
Remote: Reload project	Executes the reload function on the remote system.
Remote Desktop: Start connection	Starts a connection to operate the target computer using zenon Remote Desktop. This allows visual operation.
Options for symbol bar	Clicking on the arrow opens the submenu:
	Active: Tool bar is displayed
	If the toolbar is not displayed, it can be activated using the Menu Options -> Toolbar.
	Note: For free placed tool bar (undocked from the Editor) options are not displayed. The tool bar can be closed by clicking on button X.
Further symbols can be added using the toolbar options:	
Transfer all Runtime files	Transfers all Runtime files to the target system.
Restart OS	Starts the operating system of the target computer after confirmation. Under Windows CE this option is not supported.
Get system status	Determines system status of the target computer and writes data to the output window. The following are determined:
	▶ Computer name
	▶ Operating system
	Runtime active/not active
	▶ Start project
	▶ Real memory



	 Drives Remote serial number Remote activation number Remote zenon version
Change password and display licensing	 Remote zenon version Opens dialog for connection establishing (on page 28). Enables: Changing the password for the connection establishment Display and change of the licensing of the target computer Configuration of the encryption at the target computer

Note: All commands for Remote Transport are available in the project's context menu (on page 9).

4. Context menu Remote Transport

You can reach the commands for the Remote Transport via the tool bar or the context menu of the project:

- 1. Right-click the project in the project manager
- 2. in the context menu select node Remote Transport
- 3. select the desired command from the drop-down list



Command	Function
Establish connection	Sets up a connection (on page 28) with the target computer.
Connection settings	Opens dialog to configure the connection (on page 28).
Transfer changed Runtime files	Transports all Runtime files that were changed on the development computer to the target computer.
Transfer all Runtime files	Transports all Runtime files from the development computer to the target computer.
Read back all Runtime files	Loads all files that can be edited in the Runtime (like recipes or user administration) to the development computer.
Set project as start project	Set start project for target station.
Start Runtime	Starts the Runtime on the target station
Exit Runtime	Stops the Runtime on the target station.
Reload project	Executes the function reload on the target computer.
Restart OS	Starts the operating system of the target computer after confirmation. Under Windows CE this option is not supported.
Get system status Change password and display	Determines system status of the target computer and writes data to the output window. The following are determined: Computer name Operating system Runtime active/not active Start project Real memory Drives Remote serial number Remote activation number Remote zenon version
Change password and display licensing	Opens dialog for connection establishing (on page 28). Enables: Changing the password for the connection establishment Display and change of the licensing of the target computer Configuration of the encryption at the target computer
Remote: Start desktop connection	Starts a connection to operate the target computer using zenon Remote Desktop.




5. Engineering in the Editor

The Remote Transport is configured in the project properties under **General/Remote transport** and controlled via the toolbar Remote Transport (on page 7).

To configure the Remote Transport:

- 1. navigate to the General node in properties
- 2. click on property Remote transport
- 3. The dialog for the configuration of the connection properties and the files to be transferred is opened.

Note: the screenshot shows the configuration for the transport medium TCP/IP with the network activated.

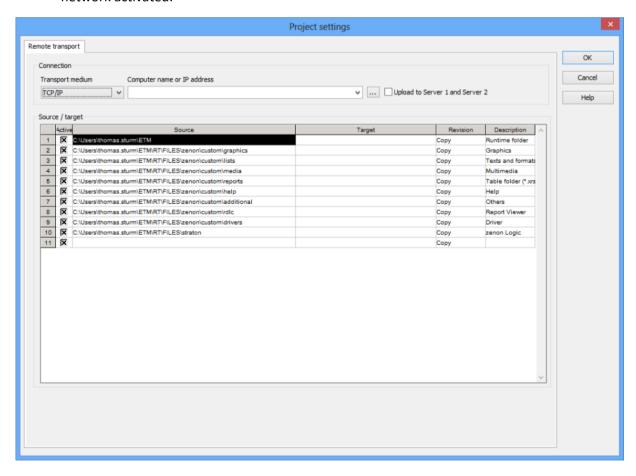



Parameters	Description
Transport medium	
Serial (on page 17)	Transfer via a serial connection, e.g. to a CE Terminal.
Port	Selecting the COM ports for the serial connection.
	Note: Only visible if serial has been selected as the transport medium.
TCP/IP (on page 15)	Transfer via TCP/IP in a network or via a modem.
Upload to Server 1 and Server 2	If the checkbox has been activated, the Runtime files are also transferred to the computers entered as Server 1 and Server 2 in the
	network in addition to the computer entered when a download takes place.
	Attention: Data is only transferred to Server 2 if a computer name has been entered for Server 2.
	Default: not active
	Note: Only visible if the network has been activated in the project settings and the transport medium TCP/IP has been selected.
Computer name or	The computer name or the TCP/IP address is entered as target:
IP address	▶ Enter the computer name manually or via clicking button
	▶ Enter the IP address manually
	The IP address must have conform the defined IP version (IPv4 or IPv6).
Source / target	List of connections.
	In the first line you can define a target for the top most folder of the structure. Right click in the cell in order to open a context menu for selection.
	The path can also be entered manually. For this, the following applies:
	▶ Backslash in front (\): Path relative to the project.
	Drive letter in front: Absolute path. Note for Windows CE: With zenon, a drive letter can also be entered for Windows CE. This only signalizes that it is an absolute path, and is ignored during the transfer.
	Attention: This path must be permanently available on the target system. Do not configure an integrated network drive, USB device or removable media!
	Note: Note, with multi-project administration, the correct transfer of the individual projects.

The column width in the list can be amended with the mouse.



Parameters	Description	
Active	Defines files which should be transferred optionally.	
	Project base path cannot be deselected.	
Source	Folder for files which should be transferred.	
Target	Target folder.	
	Defines the root folder. New entries can be defined.	
	Sub-folders cannot be changed. This ensures that all files are found on the target system in Runtime.	
	Note: The default folder is the Runtime folder defined in the project properties. If the target folder is entered manually, take care that it ends with the project name. This is important for the multi-user administration.	
	<pre>For example: C:\Users\Public\Documents\zenon_Projects\MY_PROJ ECT</pre>	
Revision	Type of transfer. Can be selected freely for the root folder and new entries. Clicking on the word ($Copy$) opens a drop-down list:	
	Copy: Copies files (default)	
	Copy and register: copies files and registerd them in the system. Helpful for ActiveX elements and for fonts (ttf files).	
	Copy and execute: copies files and then executes them	
	Note: The type of transfer is only available for freely-definable entries. Files necessary for the functionality of Runtime are automatically created in the list and the type of transfer cannot be changed.	
Description	Optional text input for new entries for describing the files which should be transferred.	



Attention

For redundant projects: If drivers that need a configuration file are used, the \zenon\custom\drivers entry must be deactivated.

REMOTE CONTROL IN THE NETWORK

In the context menu select projects -> Remote Transport -> <Command>:




Parameters	Description
Establish connection	With the service zenSysSvr a connection to the target device is established. On both devices the service zenSysSvr.exe or on the CE device the service SysSrvCE.exe has to be started. The versions have to be identical.
Transport changed Runtime files	If this setting is selected, the Runtime changed since the last transport are transported. If no Runtime files exist on the target device, all Runtime files are transported.
Transport all Runtime files	If this entry is activated, all Runtime files are transported. The only exception are files like e.g. standard recipes or Message Control, which are defined in the setting: 'RT changeable data'.
Read all Runtime files	If this setting is selected, all Runtime files of the modules Recipes, Recipegroup Manager, Message Control, User administration and Production & Facility Scheduler (PFS) are transported from the target system to the local Runtime directory. Then the changes in the Runtime can be read to the Editor with the option 'Import Runtime files'.
Define project as start project	The selected project is defined as the start project. This project is loaded on each Runtime start.
Start Runtime	Starts the Runtime.
Exit Runtime	The Runtime is closed.
Reload project	The project is reloaded. Changes Runtime files are read.
Restart OS	The device with which the connection exists is restarted after a confirmation message. If necessary, it must be logged on to the operating system again. Under Windows CE this option is not supported.
Get system status	It is checked, if the Runtime is running on the target system and with which status. Also the installed zenon version is checked. The following are determined:
	▶ Computer name
	▶ Operating system
	Runtime active/not active
	▶ Start project
	▶ Real memory
	▶ Drives
	Remote serial number
	Remote activation number
	Remote zenon version



Change password and display licensing.	Opens dialog for connection establishing (on page 28). Enables:	
	▶ Changing of the password	
	Display and change of the licensing	
	Configuration of the encryption	
Start Remote Desktop connection	Starts a connection to operate the target computer using zenon Remote Desktop.	

5.1 TCP/IP

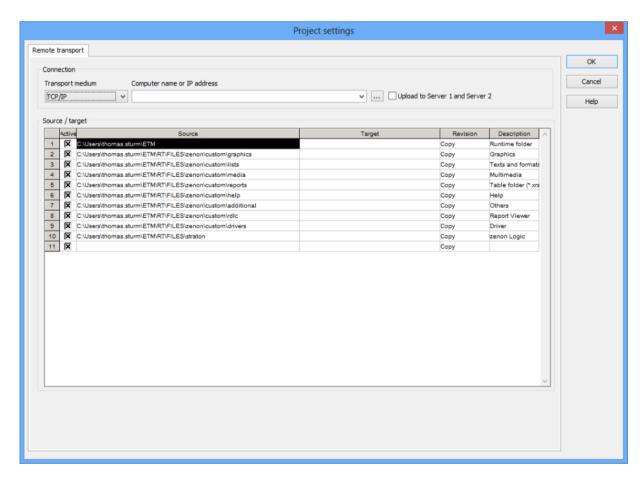

In the Remote Transport configuration the **name** of the target system or the **IP address** is entered. The IP address must conform to the defined IP version, i.e. IPv4 compliant when using IPv4 and IPv6 when using IPv6.

When using the name, the names used recently are saved and can be selected via the drop-down list. Using port number is only possible together with names.



Δ

Attention

As a default the Remote Transport always uses the TCP port 1101. This port must not be blocked by other applications.

5.1.1 Automatic setting in network projects

If the project to be transferred is configured as a network project, no other settings need to be made in the Computer name or IP address input field in the Remote Transport connection setting. In this case, Remote Transport always uses the computer entered in the network configuration as Server 1 in the properties field. It is therefore guaranteed that the changes are always transferred to the server, which then automatically transfers them to all clients!



If the checkbox **Upload to Server 1 and Server 2** has been activated, not only the computer to which there is a connection is updated. The servers that have been entered are also updated.

The requirements for this are:

- ▶ Checkbox active
- Network active
- Server 1 entered

Server 2 is only entered if a computer name has been entered for Server 1.

If the connected computer is one of the servers (regardless of whether it is connected via name or IP) no additional upload is carried out on this computer any more. This additional upload would be redundant in this case, because the update has already taken place via Remote Transport.



Information

You can find further information on the zenon network in the Network chapter.



5.2 Serial

As default the communication in the Remote Transport is carried out via TCP/IP. You can however change it to serial communication. So you can connect for example to Windows CE devices. For this:

- ▶ change the communication type of the transport service at the remote device via zenon6.ini
- configure the Remote Transport in the Editor



Attention

If the zeno6.ini is edited, the changes become effective after a restart of the transport service.

ZENON6.INI ENTRIES

If the transport service should be used for serial transport, the following entries have to be made in the zenon6.ini on the target system by hand: Note: Under Windows CE these entries are automatically generated in the zenon6.ini with the help of the user interface of the transport service.

```
[SYS_REMOTE]
; SysService attached to the COM interface:
CONFIG=DEVICE=COM;
PORT=COM2;
```




Attention

Do not forget the ; (semi-colon) at the end.

With this setting the Remote Transport works with the baudrate 115200 bits/second. As a default the Editor is also set to this baudrate.



SETTINGS EDITOR

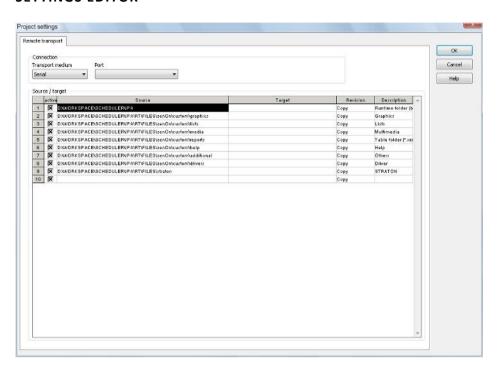

In the Editor select:


- 1. Serial as Transport medium
- 2. in the drop-down list the COM port of the source computer

5.3 Define files

You define which files are transferred in the configuration dialog via the check box in column **active**. The line with the project base path cannot be deactivated. The project files always are transported.





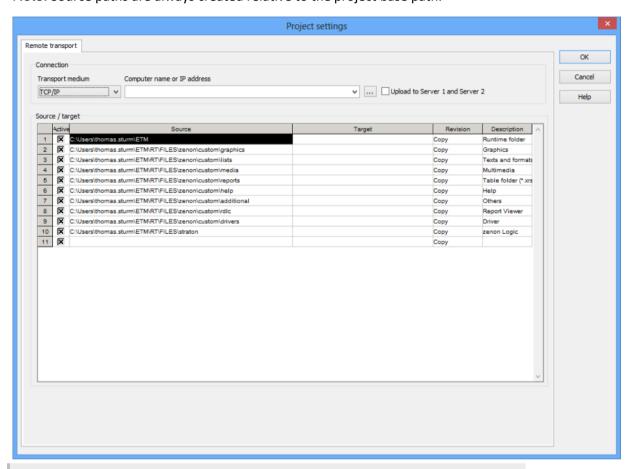

Δ

Attention

Note the effects of settings if the project is used in the network.

For example:

Transport of graphics is deactivated, because these are already on the server. Then a client is started. The client finds out that the graphics should not be transported and thus does not transport them to itself. No graphics are then displayed on the client.

Or vice-versa, files are transferred to the client and the files there are overwritten.

FILES FOR TRANSFER


With Remote Transport, all files required for the project are transferred to the target system.

In doing so, all files are always transferred to the folder:

▶ Standard



All files that are in the project's Runtime folder (...\RT\FILES\zenon\system\). These files determine the appearance and behavior of the project and are transferred as standard:

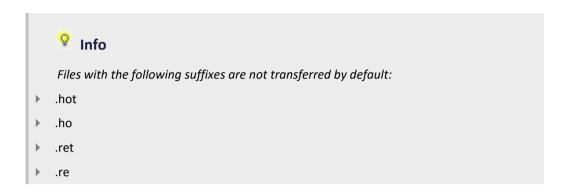

Optional

In addition, all files that are embedded into the project must be transferred. They are selected using the **Active** checkbox of the Remote Transport settings. These files are in the following subfolders of the project directory:

- \zenon\custom\graphics: for graphics
- \zenon\custom\lists: for language tables
- \zenon\custom\media: for all media files
- \zenon\custom\reports: for the reports of the Report Generator
- \zenon\custom\help: for help files
- \zenon\custom\additional: for additional files
- \zenon\custom\rdlc: for Report Viewer files
- \zenon\custom\drivers: for drivers
- \straton: for zenon Logic

Recommendation: Project basis path, graphics, language tables, report tables and media files are always transferred.

The following are transferred from the basis path by default: The files **project.ini**, **Projekt.vba**, **Monitor.mon** and the **Projekt** folder.

As a default zenon always uses relative paths and not absolute paths, so that the files can easily be found on the target system.

For the files that can be transferred optionally, the original paths should be used (empty field under target), so that zenon can find them on the target system.



GLOBAL PROJECT

If there is a global project in the workspace, this is automatically transferred. No additional settings need to be made. Always all files necessary for the global project will be transported.

SET START PROJECT

For Runtime, the start project must always be entered in zenon6.ini. To do this, click on the **Set** remote Runtime start project in the Remote Transport toolbar (on page 7). In doing so, the following entries are set:

[PATH]

VBF30=project path

[DEFAULT]

DEFANWENDUNG30=project name


SELECTING INDIVIDUAL FILES

To transfer own individual files:

- 1. right click in the first empty cell in column Source
- 2. in the context menu select File selection or Folder selection
- 3. the explorer is opened for selection
- 4. select the desired file or the desired folder
- 5. activate the checkbox in column active
- 6. right click in the cell in column Target



7. define the target folder
If the target remains empty the files are transferred in the same directory structure as defined under source.

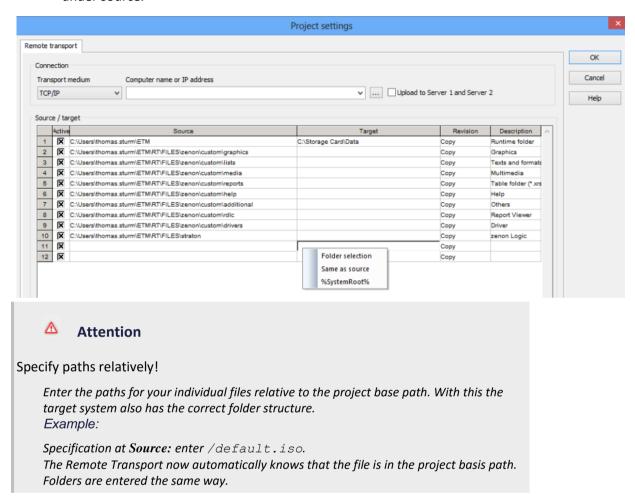


WINDOWS CE:

If the target system is a Windows CE terminal and no explicit destination is entered for the project basis path, the destination /**Storage Card/Data** is used as a default.



ACTION AT TRANSFER

In newly added lines the entry of the column Revision defines, how to proceed with the according files during Remote Transport. Three possibilities are available here:

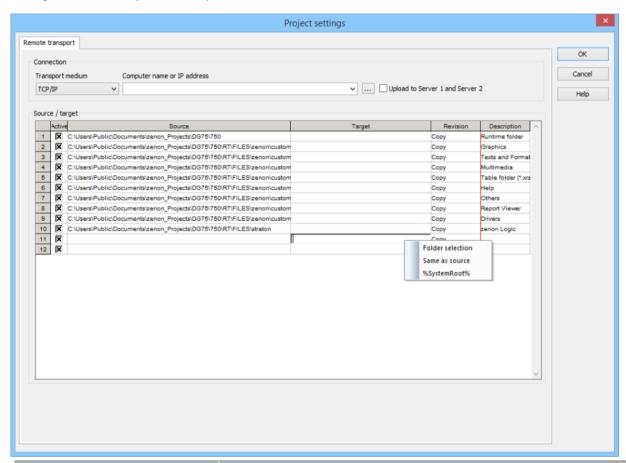

Action	Description
Сору	The file is copied to the remote system.
Copy®ister	The file is copied to the remote system and entered in the registry. Hint: Helpful for ActiveX elements and for fonts (ttf files).
Copy&execute	The file is copied to the remote system and executed there.

5.4 Files that can be changed in Runtime

There are different data which can be changed in the zenon Editor as well as in the Runtime. These are files for:



- ► Recipegroup Manager
- ► Standard Recipes
- ▶ User Administration
- ▶ Scheduler

PROTECT RUNTIME FILES FROM OVERWRITING


If all Runtime files are created or transported, the files meanwhile changed in the Runtime would be overwritten. In order to avoid unwanted overwriting the files, that should not be created or transported, can be selected here in the section **Do not generate and transfer**.

PROTECT EDITOR FILES FROM OVERWRITING

Data changed in the Runtime can be read back. In this case the corresponding Editor data are overwritten. In order to avoid unwanted overwriting the files, that should not be read beack, can be selected here in the section **Do not decompile**.

DIALOG RT CHANGEABLE FILES

You can reach the dialog for configuring the Runtime changeable files via project settings **General/RT** changeable data:

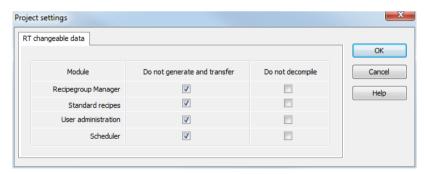

The following file types can be selected:

Parameters	Description
Recipegroup Manager	Recipe groups and recipes of the Recipegroup Manager. At the transfer new files are transferred and new sub-folders are created, deleted files and sub-folders are also deleted on the target system.
Standard Recipes	Standard recipes.
User Administration	User administration for login and rights administration in the Runtime.
Scheduler	Changes in the time models and schedules of the PFS.



Δ

Attention

At the project conversion take care that Runtime changeable files are also converted. For this Runtime files must be imported to the Editor and after the Update copied back to the Runtime. For details see chapter Recommended procedure for converting Runtime files in manual project conversion.

TRANSFERRING THE FILES

IN THE RUNTIME

To transfer files to the Runtime:

- 1. all files can be transferred
- 2. only changed files can be transferred

Both possibilities consider the files defined in property RT changeable data.

FROM THE RUNTIME

To read files from the Runtime, there are two processes available:

- 1. Restore all Runtime files:
 - a) reads back all Runtime files in the folder which was defined in property Runtime folder
 - b) regardless of the settings of property RT changeable data
- 2. Import Runtime files:
 - a) imports the files defined in property RT changeable data and
 - b) replaces the engineering in the Editor by these Runtime files
 - c) is suitable for taking over data from a remote system in the Editor

CONNECTION ERROR

During the transfer existing data are overwritten in accordance with the settings.

If errors occur at the transfer from or to the Runtime or if the connection fails, the files must be retransferred completely.



5.5 Windows CE

Transfer to Windows CE systems can be effected via a TCP connection, a serial connection or via memory cards.


CONFIGURATION

SERIAL OR TCP/IP

- 1. Ensure that in the project properties the **General** property in node **Windows CE project** is activated.
- 2. Select the connection type
 - TCP/IP
 - Serial



- 3. The configuration dialog now contains nine entries; C:\Storage Card\Data is pre-set as a target directory.
 - The \mathbb{C} : \ is automatically removed by Remote Transport, because communication with CE systems is carried out without drive letters.

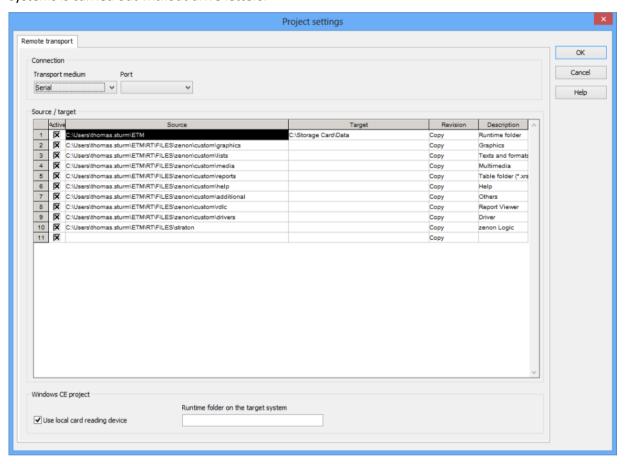

MEMORY CARD

The Remote Transport supports a special transport type, where the project is transported directly to a storage card instead of using a serial or TCP/IP connection. To do this a computer which can directly access a memory card (PCMCIA, ATA card, Compact Flash, etc.) is necessary.



Attention

It has to be guaranteed that the CE Runtime and the zenon6.ini are in the root of the card!

Insert the card in the according slot and check which drive letter is assigned to the card by the operating system. (e.g.: D:, or E:, ...)

- 1. Activate check box Use local card reading device
- 2. Define the Runtime folder at the target device,.



Example: if the memory card is listed as \Storage Card under CE, the Runtime folder on the target system must be C:/Storage Card/project path! C:\ will then automatically be removed by the Remote Transport!

- 3. Establish a connection to your own PC and transfer the files to the local memory card.
- 4. Write the Runtime folder at the target device with the help of function **Set remote start project** (Tool bar Remote Transport (on page 7)) in file zenon6.ini on the memory card.
- 5. Put the memory card in the CE terminal and start the Runtime.

6. Establish connection

To establish a Remote connection:

- Click on the corresponding button in the Remote Transport toolbar (on page 7)
 or select, in the project's context menu: Set up Remote Transport> connection
- 2. the dialog for setting up the connection is opened





Parameters	Description
Connection password	Setting for the password for the remote connection.
Password	Enter the password for the connection establishment (optional).
Change connection password (on page 32)	Opens the dialog for changing the password.
Configuration of the target sytem	Settings for the target system.
Configure serial number and activation number	Active: The licensing of the remote computer is displayed after establishing the connection and can be changed.
	Default: Inactive
Configure the encryption of the network communication (on page 33)	Active: After the connection has been established you can activate or deactivate the encryption of the network communication at the target system.
	Note: For this the connection of the Remote Transport must be protected by a password.
	Default: Inactive
Do not display this dialog	Active: This dialog is not opened at the establishing of the connection.
	Note: To display the dialog again, in the context menu of the project select Remote Transport -> Change password and display license
	Default: Inactive
ок	Applies settings and establishes the connection.
Cancel	Discards changes and closes the dialog without establishing a connection.
Help	Opens online help.

6.1 Encryption

The Remote Transport connection can be encrypted via **SysSrv**. To do this, enter a password into Remote Transport. Form version 7.20, the password is saved in encrypted form:

- ► At the source (Editor) in **project.ini**, **TRANSPASS** section.
- ► At the destination (Runtime) in **zenon6.ini**, **TRANSPASS** section.

Remote Transport communication can also be encrypted. To do this, the encryption of the zenon network need only be activated in the Startup Tool.



STORE PASSWORD IN ENCRYPTED FORM

The password for the Remote Transport transfer is stored by default in the **project.ini** file in the **[TRANSPASS]** section in the **KEYCRYPT**= key. The password can be stored as plain text in the **KEY**= key. This method has been used up to and including version 7.11. With the conversion of a project to version 7.20, the value for the **KEY**= key is deleted and the password is stored in encrypted form in the **KEYCRYPT**= key.

The following is applicable for the transfer:

- ▶ If there is a value for **KEY=**, **SysSrv** uses the unencrypted password. This also applies if an encrypted password is entered in **KEYCRYPT=**.
- ▶ If **KEY**= is not present and **KEYCRYPT**= is present, **SysSrv** uses the encrypted password.
- ► Entering or changing the password: If **KEY**= is present, this entry is updated. If it is not present and it is version 7.20 or higher, an entry is created in **KEYCRYPT**=.
- ► Project conversion: If, in the **project.ini** file, **KEY**= exists, its value is deleted and a new entry **KEYCRYPT**= is created and filled.



BEHAVIOR

Local editor	Remote PC	Remote password	Result	Condition
<7.20	<7.20	no	Connection OK	With empty password.
<7.20	<7.20	Unencrypted	Connection OK	With correct password.
<7.20	<7.20	Encrypted (no)	Connection OK	Remotely encrypted password is ignored.
>=7.20	<7.20	no	Connection OK	With empty password.
>=7.20	<7.20	Unencrypted	Connection OK	With correct password.
>=7.20	<7.20	Encrypted (no)	Connection OK	Remotely encrypted password is ignored.
>=7.20	>=7.20	no	Connection OK	With empty password.
>=7.20	>=7.20	Unencrypted	Connection OK	With correct password.
>=7.20	>=7.20	Encrypted	Connection OK	With correct password.
>=7.20	>=7.20	Encrypted + unencrypted	Connection OK	With correct password.
<7.20	>=7.20	no	Connection OK	With empty password.
<7.20	>=7.20	Unencrypted	Connection OK	With correct password.
<7.20	>=7.20	Encrypted	Connection OK	With correct password.
<7.20	>=7.20	Encrypted + unencrypted	Connection OK	With correct password.

CONVERSION

- ► In the Editor (source system), when converting the project from version X to 7.20, the **KEY**= entry is replaced by **KEYCRYPT**= and the password is saved in encrypted form here.
- ► On the target system, there is a query to see whether **KEY**= in **zenon6.ini** has an entry. Yes: This entry has priority. For conversion, the entry on the target system must be deleted manually.

ENCRYPTING ALL COMMUNICATION IN THE NETWORK

The complete communication can be encrypted by activating the encryption of the zenon network traffic.



BEHAVIOR

Source version (Editor)	Target version (Runtime)	Network Source encryption	Network Target encryption	Connection possible
<7.20	<7.20	Any	Any	Yes
<7.20	>= 7.20	Any	Active	No
<7.20	>= 7.20	Any	Inactive	Yes, unencrypted
>= 7.20	<7.20	Inactive	Any	Yes
>= 7.20	<7.20	Active	Any	No
>= 7.20	>= 7.20	Inactive	Inactive	Yes, unencrypted
>= 7.20	>= 7.20	Inactive	Active	No
>= 7.20	>= 7.20	Active	Inactive	No
>= 7.20	>= 7.20	Active, password "abc"	Active, password "def"	No
>= 7.20	>= 7.20	Active, password "xyz"	Active, password "xyz"	Yes, encrypted

ACTIVATION OF THE NETWORK ENCRYPTION VIA REMOTE TRANSPORT

If the network encryption is activated via Remote Transport, the following is applicable:

- ▶ Until a restart, Remote Transport also runs without encryption after a password has been set for network encryption.
- ► After restarting the target, it demands an encrypted connection with the correct password.

6.1.1 Change connection password

To change the connection password:




- 1. in the context menu of the project select Remote Transport -> Establish connections or Change password and display license
- 2. in the dialog click button Change connection password
- 3. the dialog for changing the password is opened



Parameters	Description	
old password	Enter existing password.	
New password	Enter new password.	
Confirm password	Enter new password again and confirm it by doing so.	

6.1.2 Configure the encryption of the network connection

The network communication can be protected by serious encryption. Encryption is either activated locally using the zenon Startup Tool, using a tool for the zenon Web Client or via Remote Transport in the Establish connection (on page 28) dialog:

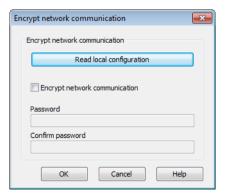



Parameters	Description	
Read local configuration	Reads in the encryption parameter of the local computer.	
Encrypt network communication	Active: The encryption of the network is activated at the remote computer. Default: Inactive	
Password	Enter password. For the criteria, see the "Network encryption password" section in the Strong encryption of network communication chapter. The displayed length is always set at 20 characters, in order to hide the actual length.	
Confirm password	Enter the password for verification again.	
ок	Saves changes and closes dialog.	
Cancel	Discards changes and closes the dialog.	
Help	Opens online help	

The password defined here is stored encrypted in the **zenon6.ini** of the remote computer.



Information

You can find notes on error messages from strong encryption in:

Network handbook -> Strong encryption of network communication chapter -> Error messages section.

7. Batch processing Transfer to several computers at the same time

Several computers can be addressed at the same time with the help of status processing.

CONFIGURATION OF REMOTE TRANSPORT STATUS PROCESSING:

- 1. Create a file named hosts.txt.A-Z
- 2. Enter the IP address or the computer name of each computer on a separate line Example:

HOST=192.168.0.24;

HOST=192.168.0.15;



3. Add hosts.txt to the the \zenon\custom\additional folder.