


zenon driver manual

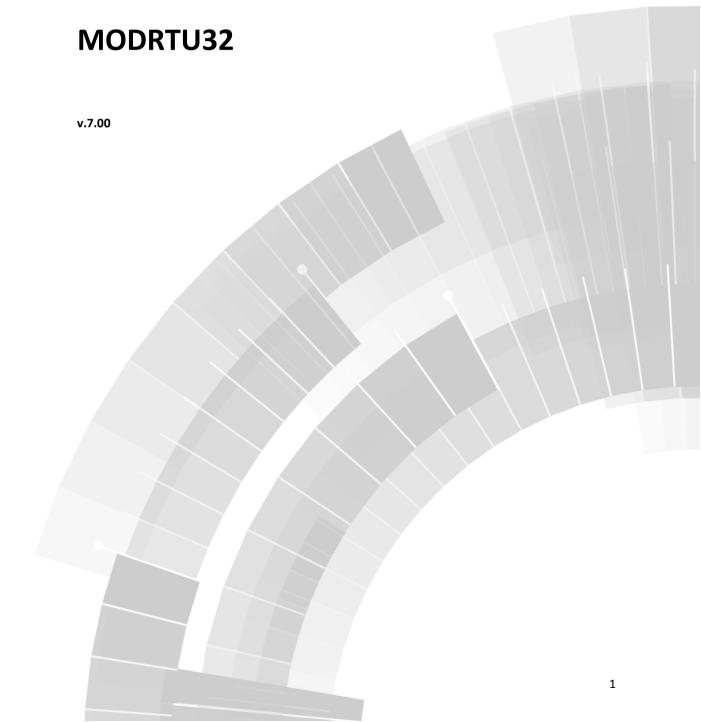



© 2012 Ing. Punzenberger COPA-DATA GmbH

All rights reserved.

Distribution and/or reproduction of this document or parts thereof in any form are permitted solely with the written permission of the company COPA-DATA. The technical data contained herein has been provided solely for informational purposes and is not legally binding. Subject to change, technical or otherwise.



Contents

1.	Welcome to COPA-DATA help5			5
2.	MODRTU32			5
3.	MOD	MODRTU32 - Data sheet		
4.	Drive	r history	/	7
5.	Requirements			8
	5.1	PC		8
6.	Confi	guration	1	8
	6.1	Creating	g a driverg	8
	6.2	Settings	in the driver dialog	10
		6.2.1	General	10
		6.2.2	Com	13
		6.2.3	Settings	15
		6.2.4	Connection TCP/IP	19
7.	Creat	ing varia	ables	. 21
	7.1	Creating	variables in the Editor	21
	7.2	Address	ing	24
	7.3	Driver o	bjects and datatypes	26
		7.3.1	Driver objects	26
		7.3.2	Mapping of the data types	29
	7.4	Creating	y variables by importing	30
		7.4.1	XML import of variables from another zenon project	30
		7.4.2	DBF Import/Export	31
	7.5	Driver v	ariables	37
8.	Driver-specific functions4			. 42
9.	Driver commands4			. 43
10.	LO. Error analysis45			



10.1	Analysis tool	45
10.2	Error numbers	47
10.3	Check list	48



1. Welcome to COPA-DATA help

GENERAL HELP

If you miss any information in this help chapter or have any suggestions for additions, please feel free to contact us via e-mail: documentation@copadata.com (mailto:documentation@copadata.com).

PROJECT SUPPORT

If you have concrete questions relating to your project, please feel free to contact the support team via e-mail: support@copadata.com (mailto:support@copadata.com)

LICENSES AND MODULES

If you realize that you need additional licenses or modules, please feel free to contact the sales team via e-mail: sales@copadata.com (mailto:sales@copadata.com)

2. MODRTU32

The driver understands the "Modbus ASCII" protocol for serial connections, the "Modbus RTU" protocol for serial and TCP/IP connections and the "Open Modbus TCP" protocol for TCP/IP connections. The driver is a Modbus Master. (Process Gateway is available for Modbus slave).



3. MODRTU32 - Data sheet

General:	
Driver file name	MODRTU32.exe
Driver description	Modbus RTU and Open Modbus TCP
PLC types	All PLCs supporting Modbus RTU, Open Modbus TCP/IP or Modbus ASCII(seriell)
PLC manufacturer	ABB; Gantner; GE Fanuc; Modbus RTU; Mondial; Schiele; Telemecanique; Schneider; Wago; Areva; GE Multilin;

Driver supports:	
Protocol	Modbus RTU - serial; Open Modbus TCP; Modbus RTU over TCP; Modbus ASCII - serial;
Addressing: address based	х
Addressing: name based	-
Spontaneous communication	-
Polling communication	х
Online browsing	-
Offline browsing	-
Real-time capable	-
Blockwrite	x
Modem capable	-
Serial logging	х



RDA numerical	х
RDA String	х

Prerequisites:	
Hardware PC	RS 232 interface or standard network card
Software PC	-
Hardware PLC	-
Software PLC	-
Requires v-dll	-

Platforms:	
Operating systems	Windows CE 5.0, CE 6.0; Windows XP, Vista, 7, Server 2003, Server 2008/R2;
CE platforms	x86; ARM; Pocket-PC;

4. Driver history

Date	Driver version	Change
07.07.08	4400	Created driver documentation



5. Requirements

This chapter contains information on the requirements that are necessary for use of this driver.

5.1 PC

In order to establish a serial connection to the PLC, a serial COM port is required at the PC. The port must not be used and therefore blocked by other software (e.g. modem drivers, PLC software, ...) during Runtime.

This driver supports a connection via the standard network card of the PC. Make sure that the PLC and the PC are in the same network range and that the subnet masks are set accordingly on both devices.

6. Configuration

In this chapter you will learn how to use the driver in a project and which settings you can change.



Info


Find out more about further settings for zenon variables in the chapter Variables (main.chm::/15247.htm) of the online manual.


6.1 **Creating a driver**

In order to create a new driver:

Right-click on Driver in the Project Manage and select Driver new in the context menu.




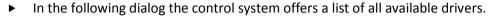

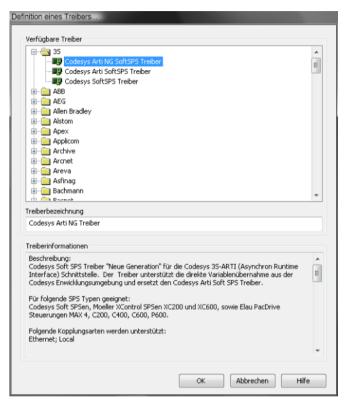

- Select the desired driver and give it a name:
 - The driver name has to be unique, i.e. if one and the same driver is to be used several times in one project, every time a new name has to be given each time.
 - The driver name is part of the file name. Therefore it may only contain characters which are supported by the operating system. Invalid characters are replaced by an underscore (_).
 - Attention: This name cannot be changed later on.
- ► Confirm the dialog with ox. In the following dialog the single configurations of the drivers are defined.
- ▶ Only the respective required drivers need to be loaded for a project. Later loading of an additional driver is possible without problems.




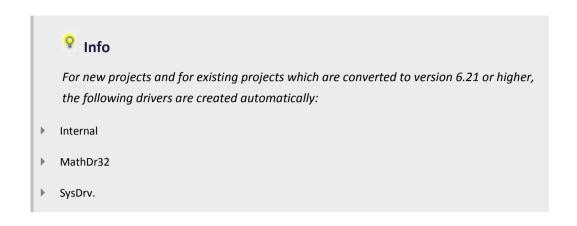

6.2 Settings in the driver dialog

You can change the following settings of the driver:

6.2.1 General

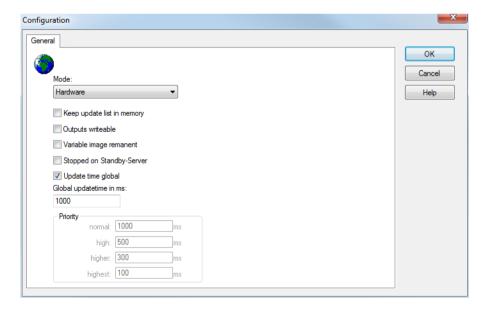



Parameters	Description
Mode	Allows to switch between hardware mode and simulation mode
	▶ Hardware:
	A connection to the control is established.
	▶ Simulation static
	No communication between to the control is established, the values are simulated by the driver. In this modus the values remain constant or the variables keep the values which were set by zenon Logic. Each variable has its own memory area, e.g. two variables of the type marker with offset 79 can have different values in the Runtime and do not influence each other. Exception: The simulator driver.
	▶ Simulation - counting
	No communication between to the control is established, the values are simulated by the driver. In this modus the driver increments the values within a value range automatically.
	▶ Simulation - programmed
	N communication is established to the PLC. The values are calculated by a freely programmable simulation project. The simulation project is created with the help of the zenon Logic Workbench and runs in a zenon Logic Runtime which is integrated in the driver. For details see chapter Driver simulation (main.chm::/25206.htm).
Keep update list in the memory	Variables which were requested once are still requested from the control even if they are currently not needed. This has the advantage that e.g. multiple screen switches after the screen was opened for the first time are executed faster because the variables need not be requested again. The disadvantage is a higher load for the communication to the control.
Output can be	Active: Outputs can be written.
written	Inactive: Writing of outputs is prevented.
	Note: Not available for every driver.



Variable image remanent	This option saves and restores the current value, time stamp and the states of a data point.
	Fundamental requirement: The variable must have a valid value and time stamp.
	The variable image is saved in mode hardware if:
	one of the states S_MERKER_1(0) up to S_MERKER8(7), REVISION(9), AUS(20) or ERSATZWERT(27) is active
	The variable image is always saved if:
	▶ the variable is of the object type Driver variable
	the driver runs in simulation mode. (not programmed simulation)
	The following states are not restored at the start of the Runtime:
	▶ SELECT(8)
	▶ WR-ACK(40)
	WR-SUC(41)
	The mode Simulation - programmed at the driver start is not a criterion in order to restore the remanent variable image.
Stop at the Standby Server	Setting for redundancy at drivers which allow only on communication connection. For this the driver is stopped at the Standby Server and only started at the upgrade.
	Attention: If this option is active, the gapless archiving is no longer guaranteed.
	Active: Sets the driver at the not-process-leading Server automatically in a stop-like state. In contrast to stopping via driver command, the variable does not receive status switched off (statusverarbeitung.chm::/24150.htm) but an empty value. This prevents that at the upgrade to the Server irrelevant values are created in the AML, CEL and Historian.
Global Update time	Active: The set Global update time in ms is used for all variables in the project. The priority set at the variables is not used. Inactive: The set priorities are used for the individual variables.
Priority	Here you set the polling times for the individual priorities. All variables with the according priority are polled in the set time. The allocation is taken




place for each variable separately in the settings of the variable properties. The communication of the individual variables are graduated in respect of importance or necessary topicality using the priorities. Thus the communication load is distributed better.

UPDATE TIME FOR CYCLICAL DRIVER

The following applies for cyclical drivers:

For Set value, Advising of variables and Requests, a read cycle is immediately triggered for all drivers regardless of the set update time. This ensures that the value is immediately available for visualization after writing. Update times can therefore be shorter than pre-set for cyclical drivers.

6.2.2 Com

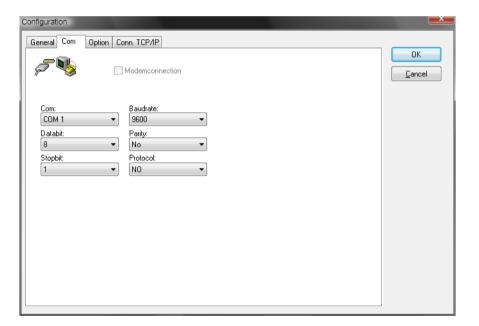


Parameters	Description
Com	Select serial interface COM1 - COM64
Data bit	Data word size in Bit: 5,6,7,8
Stop bit	1, 1.5, 2
Baud rate	Data transfer rate
	110; 300; 1200; 2400; 4800; 9600; 19200; 38400; 57600; 115200
Parity	even/uneven/none
Protocol	RTS/CTS/none

DEFAULT CONFIGURATION

Parameters	Description
Com	COM1
Baud rate	Adjust after setting on PLC
Data bit	8
Stop bit	1
Parity	Adjust after setting on PLC
Protocol	NO



6.2.3 Settings

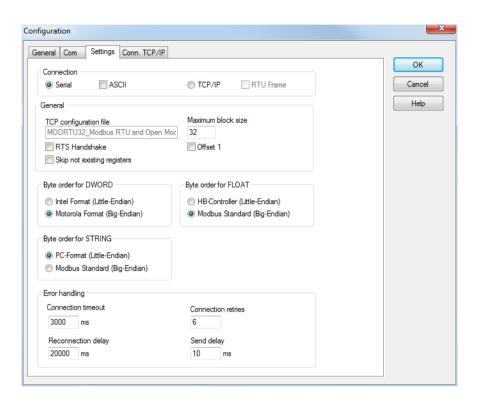



Parameters	Description		
Connection	Definition of which connection is used.		
Serial	For serial mode, both Modbus RTU and Modbus ASCII can be selected.		
ASCII	Active: The driver communicates using the Modbus ASCII protocol. Inactive: The driver communicates using Modbus RTU.		
TCP/IP	Requires a configuration file. This file stores the TCP/IP settings.		
RTU Frame	Active: Serial information is transferred to the TCP protocol exactly.		
General	General settings.		
TCP configuration file	The name of the TCP configuration file is defined here.		
	Default: MODRTU32_[Treiberbezeichnung].txt		
Maximum block size	Maximum block size of a data telegram in WORDs.		
	Attention zenon before 5.50 SP6: Block size must be less than 64. (1-125, Default 32)		
RTS Handshake	Some PLCs need the RTS handshake for		
	correct communication.		
Offset 1	The "Offset 1" affects the addressing of all variables.		
	Active: The driver subtracts 1 when the variable addresses (coils, register) are sent and adds 1 when they are received.		
Skip non-existent tabs	The driver reads data in a block. If there is no data between two address areas close to each other, the driver will still try to access these non-existent areas. This option will avoid that.		
Byte sequence for DWORD	Defines the sequence of lower-value and higher-value words for double word objects (DINT/UDINT). You can choose between Motorola (Big-Endian) and Intel (Little-Endian).		
Motorola Format (Big- Endian)	Active: DWORD ordering in accordance with Motorola format.		
Intel Format (Little- Endian)	Active: DWORD ordering in accordance with Intel format.		
Byte sequence for FLOAT	Defines the sequence of lower-value and higher-value words for FLOAT objects (REAL). You can choose between Modbus Standard (Big-Endian) and HB-Controller (Little-Endian).		



Modbus Standard (Big- Endian)	Active: Float ordering in accordance with Modbus standard.
HB Controller Float (Little-Endian)	Active: Float ordering in accordance with HB controller.
Byte sequence for STRING	Defines display of the byte sequence.
	Hint: If there is relevant information in the documentation of a PLC the following is usually applicable: MSB-first = Motorola = Big-Endian = Modbus. And: Intel = Little-Endian = PC. This can be handled differently in some documentation however.
Modbus Standard (Big- Endian)	Active: Display in accordance with Modbus standard with switched characters.
PC Format (Little- Endian)	Active: Display in PC format with ascending sequence.
Troubleshooting	
Connection timeout	Time in milliseconds to wait for a response from the slave. A communication error will be displayed if there is no response within this time.
	Only available with serial connection. For a TCP/IP connection, the setting for the Timeout [s] property in the Network node is used for the connection time-out. (24 seconds for XP systems, for example)
	Note: The communication time-out time must at any rate be higher than the maximum response time of the Modbus RTU slave. Otherwise misinterpretation of the responses can occur.
	Default: 3000 ms
Retries on error	Number of send repetitions when there is no answer from the slave after the set communication time-out.
	1: a connection attempt, no repetitions
	0: constant repetition
	Default: 6
Delay after connection termination	Time in milliseconds to wait after a communication error has occured before trying to re-establish the connection.
	Default: 20000 ms
Send delay	Time delay in milliseconds for "send" orders. Affects the whole driver.
	_ 1




	Can only be selected with a serial connection.	
ок	Applies changes and closes dialog.	
Cancel	Discards changes and closes dialog.	
Help	Opens online help.	

TIME OUT BEHAVIOR

With TCP connections, the communication time out is predefined by the system-dependent Timeout [s].


After the timeout has expired, the driver attempts - with default settings - to send the request again up to 5 times. If these 5 attempts are not successful, no additional attempt to connect is made during the reconnect time out.

With serial connection the times from the driver configuration are used for the time out behavior. The sent delay time must pass before a request is sent. After a request has been sent, the time period which is waited for an answer is as long as the connection timeout. If there is no answer in this time period, the request is sent again up to 5 times. (a default of 6 means 5 additional attempts). After that no new connection establishment is tried for the set reconnect time out. See also the following graphic.

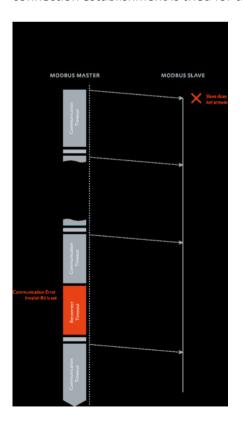



6.2.4 Connection TCP/IP

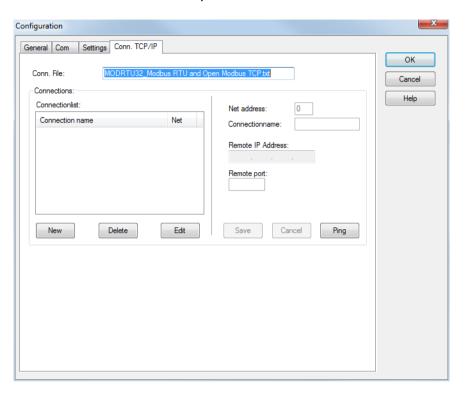



Parameters	Description	
Connection file	Name of the file in which the settings for each of the TCP/IP participants are saved.	
	Display only. Changes to the file name are made in the Options (on page 15) tab.	
Connections	Settings of the connections.	
Connection list	List of defined connections to PLCs.	
Net address	Each connection is assigned a network address. This must correspond to the settings in the Net address property of the variable definition.	
	Note: The Net address property for the variables must be set to 0 for serial communication.	
Connection name	Name of the connection as it is displayed in the connection list.	
Remote IP address	Address of the PLC.	
Remote port	Port address of PLC. You can find details in the manual of your PLC.	
	Standard port: 502	
New	Establishes a new connection.	
Delete	Deletes highlighted connection from the list.	
Edit	Opens highlighted connection for editing.	
Save	Accepts all changes for edited connection and closes editing option.	
Cancel	Discards all changes for edited connection and closes editing option.	
Ping	Sends a ping to the IP address that is configured for this connection. Allows the connection to the device to b tested. If the ping is concluded negatively, check the IP address and check to see if the device is online.	
OK	Accept changes in the dialog and close dialog.	
	Only available if no connection is in the "edit" state.	
Cancel	Discards all changes and closes dialog.	
Help	Opens online help.	

CREATE NEW CONNECTION

1. click on the button New



- 2. Enter the connection details.
- 3. Click on save

EDIT CONNECTION

- 1. select the connection in the connection list
- 2. click on the button Edit
- 3. change the connection parameters
- 4. finish with save

DELETE CONNECTION

- 1. select the connection in the connection list
- 2. click on the button Delete
- 3. the connection will be removed from the list

7. Creating variables

This is how you can create variables in the zenon Editor:

7.1 Creating variables in the Editor

Variables can be created:


- as simple variables
- ▶ in arrays main.chm::/15262.htm
- ▶ as structure variables main.chm::/15278.htm



VARIABLE DIALOG

To create a new variable, regardless of which type:

1. Select the New variable command in the Variables node in the context menu

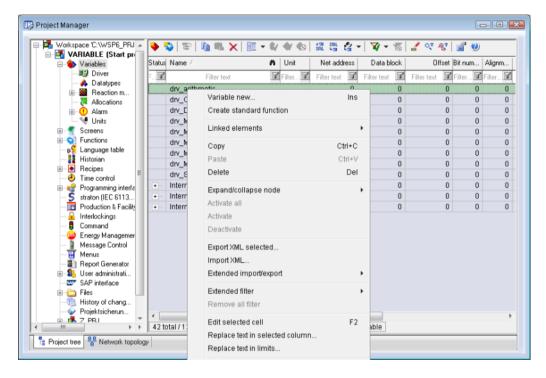

- 2. The dialog for configuring variables is opened
- 3. configure the variable



4. The settings that are possible depends on the type of variables



Property	Description
Name	Distinct name of the variable. If a variable with the same name already exists in the project, no additional variable can be created with this name. Attention: The # character is not permitted in variable names. If non-permitted characters are used, creation of variables cannot be completed and the Finish button remains inactive.
Drivers	Select the desired driver from the drop-down list. Note: If no driver has been opened in the project, the driver for internal variables (Intern.exe (Main.chm::/Intern.chm::/Intern.htm)) is automatically loaded.
Driver object type (cti.chm::/28685.h tm)	Select the appropriate driver object type from the drop-down list.



Data type	Select the desired data type. Click on the button to open the selection dialog.
Array settings	Expanded settings for array variables. You can find details in the Arrays chapter.
Addressing options	Expanded settings for arrays and structure variables. You can find details in the respective section.
Automatic element activation	Expanded settings for arrays and structure variables. You can find details in the respective section.

INHERITANCE FROM DATA TYPE

Measuring range, Signal range and Set value are always:

- derived from the datatype
- ▶ Automatically adapted if the data type is changed

Note for signal range: If a change is made to a data type that does not support the set signal range, the signal range is amended automatically. For example, for a change from INT to SINT, the signal range is changed to 127. The amendment is also carried out if the signal range was not inherited from the data type. In this case, the measuring range must be adapted manually.

7.2 Addressing



Property	Description	
Name	Any name can be chosen; ATTENTION : the name must be unique within each project.	
Identificat ion	Any text can be entered here, e.g. for resource labels, comments	
Net address	Bus address or net address of the variable.	
	When using serial communication, this address corresponds to the Modbus address of the PLC; for communication via Ethernet, it corresponds to the connection configuration in the driver. This defines the PLC/connection on which the variable resides.	
	If a gateway (TCP/IP) is used for communicating with the Modbus stations, you have to create a separate TCP/IP connection for each Modbus station. Use the address of the gateway as the IP address and the address of the Modbus station as the Net address of the connection and in the variables.	
	The highest possible Modbus address, according to the protocol specification, is 247. The address 0 is used for broadcast messages (write only).	
Data block	not used for this driver	
Offset	Offset of the variable; the memory address of the variable in the PLC. Configurable [0 4294967295]	
Alignment	The driver uses word-based addressing (16 bit). If only one Byte is read, you can configure here whether the HiByte or the LowByte will be addressed.	
Bit number	Number of the bit within the configured offset.	
	Valid input [0 65535] Working range [0-15]	
String length	Only available for String variables: Maximum number of characters that the variable can take.	
Driver object type	Depending on the employed driver, an object type is selected during the creation of the variable; the type can be changed here later.	
Data type	Data type of the variable, which is selected during the creation of the variable; the type can be changed here later.	
	ATTENTION: If you change the data type later, all other properties of the variable must be checked and adjusted, if necessary.	



7.3 Driver objects and datatypes

Driver objects are areas available in the PLC, such as markers, data blocks etc. Here you can find out which driver objects are provided by the driver and which IEC data types can be assigned to the respective driver objects.

7.3.1 Driver objects

The following object types are available in this driver:



Driver- object type	Channel type	Read: Modbus function (hex/dec code)	Write: Modbus function (hex/dec code)	Supported data types	Comment
Holding Register	8	0x03 / 3	0x10 / 16	REAL, LREAL, BOOL, DINT, UDINT, USINT, INT, UINT, SINT, STRING	Class 0 - multiple register. Linear addressing: Bit: one-step via offset and bit number Byte (8 bits): one-step via offset and orientation Word (16 bits) Double word (32 bits) Float (32 bits) String(n*Byte): one-step via offset
Coil	65	0x01 / 1	0x05 / 5	BOOL	Class 1 - coil. Linear addressing one-step via offset.
Input status	66	0x02/2	N/A	BOOL	Class 1 - input discretes. Linear addressing one-step via offset.
Analog Input	10	0x04 / 4	N/A	REAL, LREAL, BOOL, DINT, UDINT, USINT, INT, UINT, SINT, STRING	Class 1 - input register. Linear addressing as with holding register.
Preset Single Register (FC 6)	67	N/A	0x06 / 6	UINT	Class 1 - single register.
Alarm stack	97	0x03 / 3	N/A	STRING	Read special events from Secheron PLC.



					Addressing: • Event type = data block • Sub-type = offset.
Device status	24	0x11 / 17	N/A	BOOL, USINT	PLC specific.
Device identific ation	68	0x2B / 43	N/A	STRING	PLC specific.
Driver variable	35	Y	Y	BOOL, SINT, USINT, INT, UINT, DINT, UDINT, REAL, STRING	Variables for the statistical analysis of communication. Note: Transfers between Runtime and driver not to the PLC. Find out more in the chapter about the Driver variables (on page 37)



MODBUS FUNCTION CODES

Function code hex/dec	Modbus identifier	Comment
0x01 / 1	Read coils	This function code is used to read from 1 to 2000 contiguous status of coils (bits) in a remote device
0x02/2	Read discrete inputs	This function code is used to read from 1 to 2000 contiguous status of discrete inputs (bits) in a remote device
0x03 / 3	Read multiple registers This function code is used to read a block of contiguous holding registers (1 to 125 words) in a remote device.	
0x04 / 4	Read input registers	This function code is used to read a block of contiguous input registers (1 to 125 words) in a remote device.
0x05 / 5	Write coil	This function code is used to write a single output (one bit) to either ON or OFF in a remote device.
0x06 / 6	Write single register	This function code is used to write a single (one word) holding register in a remote device.
0x10 / 16	Write multiple registers	This function code is used to write a block of contiguous holding registers (1 to approx. 120 words) in a remote device.
0x11 / 17	Report Slave ID	This function code is used to read the description of the type, the current status, and other information specific to a remote device.
0x2B / 43	Read Device Identification	This function code allows reading the identification and additional information relative to the physical and functional description of a remote device.

7.3.2 Mapping of the data types

All variables in zenon are derived from IEC data types. The following table compares the IEC datatypes with the datatypes of the PLC.



EXAMPLE FOR ALL POSSIBLE ZENON DATA TYPES:

PLC	zenon	Data type
BOOL	BOOL	8
ВУТЕ	SINT	10
ВУТЕ	USINT	9
WORD	INT	1
WORD	UINT	2
DWORD	DINT	3
DWORD	UDINT	4
FLOAT	REAL	5
FLOAT	LREAL	6
STRING	STRING	12

Data type: The property Data type is the internal numerical name of the data type. It is also used for the extended DBF import/export of the variables.

7.4 Creating variables by importing

Variables can also be imported by importing them. The XML and DBF import is available for every driver.

7.4.1 XML import of variables from another zenon project

For the import/export of variables the following is true:

- ► The import/export must not be started from the global project.
- ► The start takes place via:
 - Context menu of variables or data typ in the project tree
 - or context menu of a variable or a data type
 - or symbol in the symbol bar variables



Attention

When importing/overwriting an existing data type, all variables based on the existing data type are changed.

Example:

There is a data type XYZ derived from the type INT with variables based on this data type. The XML file to be imported also contains a data type with the name XYZ but derived from type STRING. If this data type is imported, the existing data type is overwritten and the type of all variables based on it is adjusted. I.e. the variables are now no longer INT variables, but STRING variables.

7.4.2 **DBF Import/Export**

Data can be exported to and imported from dBase.

IMPORT DBF FILE

To start the import:

- 1. right-click on the variable list
- 2. in the drop-down menu of Extended export/import... Select the Import dBase Command
- 3. follow the import assistant

The format of the file is described in the chapter File structure.



Info

Note:

- Driver object type and data type must be amended to the target driver in the DBF file in order for variables to be imported.
- dBase does not support structures or arrays (complex variables) at import.



EXPORT DBF FILE

To start the export:

- 1. right-click on the variable list
- 2. in the drop-down menu of Extended export/import... Select the Export dBase Command
- 3. follow the export assistant



Attention

DBF files:

- must correspond to the 8.3 DOS format for filenames (8 alphanumeric characters for name, 3 character suffix, no spaces)
- must not have dots (.) in the path name. e.g. the path C:\users\John.Smith\test.dbf is invalid. Valid: C: \users\JohnSmith\test.dbf
- must be stored close to the root directory in order to fulfill the limit for file name length including path: maximum 255 characters

The format of the file is described in the chapter File structure.



Info

dBase does not support structures or arrays (complex variables) at export.

File structure of the dBase export file

The dBaseIV file must have the following structure and contents for variable import and export:



Attention

dBase does not support structures or arrays (complex variables) when exporting.

DBF files must:

- ▶ correspond to the 8.3 DOS format for filenames (8 alphanumeric characters for name, 3 character suffix, no spaces)
- ▶ Be stored close to the root directory (Root)

DESIGN

Description	Туре	Field size	Comment
KANALNAME	Char	128	Variable name.
			The length can be limited using the MAX_LAENGE entry in project.ini .
KANAL_R	С	128	The original name of a variable that is to be replaced by the new name entered under "KANALNAME" (field/column must be entered manually).
			The length can be limited using the MAX_LAENGE entry in project.ini .
KANAL_D	Log	1	The variable is deleted with the $1\ \rm entry$ (field/column has to be created by hand).
TAGNR	С	128	Identification.
			The length can be limited using the MAX_LAENGE entry in project.ini .
EINHEIT	С	11	Technical unit
DATENART	С	3	Data type (e.g. bit, byte, word,) corresponds to the data type.
KANALTYP	С	3	Memory area in the PLC (e.g. marker area, data area,) corresponds to the driver object type.
HWKANAL	Num	3	Bus address
BAUSTEIN	N	3	Datablock address (only for variables from the data area of the PLC)
ADRESSE	N	5	Offset



D.T. T. D.T.	T		- 10 10 10 11
BITADR	N	2	For bit variables: bit address For byte variables: 0=lower, 8=higher byte For string variables: Length of string (max. 63 characters)
ARRAYSIZE	N	16	Number of variables in the array for index variables ATTENTION: Only the first variable is fully available. All others are only available for VBA or the Recipe Group Manager
LES_SCHR	R	1	Write-Read-Authorization 0: Not allowed to set value. 1: Allowed to set value.
MIT_ZEIT	R	1	time stamp in zenon (only if supported by the driver)
OBJEKT	N	2	Driver-specific ID number of the primitive object comprises KANALTYP and DATENART
SIGMIN	Float	16	Non-linearized signal - minimum (signal resolution)
SIGMAX	F	16	Non-linearized signal - maximum (signal resolution)
ANZMIN	F	16	Technical value - minimum (measuring range)
ANZMAX	F	16	Technical value - maximum (measuring range)
ANZKOMMA	N	1	Number of decimal places for the display of the values (measuring range)
UPDATERATE	F	19	Update rate for mathematics variables (in sec, one decimal possible) not used for all other variables
MEMTIEFE	N	7	Only for compatibility reasons
HDRATE	F	19	HD update rate for historical values (in sec, one decimal possible)
HDTIEFE	N	7	HD entry depth for historical values (number)
NACHSORT	R	1	HD data as postsorted values
DRRATE	F	19	Updating to the output (for zenon DDE server, in [s], one decimal possible)
HYST_PLUS	F	16	Positive hysteresis, from measuring range
HYST_MINUS	F	16	Negative hysteresis, from measuring range
PRIOR	N	16	Priority of the variable
REAMATRIZE	С	32	Allocated reaction matrix
			1



F	16	Substitute value, from measuring range
F	16	Minimum for set value actions, from measuring range
F	16	Maximum for set value actions, from measuring range
R	1	Get value from standby server; the value of the variable is not requested from the server but from the standby-server in redundant networks
С	128	Resource label.
		Free string for export and display in lists.
		The length can be limited using the MAX_LAENGE entry in project.ini .
R	1	Non-linear value adaption:
		0: Non-linear value adaption is used
		1: non linear value adaption is not used
С	128	Linked VBA macro for reading the variable value for non-linear value adjustment.
С	128	Linked VBA macro for writing the variable value for non-linear value adjustment.
N	16	Linked counter REMA.
N	16	Gradient overflow for counter REMA.
	F F R C C	F 16 F 16 R 1 C 128 C 128 C 128 N 16



△ Attention.

When importing, the driver object type and data type must be amended to the target ${\it driver in the DBF file in order for variables to be imported.}$

LIMIT DEFINITION

Limit definition for limit values 1 to 4, and status 1 to 4:



Description	Туре	Field size	Comment
AKTIV1	R	1	Limit value active (per limit value available)
GRENZWERT1	F	20	Technical value or ID number of a linked variable for a dynamic limit (see VARIABLEx) (if VARIABLEx is 1 and here it is -1 , the existing variable linkage is not overwritten)
SCHWWERT1	F	16	Threshold value for limit
HYSTERESE1	F	14	Hysteresis in %
BLINKEN1	R	1	Set blink attribute
BTB1	R	1	Logging in CEL
ALARM1	R	1	Alarm
DRUCKEN1	R	1	Printer output (for CEL or Alarm)
QUITTIER1	R	1	Must be acknowledged
LOESCHE1	R	1	Must be deleted
VARIABLE1	R	1	Dyn. limit value linking the limit is defined by an absolute value (see field GRENZWERTx).
FUNC1	R	1	Function linking
ASK_FUNC1	R	1	With interrogation before execution
FUNC_NR1	N	10	ID number of the linked function (if "-1" is entered here, the existing function is not overwritten during import)
A_GRUPPE1	N	10	Alarm/event group
A_KLASSE1	N	10	Alarm/event class
MIN_MAX1	С	3	Minimum, Maximum
FARBE1	N	10	Color as Windows coding
GRENZTXT1	С	66	Limit value text
A_DELAY1	N	10	Time delay
INVISIBLE1	R	1	Invisible

Expressions in the column "Comment" refer to the expressions used in the dialog boxes for the definition of variables. For more information, see chapter Variable definition.



7.5 **Driver variables**

The driver kit implements a number of driver variables. These are divided into:

- Information
- Configuration
- Statistics and
- Error messages

The definitions of the variables defined in the driver kit are available in the import file drvvar.dbf (on the CD in the directory: CD Drive:/Predefined/Variables) and can be imported from there.

Hint: Variable names must be unique in zenon. If driver variables are to be imported from drvvar.dbf again, the variables that were imported beforehand must be renamed.



Info

Not every driver supports all driver variants.

For example:

- Variables for modem information are only supported by modem-compatible drivers
- Driver variables for the polling cycle only for pure polling drivers
- Connection-related information such as ErrorMSG only for drivers that only edit one connection at a a time



INFORMATION

Name from import	Туре	Offset	Description
MainVersion	UINT	0	Main version number of the driver.
SubVersion	UINT	1	Sub version number of the driver.
BuildVersion	UINT	29	Build version number of the driver.
RTMajor	UINT	49	zenon main version number
RTMinor	UINT	50	zenon sub version number
RTSp	UINT	51	zenon service pack number
RTBuild	UINT	52	zenon build number
LineStateIdle	BOOL	24.0	TRUE, if the modem connection is idle
LineStateOffering	BOOL	24.1	TRUE, if a call is received
LineStateAccepted	BOOL	24.2	The call is accepted
LineStateDialtone	BOOL	24.3	Dialtone recognized
LineStateDialing	BOOL	24.4	Dialing active
LineStateRingBack	BOOL	24.5	While establishing the connection
LineStateBusy	BOOL	24.6	Target station is busy
LineStateSpecialInfo	BOOL	24.7	Special status information received
LineStateConnected	BOOL	24.8	Connection established
LineStateProceeding	BOOL	24.9	Dialing completed
LineStateOnHold	BOOL	24.10	Connection in hold
LineStateConferenced	BOOL	24.11	Connection in conference mode.
LineStateOnHoldPendConf	BOOL	24.12	Connection in hold for conference
LineStateOnHoldPendTransfer	BOOL	24.13	Connection in hold for transfer
LineStateDisconnected	BOOL	24.14	Connection stopped
LineStateUnknow	BOOL	24.15	Connection status unknown
ModemStatus	UDINT	24	Current modem status
TreiberStop	BOOL	28	Driver stopped



			For driver stop, the variable has the value TRUE and an OFF bit. After the driver has started, the variable has the value FALSE and no OFF bit.
SimulRTState	UDINT	60	Informs the status of Runtime for driver simulation.

CONFIGURATION

Name from import	Туре	Offset	Description
ReconnectInRead	BOOL	27	If TRUE, the modem is automatically reconnected for reading
ApplyCom	BOOL	36	Apply changes in the settings of the serial interface. Writing to this variable immediately results in the method SrvDrvVarApplyCom being called (which currently has no further function).
ApplyModem	BOOL	37	Apply changes in the settings of the modem. Writing this variable immediately calls the method SrvDrvVarApplyModem. This closes the current connection and opens a new one according to the settings PhoneNumberSet and ModemHwAdrSet.
PhoneNumberSet	STRING	38	Telephone number, that should be used
ModemHwAdrSet	DINT	39	Hardware address for the telephone number
GlobalUpdate	UDINT	3	Update time in milliseconds (ms).
BGlobalUpdaten	BOOL	4	TRUE, if update time is global
TreiberSimul	BOOL	5	TRUE, if driver in sin simulation mode
TreiberProzab	BOOL	6	TRUE, if the variables update list should be kept in the memory
ModemActive	BOOL	7	TRUE, if the modem is active for the driver



Device	STRING	8	Name of the serial interface or name of the modem
ComPort	UINT	9	Number of the serial interface.
Baud rate	UDINT	10	Baud rate of the serial interface.
Parity	SINT	11	Parity of the serial interface
ByteSize	SINT	14	Number of bits per character of the serial interface
			Value = 0 if the driver cannot establish any serial connection.
StopBit	SINT	13	Number of stop bits of the serial interface.
Autoconnect	BOOL	16	TRUE, if the modem connection should be established automatically for reading/writing
PhoneNumber	STRING	17	Current telephone number
ModemHwAdr	DINT	21	Hardware address of current telephone number
RxIdleTime	UINT	18	Modem is disconnected, if no data transfer occurs for this time in seconds (s)
WriteTimeout	UDINT	19	Maximum write duration for a modem connection in milliseconds (ms).
RingCountSet	UDINT	20	Number of ringing tones before a call is accepted
ReCallIdleTime	UINT	53	Waiting time between calls in seconds (s).
ConnectTimeout	UDINT	54	Time in seconds (s) to establish a connection.



STATISTICS

Name from import	Туре	Offset	Description
MaxWriteTime	UDINT	31	The longest time in milliseconds (ms) that is required for writing.
MinWriteTime	UDINT	32	The shortest time in milliseconds (ms) that is required for writing.
MaxBlkReadTime	UDINT	40	Longest time in milliseconds (ms) that is required to read a data block.
MinBlkReadTime	UDINT	41	Shortest time in milliseconds (ms) that is required to read a data block.
WriteErrorCount	UDINT	33	Number of writing errors
ReadSucceedCount	UDINT	35	Number of successful reading attempts
MaxCycleTime	UDINT	22	Longest time in milliseconds (ms) required to read all requested data.
MinCycleTime	UDINT	23	Shortest time in milliseconds (ms) required to read all requested data.
WriteCount	UDINT	26	Number of writing attempts
ReadErrorCount	UDINT	34	Number of reading errors
MaxUpdateTimeNormal	UDINT	56	Time since the last update of the priority group Normal in milliseconds (ms).
MaxUpdateTimeHigher	UDINT	57	Time since the last update of the priority group Higher in milliseconds (ms).
MaxUpdateTimeHigh	UDINT	58	Time since the last update of the priority group нідь in milliseconds (ms).
MaxUpdateTimeHighest	UDINT	59	Time since the last update of the priority group Highest in milliseconds (ms).



PokeFinish BOOL 55	Goes to 1 for a query, if all current pokes were executed
--------------------	---

ERROR MESSAGES

Name from import	Туре	Offset	Description
ErrorTimeDW	UDINT	2	Time (in seconds since 1.1.1970), when the last error occurred.
ErrorTimeS	STRING	2	Time (in seconds since 1.1.1970), when the last error occurred.
RdErrPrimObj	UDINT	42	Number of the PrimObject, when the last reading error occurred.
RdErrStationsName	STRING	43	Name of the station, when the last reading error occurred.
RdErrBlockCount	UINT	44	Number of blocks to read when the last reading error occurred.
RdErrHwAdresse	UDINT	45	Hardware address when the last reading error occurred.
RdErrDatablockNo	UDINT	46	Block number when the last reading error occurred.
RdErrMarkerNo	UDINT	47	Marker number when the last reading error occurred.
RdErrSize	UDINT	48	Block size when the last reading error occurred.
DrvError	SINT	25	Error message as number
DrvErrorMsg	STRING	30	Error message as text
ErrorFile	STRING	15	Name of error log file

8. Driver-specific functions

This driver supports the following functions:

BLOCKWRITE

You can activate blockwrite to make the sending of a large number of set value (e.g. recipes) more efficient. Variables that reside next to each other in the PLC memory will then be written into one write



telegram; for larger areas, the variables will be packed into a few telegrams instead of writing every single variable.

Activating blockwrite

The following entry must be added to the project.ini:

[MODRTU32]

BLOCKWRITE=1

TRANSACTION IDENTIFICATION

The driver increases the transaction identifier for each packet sent and expects a response from the slave with the same identifier or 0.

9. Driver commands


This chapter describes standard functions that are valid for most zenon drivers. Not all functions described here are available for every driver. For example, a driver that does not, according to the data sheet, support a modem connection also does not have any modem functions.

Driver commands are used to influence drivers using zenon; start and stop for example. The engineering is implemented with the help of function Driver commands. To do this:

- create a new function
- ▶ select Variables -> Driver commands



▶ The dialog for configuration is opened

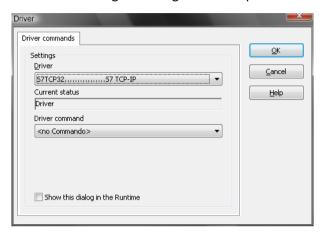

Parameters	Description
Drivers	Drop-down list with all drivers which are loaded in the project.
Current state	Fixed entry which has no function in the current version.
Driver commands	Drop-down list for the selection of the command.
<pre>Start driver (online mode)</pre>	Driver is reinitialized and started.
<pre>> Stop driver (offline mode)</pre>	Note: If the driver is in offline mode, all variables that were created for this driver receive the status switched off (OFF; Bit 20).
Driver in simulation mode	Driver is set into simulation mode. The values of all variables of the driver are simulated by the driver. No values from the connected hardware (e.g. PLC, bus system,) are displayed.
Driver in hardware mode	Driver is set into hardware mode. For the variables of the driver the values from the connected hardware (e.g. PLC, bus system,) are displayed.
▶ Driver-specific command	Enter driver-specific commands. Opens input field in order to enter a command.
▶ Activate driver write set value	Write set value to a driver is allowed.
▶ Deactivate driver	Write set value to a driver is prohibited.



write set value	
▶ Establish connection with modem	Establish connection (for modem drivers) Opens the input fields for the hardware address and for the telephone number.
▶ Disconnect from modem	Terminate connection (for modem drivers)
Show this dialog in the Runtime	The dialog is shown in Runtime so that changes can be made.

DRIVER COMMANDS IN THE NETWORK

If the computer, on which the driver command function is executed, is part of the zenon network, additional actions are carried out. A special network command is sent from the computer to the project server, which then executes the desired action on its driver. In addition, the Server sends the same driver command to the project standby. The standby also carries out the action on its driver.

This makes sure that Server and Standby are synchronized. This only works if the Server and the Standby both have a working and independent connection to the hardware.

10. Error analysis

Should there be communication problems, this chapter will assist you in finding out the error.

10.1 Analysis tool

All zenon modules such as Editor, Runtime, drivers, etc. write messages to a joint log file. To display them correctly and clearly, use the Diagnosis Viewer (main.chm::/12464.htm) program that was also installed with zenon. You can find it under *Start/All programs/zenon/Tools 7.00 -> Diagviewer*.

zenon driver log all errors in the log files. The default folder for the log files is subfolder <u>rog</u> in directory ProgramData, example: C:\ProgramData\zenon \zenon700\LOG for zenon version 7.00 SPO. Log files are text files with a special structure.



Attention: With the default settings, a driver only logs error information. With the <code>Diagnosis</code> <code>Viewer</code> you can enhance the diagnosis level for most of the drivers to "Debug" and "Deep Debug". With this the driver also logs all other important tasks and events.

In the Diagnosis Viewer you can also:

- ▶ follow currently created entries live
- customize the logging settings
- change the folder in which the log files are saved

Hints:

- 1. In Windows CE even errors are not logged per default due to performance reasons.
- 2. The Diagnosis Viewer displays all entries in UTC (coordinated world time) and not in local time.
- 3. The Diagnosis Viewer does not display all columns of a log file per default. To display more columns activate property Add all columns with entry in the context menu of the column header.
- 4. If you only use Error logging, the problem description is in column Error text. For other diagnosis level the description is in column General text.
- 5. For communication problems many drivers also log error numbers which the PLC assigns to them. They are displayed in Error text and/or Error code and/or Driver error parameter (1 and 2). Hints on the meaning of error codes can be found in the driver documentation and the protocol/PLC description.
- 6. At the end of your test set back the diagnosis level from Debug Or Deep Debug. At Debug and Deep Debug there are a great deal of data for logging which are saved to the hard drive and which can influence your system performance. They are still logged even after you close the Diagnosis Viewer.



You can find further information on the Diagnosis Viewer in the Diagnose Viewer (main.chm::/12464.htm) chapter.



10.2 Error numbers

The following error codes apply ONLY for the error messages

CallSPSread FAILED! ERROR: and

'CallSPSwrite FAILED! ERROR:'

-1	Invalid function
-2	Invalid MW address
-3	Invalid date
-4	Slave error
-7	Slave cannot execute function
-8	Slave memory parity error
-10	Timeout while communicating with Slave
-11	Read request failed! Communication with PLC impossible.

The fields Para1 and Para2 contain additional information about the variable that cannot be read:

The number relate to the internal ID

Para1: Channel type (e.g.: 8=Holding Register)

8: Holding Register

10 Input Register

24 Status

65 COIL

66 Input Status



67 Preset Single Register

Para2: Data type (e.g: 2= Word, UINT)

- 1: INT
- 2: UINT
- 3: DINT
- 4: UDINT
- 5: REAL
- 8: BOOL
- 9: SINT
- 10: USINT

10.3 Check list

- ▶ Is the COM port in use by another application or are the settings incorrect?
- ▶ Is the device (PLC) that you are trying to communicate with connected to the power supply?
- ► Is the cable between PLC and PC/IPC connected correctly?
- Do the used addresses exist in the PLC ?
- ▶ Was the log file analyzed with the help of the Diagnosis Viewer? (Which errors occurred)?
- ▶ When using communication via TCP: make sure the configured port is free and not blocked by a firewall.
- ► Test with telnet: can you establish a connection?