



**zenon**  
by COPA-DATA

# zenon driver manual CTI

v.8.20



© 2020 Ing. Punzenberger COPA-DATA GmbH

All rights reserved.

Distribution and/or reproduction of this document or parts thereof in any form are permitted solely with the written permission of the company COPA-DATA. Technical data is only used for product description and are not guaranteed properties in the legal sense. Subject to change, technical or otherwise.

# Contents

<b>1</b>	<b>Welcome to COPA-DATA help .....</b>	<b>4</b>
<b>2</b>	<b>CTI .....</b>	<b>4</b>
<b>3</b>	<b>CTI - data sheet.....</b>	<b>5</b>
<b>4</b>	<b>Driver history.....</b>	<b>6</b>
<b>5</b>	<b>Requirements .....</b>	<b>7</b>
<b>6</b>	<b>Configuration .....</b>	<b>7</b>
6.1	Creating a driver.....	8
6.2	Settings in the driver dialog .....	11
6.2.1	General .....	12
6.2.2	Connections .....	16
<b>7</b>	<b>Creating variables .....</b>	<b>17</b>
7.1	Creating variables in the Editor .....	17
7.2	Addressing.....	21
7.3	Secondary object type .....	22
7.4	Driver objects and datatypes .....	24
7.4.1	Driver objects.....	25
7.4.2	Mapping of the data types.....	27
7.5	Creating variables by importing.....	28
7.5.1	XML import.....	29
7.5.2	DBF Import/Export.....	30
7.6	Communication details (Driver variables).....	35
<b>8</b>	<b>Driver-specific functions .....</b>	<b>41</b>
<b>9</b>	<b>Driver command function.....</b>	<b>42</b>
<b>10</b>	<b>Error analysis .....</b>	<b>47</b>
10.1	Analysis tool.....	47
10.2	Driver monitoring .....	48
10.3	Analysis for wrongly addressed variables.....	49
10.4	Check list.....	55

# 1 Welcome to COPA-DATA help

## ZENON VIDEO TUTORIALS

You can find practical examples for project configuration with zenon in our YouTube channel ([https://www.copadata.com/tutorial\\_menu](https://www.copadata.com/tutorial_menu)). The tutorials are grouped according to topics and give an initial insight into working with different zenon modules. All tutorials are available in English.

## GENERAL HELP

If you cannot find any information you require in this help chapter or can think of anything that you would like added, please send an email to [documentation@copadata.com](mailto:documentation@copadata.com).

## PROJECT SUPPORT

You can receive support for any real project you may have from our customer service team, which you can contact via email at [support@copadata.com](mailto:support@copadata.com).

## LICENSES AND MODULES

If you find that you need other modules or licenses, our staff will be happy to help you. Email [sales@copadata.com](mailto:sales@copadata.com).

# 2 CTI

Driver for CTI or Texas Instruments TI 505 for protocols CAMP, NITP with packed task codes.

The driver supports:

- ▶ several TCP connections (controls) per driver
- ▶ Multi block read via packed task codes
- ▶ Blockwrite.

### 3 CTI - data sheet

General:	
Driver file name	CTI.exe
Driver name	CTI driver
PLC types	CTI PLCs, Ti505, Simatic 545, Simatic 555
PLC manufacturer	Siemens; Texas Instruments; CTI

Driver supports:	
Protocol	NITP; CAMP
Addressing: Address-based	Address based
Addressing: Name-based	--
Spontaneous communication	--
Polling communication	X
Online browsing	--
Offline browsing	--
Real-time capable	--
Blockwrite	X
Modem capable	--
RDA numerical	X
RDA String	--
Hysteresis	--
extended API	--
Supports status bit <b>WR-SUC</b>	--
alternative IP address	X

Requirements:	
Hardware PC	Standard network card
Software PC	--
Hardware PLC	--
Software PLC	--
Requires v-dll	X

Platforms:	
Operating systems	Windows 10; Windows 7; Windows 8; Windows 8.1; Windows Server 2008 R2; Windows Server 2012; Windows Server 2012 R2; Windows Server 2016

## 4 Driver history

Date	Driver version	Change
3/16/2010	100	Created driver documentation

### DRIVER VERSIONING

The versioning of the drivers was changed with zenon 7.10. There is a cross-version build number as of this version. This is the number in the 4th position of the file version, For example: **7.10.0.4228** means: The driver is for version **7.10** service pack **0**, and has the build number **4228**.

Expansions or error rectifications will be incorporated into a build in the future and are then available from the next consecutive build number.

### Example

A driver extension was implemented in build **4228**. The driver that you are using is build number **8322**. Because the build number of your driver is higher than the build number of the extension, the extension is included. The version number of the driver (the first three digits of the file version) do not have any significance in relation to this. The drivers are version-agnostic

## 5 Requirements

This chapter contains information on the requirements that are necessary for use of this driver.

## 6 Configuration


In this chapter you will learn how to use the driver in a project and which settings you can change.

### Information

Find out more about further settings for zenon variables in the chapter Variables of the online manual.

## 6.1 Creating a driver

In the **Create driver** dialog, you create a list of the new drivers that you want to create.

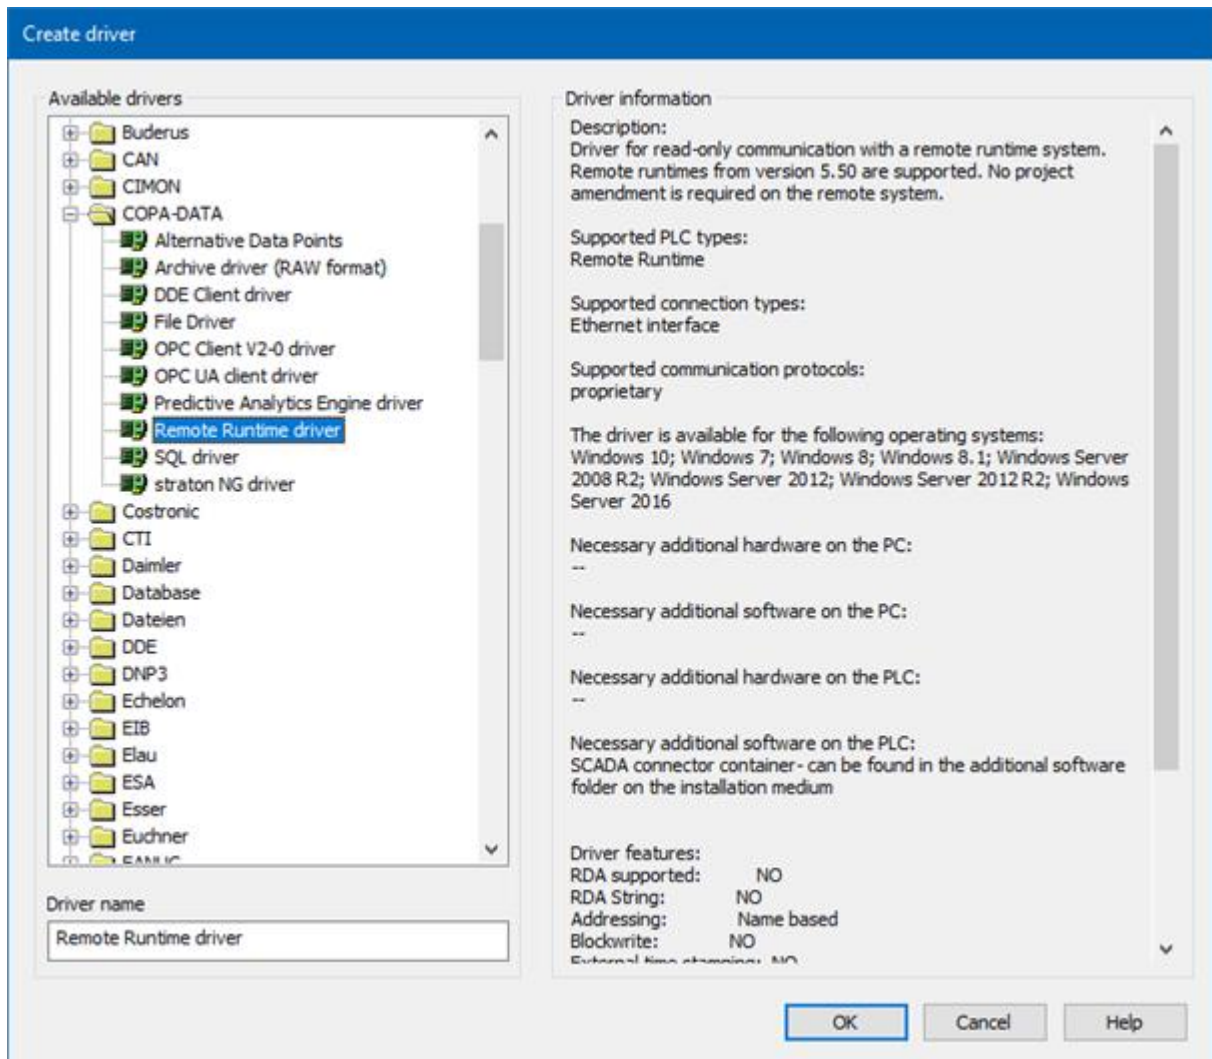

Parameter	Description
<b>Available drivers</b>	<p>List of all available drivers.</p> <p>The display is in a tree structure:  [+] expands the folder structure and shows the drivers contained therein.  [-] reduces the folder structure</p> <p>Default: <i>No selection</i></p>
<b>Driver name</b>	<p>Unique <b>Identification</b> of the driver.</p> <p>Default: <i>empty</i></p> <p>The input field is pre-filled with the pre-defined</p>

Parameter	Description
	<b>Identification</b> after selecting a driver from the list of available drivers.
<b>Driver information</b>	Further information on the selected driver. Default: <i>empty</i> The information on the selected driver is shown in this area after selecting a driver.

## CLOSE DIALOG

Option	Description
<b>OK</b>	Accepts all settings and opens the driver configuration dialog of the selected driver.
<b>Cancel</b>	Discards all changes and closes the dialog.
<b>Help</b>	Opens online help.



### Information

The content of this dialog is saved in the file called Treiber\_[Language].xml. You can find this file in the following folder:

*C:\ProgramData\COPA-DATA\zenon[version number].*

## CREATE NEW DRIVER


In order to create a new driver:

1. Right-click on **Driver** in the Project Manager and select **New driver** in the context menu.

Optional: Select the **New driver** button from the toolbar of the detail view of the **Variables**. The Create driver dialog is opened.

The **Create simple data type** dialog is opened.

- The dialog offers a list of all available drivers.

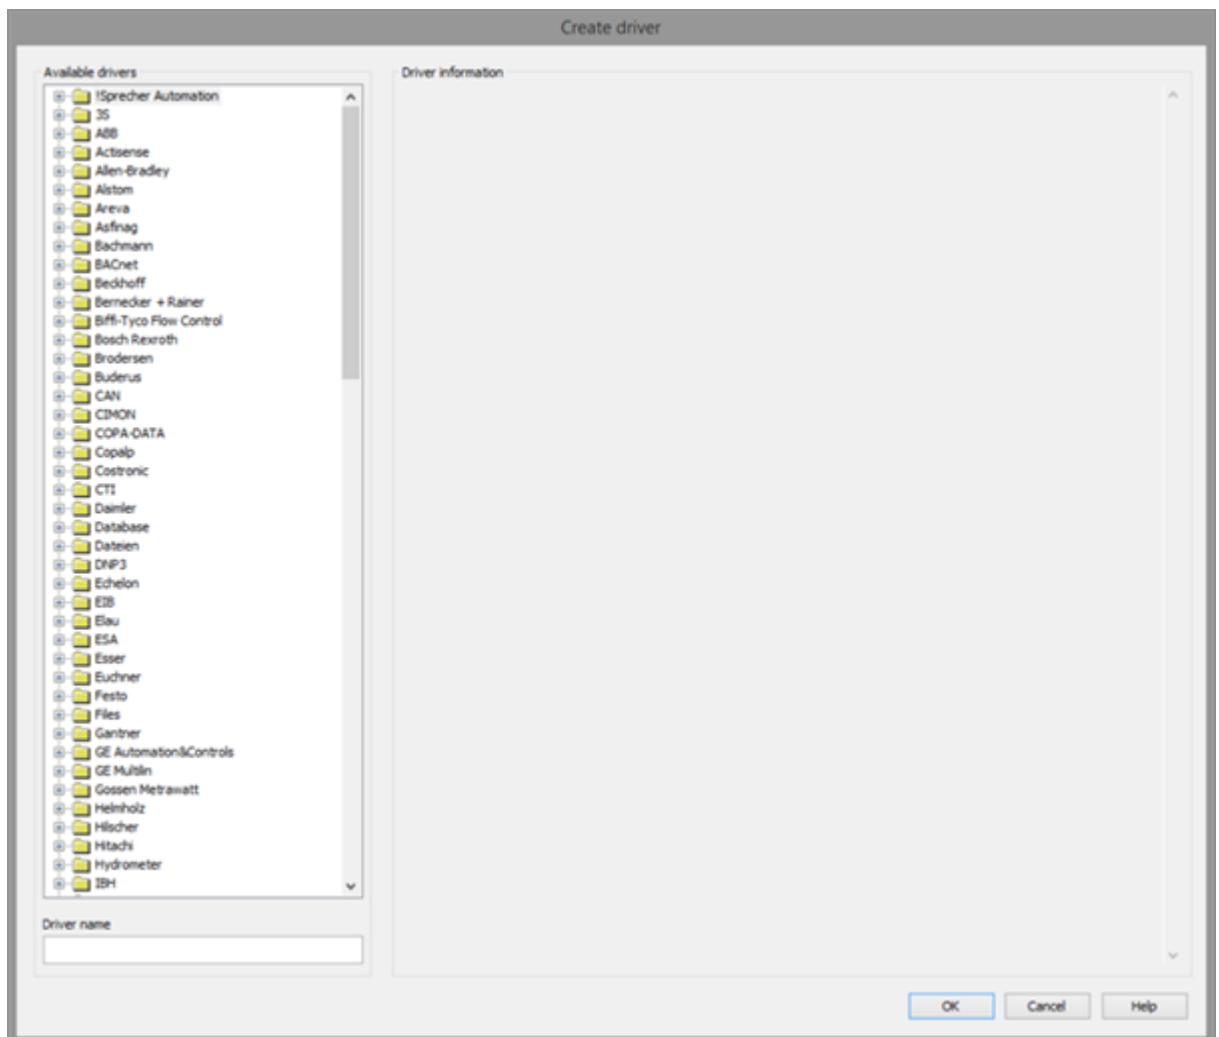

- Select the desired driver and name it in the **Driver name** input field. This input field corresponds to the **Identification** property. The name of the selected driver is automatically inserted into this input field by default.


The following is applicable for the **Driver name**:

  - ▶ The **Driver name** must be unique.  
If a driver is used more than once in a project, a new name has to be given each time. This is evaluated by clicking on the **OK** button. If the driver is already present in the project, this is shown with a warning dialog.
  - ▶ The **Driver name** is part of the file name.  
Therefore it may only contain characters which are supported by the operating system. Invalid characters are replaced by an underscore (\_).
  - ▶ **Attention:** This name cannot be changed later on.
- Confirm the dialog by clicking on the **OK** button.  
The configuration dialog for the selected driver is opened.

**Note:** The language of driver names cannot be switched. They are always shown in the language in which they have been created, regardless of the language of the Editor. This also applies to driver object types.

### DRIVER NAME DIALOG ALREADY EXISTS

If there is already a driver in the project, this is shown in a dialog. The warning dialog is closed by clicking on the **OK** button. The driver can be named correctly.

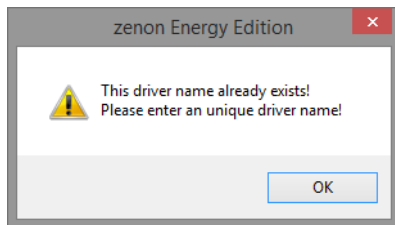

### ZENON PROJECT

The following drivers are created automatically for newly-created projects:

- ▶ **Intern**
- ▶ **MathDr32**
- ▶ **SysDrv**

#### **Information**


Only the required drivers need to be present in a zenon project. Drivers can be added at a later time if required.

## 6.2 Settings in the driver dialog

You can change the following settings of the driver:

## 6.2.1 General

The configuration dialog is opened when a driver is created. In order to be able to open the dialog later for editing, double click on the driver in the list or click on the **Configuration** property.

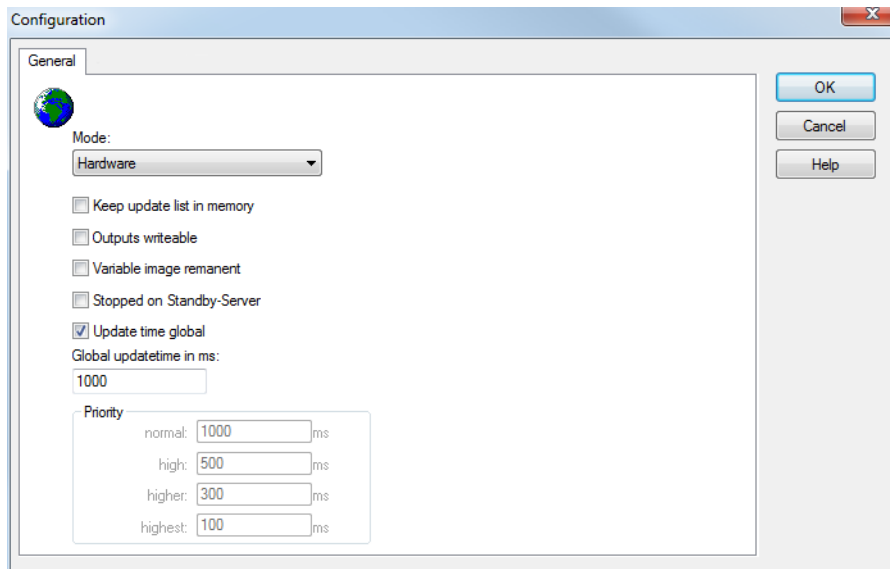

Option	Description
<b>Mode</b>	<p>Allows to switch between hardware mode and simulation mode</p> <ul style="list-style-type: none"> <li>▶ <i>Hardware:</i> A connection to the control is established.</li> <li>▶ <i>Simulation - static:</i> No communication between to the control is established, the values are simulated by the driver. In this modus the values remain constant or the variables keep the values which were set by zenon Logic. Each variable has its own memory area. E.g. two variables of the type marker with offset 79 can have different values in the Runtime and do not influence each other. Exception: The simulator driver.</li> <li>▶ <i>Simulation - counting:</i> No communication between to the control is established, the values are simulated by the driver. In this modus the driver increments the values within a value range automatically.</li> <li>▶ <i>Simulation - programmed:</i> No communication is established to the PLC. The</li> </ul>

Option	Description
	<p>values are calculated by a freely programmable simulation project. The simulation project is created with the help of the zenon Logic Workbench and runs in a zenon Logic Runtime which is integrated in the driver.</p> <p>For details see chapter Driver simulation.</p>
<b>Keep update list in the memory</b>	<p>Variables which were requested once are still requested from the control even if they are currently not needed. This has the advantage that e.g. multiple screen switches after the screen was opened for the first time are executed faster because the variables need not be requested again. The disadvantage is a higher load for the communication to the control.</p>
<b>Output can be written</b>	<ul style="list-style-type: none"> <li>▶ <i>Active:</i> Outputs can be written.</li> <li>▶ <i>Inactive:</i> Writing of outputs is prevented.</li> </ul> <p><b>Note:</b> Not available for every driver.</p>
<b>Variable image remanent</b>	<p>This option saves and restores the current value, time stamp and the states of a data point.</p> <p>Fundamental requirement: The variable must have a valid value and time stamp.</p> <p>The variable image is saved in hardware mode if one of these statuses is active:</p> <ul style="list-style-type: none"> <li>▶ User status <i>M1 (0) to M8 (7)</i></li> <li>▶ <i>REVISION(9)</i></li> <li>▶ <i>AUS(20)</i></li> <li>▶ <i>ERSATZWERT(27)</i></li> </ul> <p>The variable image is always saved if:</p> <ul style="list-style-type: none"> <li>▶ the variable is of the <b>Communication details</b> object type</li> <li>▶ the driver runs in simulation mode. (not programmed simulation)</li> </ul> <p>The following states are not restored at the start of the Runtime:</p>

Option	Description
	<ul style="list-style-type: none"> <li>▶ <i>SELECT(8)</i></li> <li>▶ <i>WR-ACK(40)</i></li> <li>▶ <i>WR-SUC(41)</i></li> </ul> <p>The mode <b>Simulation - programmed</b> at the driver start is not a criterion in order to restore the remanent variable image.</p>
<b>Stop on Standby Server</b>	<p>Setting for redundancy at drivers which allow only one communication connection. For this the driver is stopped at the Standby Server and only started at the upgrade.</p> <p><b>Attention:</b> If this option is active, the gapless archiving is no longer guaranteed.</p> <ul style="list-style-type: none"> <li>▶ <i>Active:</i> Sets the driver at the not-process-leading Server automatically in a stop-like state. In contrast to stopping via driver command, the variable does not receive status <b>switched off</b> but an empty value. This prevents that at the upgrade to the Server irrelevant values are created in the AML, CEL and Historian.</li> </ul> <p>Default: <i>inactive</i></p> <p><b>Note:</b> Not available if the CE terminal serves as a data server. You can find further information in the zenon Operator manual in the CE terminal as a data server chapter.</p>
<b>Global Update time</b>	<p>Setting for the global update times in milliseconds:</p> <ul style="list-style-type: none"> <li>▶ <i>Active:</i> The set <b>Global update time</b> is used for all variables in the project. The priority set at the variables is not used.</li> <li>▶ <i>Inactive:</i> The set priorities are used for the individual variables.</li> </ul> <p><b>Exceptions:</b> Spontaneous drivers ignore this option. They generally use the shortest possible update time. For details, see the <b>Spontaneous driver update time</b> section.</p>

Option	Description
<b>Priority</b>	<p>The polling times for the individual priority classes are set here. All variables with the according priority are polled in the set time.</p> <p>The variables are allocated separately in the settings of the variable properties.</p> <p>The communication of the individual variables can be graded according to importance or required topicality using the priority classes. Thus the communication load is distributed better.</p> <p><b>Attention:</b> Priority classes are not supported by each driver, e.g. spontaneously communicating zenon drivers.</p>

#### CLOSE DIALOG

Option	Description
<b>OK</b>	Applies all changes in all tabs and closes the dialog.
<b>Cancel</b>	Discards all changes in all tabs and closes the dialog.
<b>Help</b>	Opens online help.


#### UPDATE TIME FOR SPONTANEOUS DRIVERS

With spontaneous drivers, for **Set value, advising** of variables and **Requests**, a read cycle is triggered immediately - regardless of the set update time. This ensures that the value is immediately available for visualization after writing. The update time is generally 100 ms.

Spontaneous drivers are **ArchDrv**, **BiffiDCM**, **BrTcp32**, **DNP3**, **Esser32**, **FipDrv32**, **FpcDrv32**, **IEC850**, **IEC870**, **IEC870\_103**, **Otis**, **RTK9000**, **S7DCOS**, **SAIA\_Slave**, **STRATON32** and **Trend32**.

## 6.2.2 Connections

Configuration of the connections to the PLCs.

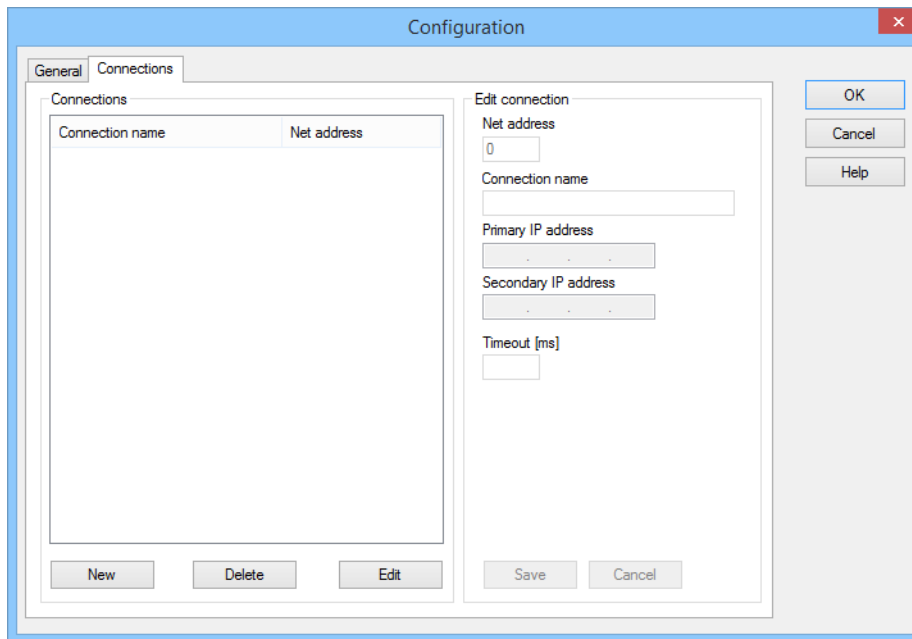

Parameter	Description
<b>Connections</b>	Contains the configured connections. Select a connection to display the connection se
<b>Edit connection</b>	Properties to configure the selected connection.
<b>Net address</b>	The net address identifies the connection. Therefore, every connection must have a un assigned to a connection via the net address.
<b>Connection name</b>	Freely definable name for the easier distinction of connections.
<b>Primary IP address</b>	IP address of the PLC that you are communicating with.
<b>Secondary IP address</b>	Alternative IP address. Is used if no connection can be established with the <b>Primary IP</b>
<b>Timeout [ms]</b>	Timeout time in milliseconds.

### CLOSE DIALOG

Option	Description
<b>OK</b>	Applies all changes in all tabs and closes the dialog.
<b>Cancel</b>	Discards all changes in all tabs and closes the dialog.
<b>Help</b>	Opens online help.

### CREATE NEW CONNECTION

1. Click on the **New** button.
2. Enter the connection details.
3. Click on **Save**.

### EDIT CONNECTION

1. Select the connection in the connection list.
2. Click on the **Edit** button.
3. Change the connection parameters.
4. Close by clicking on the **Save** button.

### DELETE CONNECTION

1. Select the connection in the connection list.
2. Click on the **Delete** button.
3. The connection will be removed from the list

## 7 Creating variables

This is how you can create variables in the zenon Editor:

### 7.1 Creating variables in the Editor


Variables can be created:

- ▶ as simple variables
- ▶ in arrays
- ▶ as structure variables

### VARIABLE DIALOG

To create a new variable, regardless of which type:


1. Select the **New variable** command in the **Variables** node in the context menu

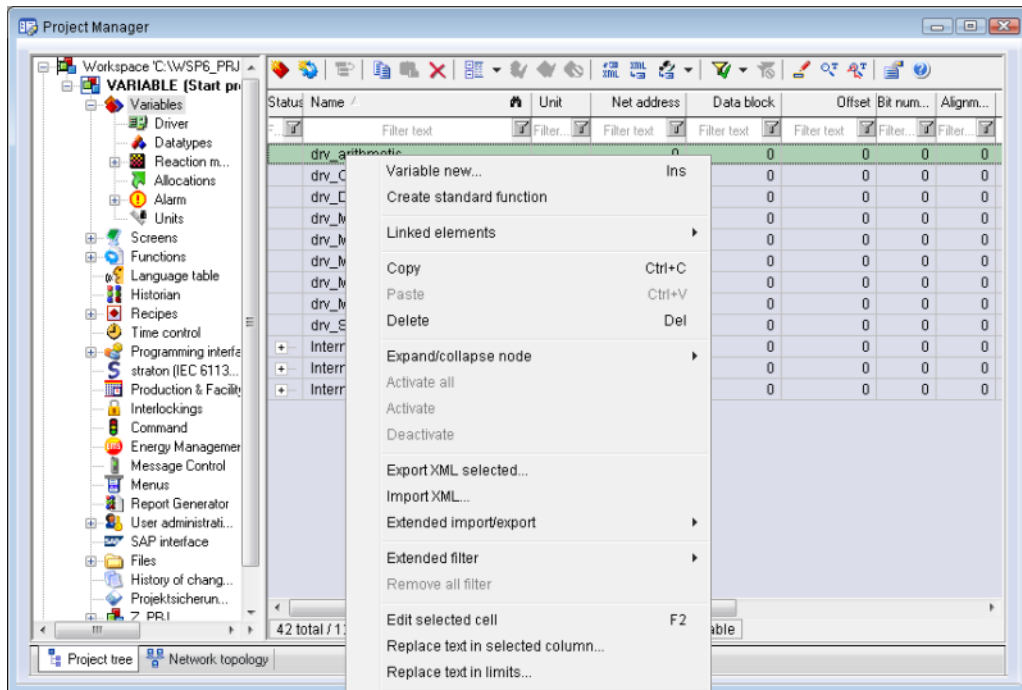

The dialog for configuring variables is opened

2. Configure the variable
3. The settings that are possible depend on the type of variables

## CREATE VARIABLE DIALOG

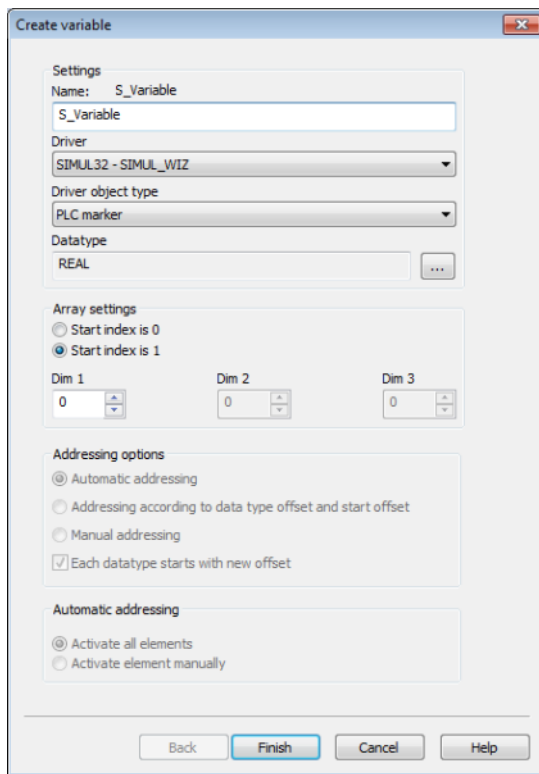

Property	Description
<b>Name</b>	<p>Distinct name of the variable. If a variable with the same name already exists in the project, no additional variable can be created with this name.</p> <p>Maximum length: 128 characters</p> <p><b>Attention:</b> the characters # and @ are not permitted in variable names. If non-permitted characters are used, creation of variables cannot be completed and the <b>Finish</b> button remains inactive.</p> <p><b>Note:</b> Some drivers also allow addressing using the <b>Symbolic address</b> property.</p>
<b>Driver</b>	<p>Select the desired driver from the drop-down list.</p> <p><b>Note:</b> If no driver has been opened in the project, the driver for internal variables (<b>Intern.exe</b>) is automatically loaded.</p>
<b>Driver Object Type</b> (on page 22)	Select the appropriate driver object type from the drop-down list.
<b>Data Type</b>	Select the desired data type. Click on the ... button to open the selection dialog.

Property	Description
<b>Array settings</b>	Expanded settings for array variables. You can find details in the Arrays chapter.
<b>Addressing options</b>	Expanded settings for arrays and structure variables. You can find details in the respective section.
<b>Automatic element activation</b>	Expanded settings for arrays and structure variables. You can find details in the respective section.

## SYMBOLIC ADDRESS

The **Symbolic address** property can be used for addressing as an alternative to the **Name** or **Identification** of the variables. Selection is made in the driver dialog; configuration is carried out in the variable property. When importing variables of supported drivers, the property is entered automatically.

Maximum length: 1024 characters.

The following drivers support the **Symbolic address**:

- ▶ 3S\_V3
- ▶ AzureDrv
- ▶ BACnetNG
- ▶ IEC850
- ▶ KabaDPsServer
- ▶ OPCUA32
- ▶ Phoenix32
- ▶ POZYTON
- ▶ RemoteRT
- ▶ S7TIA
- ▶ SEL
- ▶ SnmpNg32
- ▶ PA\_Drv
- ▶ EUROMAP63

## INHERITANCE FROM DATA TYPE

**Measuring range**, **Signal range** and **Set value** are always:

- ▶ derived from the datatype

- ▶ Automatically adapted if the data type is changed

**Note for signal range:** If a change is made to a data type that does not support the set **signal range**, the **signal range** is amended automatically. For example, for a change from **INT** to **SINT**, the **signal range** is changed to 127. The amendment is also carried out if the **signal range** was not inherited from the data type. In this case, the **measuring range** must be adapted manually.

## 7.2 Addressing

Group/Property	Description
<b>General</b>	Property group for general settings.
<b>Name</b>	Freely definable name.  <b>Attention:</b> For every zenon project the name must be unambiguous.
<b>Identification</b>	Freely definable identification. E.g. for Resources label, comments, ...
<b>Addressing</b>	
<b>Secondary object</b>	States the secondary object type (on page 22) for Time/Counter, Drum, Loop variable and Alarm variable.
<b>Net address</b>	Network address of variables.  This address refers to the bus address in the connection configuration of the driver. This defines the PLC, on which the variable resides.
<b>Data block</b>	not used for this driver
<b>Offset</b>	Offset of variables. Equal to the memory address of the variable in the PLC. Adjustable from 0 to 4294967295.
<b>Alignment</b>	Alignment of a byte within a word (only for VMEMORY and KMEMORY)
<b>Bit number</b>	Number of the bit within the configured offset.  Possible entries: 0 to 65535.
<b>String length</b>	Only available for String variables. Maximum number of characters that the variable can take.
<b>Driver connection/Driver Object Type</b>	Object type of the variables. Depending on the driver used, is selected when the variable is created and can be changed here.
<b>Driver connection/Data</b>	Data type of the variable. Is selected during the creation of the variable; the type can be changed here.

Group/Property	Description
<b>Type</b>	<b>Attention:</b> If you change the data type later, all other properties of the variable must be checked and adjusted, if necessary.
<b>Driver connection/Priority</b>	<p>Setting the priority class. The variable of the priority class is thus assigned as it was configured in the driver dialog in the <b>General</b> tab. The priority classes are only used if the <b>global update time</b> is deactivated.</p> <p>If the <b>global update time</b> option is activated and the priority classes are used, there is an error entry in the log file of the system. The driver uses the highest possible priority.</p>

## 7.3 Secondary object type

For driver object types time/counter, drum, loop variable or alarm variable the following data types and secondary object types are available:

Driver object type	Data type
<b>Timer/Counter</b>	
Preset (TCP)	INT
Current (TCC)	INT
<b>Drum</b>	
Step Preset (DSP)	INT
Step Current (DSC)	INT
Count Preset (DCP)	INT
Count Current (DCC)	INT*
<b>Loop Variable</b>	
Gain (LKC.)	REAL
Reset Time - min (LTI.)	REAL
Rate Time – min (LTD.)	REAL
Sample Rate – sec (LTS)	REAL
Process Variable (LPV)	REAL, INT
PV High Limit (LPVH)	REAL

Driver object type	Data type
PV Low Limit (LPVL)	REAL
Set Point (LSP)	REAL, INT
SP High Limit (LSPH)	REAL, INT
SP Low Limit (LSPL)	REAL, INT
Output (LMN)	REAL, INT
Bias (LMX)	REAL, INT
Error (empty)	REAL, INT
High-High Alarm Limit (LHHA)	REAL, INT
High Alarm Limit (LHA)	REAL, INT
Low Alarm Limit (LLA)	REAL, INT
Low-Low Alarm Limit (LLLA)	REAL, INT
Alarm Deadband (LADB)	REAL, INT
Orange Dev Alarm Limit (LODA)	REAL, INT
Yellow Dev Alarm Limit (LYDA)	REAL, INT
Rate of Change Alarm Limit (LRCA)	REAL
Alarm Acknowledge Flags (LACK)	UINT
Deriv Gain Limiting Coeff (LKD)	REAL
Loop Status UINT	
Loop Mode UNIT	
Loop V-Flags (LVF)	UINT
Control Flags – MSW (LCFH)	UINT
Control Flags – LSW (LCFL)	UINT
Ramp/Soak Status Flags (LRSF)	UINT
Ramp/Soak Step Number (LRSN)	INT
<b>Alarm Variable</b>	
Sample Rate – sec (ATS)	REAL

Driver object type	Data type
Process Variable (APV)	REAL, INT
PV High Limit (APVH)	REAL
PV Low Limit (APVL)	REAL
Set Point (ASP)	REAL, INT
SP High Limit (ASPH)	REAL, INT
SP Low Limit (ASPL)	REAL, INT
Error (AERR)	REAL, INT*
High-High Alarm Limit (AHHA)	REAL, INT
High Alarm Limit (AHA)	REAL, INT
Low Alarm Limit (ALA)	REAL, INT
Low-Low Alarm Limit (ALLA)	REAL, INT
Alarm Deadband (AADB)	REAL, INT
Orange Dev Alarm Limit (AODA)	REAL, INT
Yellow Dev Alarm Limit (AYDA)	REAL INT
Rate of Change Alarm Limit (ARCA)	REAL, INT
Alarm Acknowledge Flags (AACK)	UINT*
Alarm V-Flags (AVF)	UINT*
Alarm Control Flags – MSW (ACFH)	UINT
Alarm Control Flags – LSW (LCFL)	UINT

\* Read only

## 7.4 Driver objects and datatypes

Driver objects are areas available in the PLC, such as markers, data blocks etc. Here you can find out which driver objects are provided by the driver and which IEC data types can be assigned to the respective driver objects.

## 7.4.1 Driver objects

The following object types are available in this driver:

Driver Object Type	Channel type	Read	Write	Supported data types	Description
<b>V memory</b>	64	X	X	<i>BOOL, SINT, USINT, INT, UINT, DINT, UDINT, REAL, STRING</i>	
<b>K memory</b>	65	X	--	<i>BOOL, SINT, USINT, INT, UINT, DINT, UDINT, REAL, STRING</i>	
<b>STW memory</b>	66	X	X	<i>BOOL, INT,UINT</i>	
<b>WX memory</b>	67	X	X	<i>BOOL, INT,UINT</i>	
<b>WY memory</b>	68	X	X	<i>BOOL, INT,UINT</i>	
<b>X memory</b>	69	X	X	<i>BOOL</i>	
<b>Y memory</b>	70	X	X	<i>BOOL</i>	
<b>C memory</b>	71	X	X	<i>BOOL</i>	
<b>Time/Counter</b>	72	X	X	<i>INT</i>	
<b>Drum</b>	73	X	X	<i>INT</i>	
<b>Loop Variable</b>	74	X	X	<i>BOOL, INT,UINT,REAL</i>	BOOL see also infobox for <b>Secondary Objects</b> .
<b>Alarm Variable</b>	75	X	X	<i>BOOL, INT,UINT,REAL</i>	BOOL see also infobox for <b>Secondary Objects</b> .
<i>Communication details</i>	35	X	X	<i>BOOL, SINT, USINT, INT, UINT, DINT, UDINT, REAL, STRING</i>	Variables for the static analysis of the communication; Values are transferred between driver and Runtime (not to the

Driver Object Type	Channel type	Read	Write	Supported data types	Description
					<p>PLC).</p> <p><b>Note:</b> The addressing and the behavior is the same for most zenon drivers.</p> <p>You can find detailed information on this in the Communication details (Driver variables) (on page 35) chapter.</p>

**Key:**

X: supported

--: not supported



## Information

The driver object type BOOL is available for **Loop** and **Alarm** for the following **Secondary Objects**.

- ▶ Loop Variable Secondary Objects:
  - ▶ Alarm Acknowledge (LACK)
  - ▶ Loop Status
  - ▶ Loop Mode
  - ▶ Loop V-flags (LVF)
  - ▶ Control flags - MSW (LCFH)
  - ▶ Control flags - LSW (LCFL)
  - ▶ Ramp/Soak status flags (LRSF)
- ▶ Alarm Variable Secondary Objects:
  - ▶ Alarm Acknowledge (AACK)
  - ▶ Alarm V-flags (AVF)
  - ▶ Alarm Control flags - MSW (ACFH)
  - ▶ Alarm Control flags - LSW (LCFL)

## CHANNEL TYPE

The term **Kanaltyp** is the internal numerical name of the driver object type. It is also used for the extended DBF import/export of the variables.

"**Kanaltyp**" is used for advanced CSV import/export of variables in the "**HWOBJECTType**" column.

## 7.4.2 Mapping of the data types

All variables in zenon are derived from IEC data types. The following table compares the IEC datatypes with the datatypes of the PLC.

Control	zenon	Data type
BOOL	BOOL	8
-	USINT	9
-	SINT	10

Control	zenon	Data type
UINT	UINT	2
INT	INT	1
-	UDINT	4
-	DINT	3
-	ULINT	27
-	LINT	26
REAL	REAL	5
-	LREAL	6
STRING	STRING	12
-	WSTRING	21
-	DATE	18
-	TIME	17
-	DATE_AND_TIME	20
-	TOD (Time of Day)	19

## DATA TYPE

The term **data type** is the internal numerical identification of the data type. It is also used for the extended DBF import/export of the variables.

## 7.5 Creating variables by importing

Variables can also be imported by importing them. The XML and DBF import is available for every driver.



### Information

You can find details on the import and export of variables in the Import-Export manual in the Variables section.

## 7.5.1 XML import

During XML import of variables or data types, these are first assigned to a driver and then analyzed. Before import, the user decides whether and how the respective element (variable or data type) is to be imported:

- ▶ *Import:*  
The element is imported as a new element.
- ▶ *Overwrite:*  
The element is imported and overwrites a pre-existing element.
- ▶ *Do not import:*  
The element is not imported.

**Note:** The actions and their durations are shown in a progress bar during import. The import of variables is described in the following documentation. Data types are imported along the same lines.

## REQUIREMENTS

The following conditions are applicable during import:

- ▶ **Backward compatibility**  
At the XML import/export there is no backward compatibility. Data from older zenon versions can be taken over. The handover of data from newer to older versions is not supported.
- ▶ **Consistency**  
The XML file to be imported has to be consistent. There is no plausibility check on importing the file. If there are errors in the import file, this can lead to undesirable effects in the project.  
Particular attention must be paid to this, primarily if not all properties exist in the XML file and these are then filled with default values. E.g.: A binary variable has a limit value of 300.
- ▶ **Structure data types**  
Structure data types must have the same number of structure elements.  
Example: A structure data type in the project has 3 structure elements. A data type with the same name in the XML file has 4 structure elements. Then none of the variables based on this data type in the file are imported into the project.

### Hint

You can find further information on XML import in the **Import - Export** manual, in the **XML import** chapter.

## 7.5.2 DBF Import/Export

Data can be exported to and imported from dBase.



### Information

Import and Export via CSV or dBase supported; no driver specific variable settings, such as formulas. Use export/import via XML for this.

### IMPORT DBF FILE

To start the import:

1. right-click on the variable list.
2. In the drop-down list of **Extended export/import...** select the **Import dBase** command.
3. Follow the instructions of the import assistant.

The format of the file is described in the chapter File structure.



### Information

Note:

- ▶ Driver object type and data type must be amended to the target driver in the DBF file in order for variables to be imported.
- ▶ dBase does not support structures or arrays (complex variables) at import.

### EXPORT DBF FILE

To start the export:

1. right-click on the variable list.
2. In the drop-down list of **Extended export/import...** select the **Export dBase...** command .
3. Follow the instructions of the import assistant.

### ⚠ Attention

DBF files:

- ▶ must correspond to the 8.3 DOS format for filenames (8 alphanumeric characters for name, 3 character suffix, no spaces)
- ▶ must not have dots (.) in the path name.  
e.g. the path `C:\users\John.Smith\test.dbf` is invalid.  
Valid: `C:\users\JohnSmith\test.dbf`
- ▶ must be stored close to the root directory in order to fulfill the limit for file name length including path: maximum 255 characters

The format of the file is described in the chapter File structure.



### Information

dBase does not support structures or arrays (complex variables) at export.

## FILE STRUCTURE OF THE DBASE EXPORT FILE

The dBaseIV file must have the following structure and contents for variable import and export:

### ⚠ Attention

dBase does not support structures or arrays (complex variables) at export.

DBF files must:

- ▶ conform with their name to the 8.3 DOS format (8 alphanumeric characters for name, 3 characters for extension, no space)
- ▶ Be stored close to the root directory (Root)

## STRUCTURE

Identification	Type	Field size	Comment
KANALNAME	Character	128	Variable name.  The length can be limited using the <b>MAX_LAENGE</b> entry in the <b>project.ini</b> file.
KANAL_R	C	128	The original name of a variable that is to be replaced by the new name entered under "VARIABLENNAME" (variable name) (field/column must be entered

Identification	Type	Field size	Comment
			manually).  The length can be limited using the <b>MAX_LAENGE</b> entry in the <b>project.ini</b> file.
<b>KANAL_D</b>	Log	1	The variable is deleted with the 1 entry (field/column has to be created by hand).
<b>TAGNR</b>	C	128	Identification.  The length can be limited using the <b>MAX_LAENGE</b> entry in the <b>project.ini</b> file.
<b>EINHEIT</b>	C	11	Technical unit
<b>DATENART</b>	C	3	Data type (e.g. bit, byte, word, ...) corresponds to the data type.
<b>KANALTYP</b>	C	3	Memory area in the PLC (e.g. marker area, data area, ...) corresponds to the driver object type.
<b>HWKANAL</b>	Num	3	Net address
<b>BAUSTEIN</b>	N	3	Datablock address (only for variables from the data area of the PLC)
<b>ADRESSE</b>	N	5	Offset
<b>BITADR</b>	N	2	For bit variables: bit address For byte variables: 0=lower, 8=higher byte For string variables: Length of string (max. 63 characters)
<b>ARRAYSIZE</b>	N	16	Number of variables in the array for index variables ATTENTION: Only the first variable is fully available. All others are only available for VBA or the Recipegroup Manager
<b>LES_SCHR</b>	L	1	Write-Read-Authorization 0: Not allowed to set value. 1: Allowed to set value.
<b>MIT_ZEIT</b>	R	1	time stamp in zenon (only if supported by the driver)
<b>OBJEKT</b>	N	2	Driver-specific ID number of the primitive object comprises TREIBER-OBJEKTYP and DATENTYP

Identification	Type	Field size	Comment
<b>SIGMIN</b>	Float	16	Non-linearized signal - minimum (signal resolution)
<b>SIGMAX</b>	F	16	Non-linearized signal - maximum (signal resolution)
<b>ANZMIN</b>	F	16	Technical value - minimum (measuring range)
<b>ANZMAX</b>	F	16	Technical value - maximum (measuring range)
<b>ANZKOMMA</b>	N	1	Number of decimal places for the display of the values (measuring range)
<b>UPDATERATE</b>	F	19	Update rate for mathematics variables (in sec, one decimal possible) not used for all other variables
<b>MENTIEFE</b>	N	7	Only for compatibility reasons
<b>HDRATE</b>	F	19	HD update rate for historical values (in sec, one decimal possible)
<b>HDTIEFE</b>	N	7	HD entry depth for historical values (number)
<b>NACHSORT</b>	R	1	HD data as postsorted values
<b>DRRATE</b>	F	19	Updating to the output (for zenon DDE server, in [s], one decimal possible)
<b>HYST_PLUS</b>	F	16	Positive hysteresis, from measuring range
<b>HYST_MINUS</b>	F	16	Negative hysteresis, from measuring range
<b>PRIOR</b>	N	16	Priority of the variable
<b>REAMATRIZE</b>	C	32	Allocated reaction matrix
<b>ERSATZWERT</b>	F	16	Substitute value, from measuring range
<b>SOLLMIN</b>	F	16	Minimum for set value actions, from measuring range
<b>SOLLMAX</b>	F	16	Maximum for set value actions, from measuring range
<b>VOMSTANDBY</b>	R	1	Get value from standby server; the value of the variable is not requested from the server but from the Standby Server in redundant networks
<b>RESOURCE</b>	C	128	Resources label. Free string for export and display in lists.

Identification	Type	Field size	Comment
			The length can be limited using the MAX_LAENGE entry in <b>project.ini</b> .
ADJWVBA	R	1	Non-linear value adaption: 0: Non-linear value adaption is used 1: Non-linear value adaption is not used
ADJZENON	C	128	Linked VBA macro for reading the variable value for non-linear value adjustment.
ADJWVBA	C	128	ed VBA macro for writing the variable value for non-linear value adjustment.
ZWREMA	N	16	Linked counter REMA.
MAXGRAD	N	16	Gradient overflow for counter REMA.

### Attention

When importing, the driver object type and data type must be amended to the target driver in the DBF file in order for variables to be imported.

## LIMIT VALUE DEFINITION

Limit definition for limit values 1 to 4, or status 1 to 4:

Identification	Type	Field size	Comment
AKTIV1	R	1	Limit value active (per limit value available)
GRENZWERT1	F	20	technical value or ID number of a linked variable for a dynamic limit value (see VARIABLEx) (if VARIABLEx is 1 and here it is -1, the existing variable linkage is not overwritten)
SCHWWERT1	F	16	Threshold value for limit value
HYSTERESE1	F	14	Is not used
BLINKEN1	R	1	Set blink attribute
BTB1	R	1	Logging in CEL
ALARM1	R	1	Alarm

Identification	Type	Field size	Comment
<b>DRUCKEN1</b>	R	1	Printer output (for CEL or Alarm)
<b>QUITTIER1</b>	R	1	Must be acknowledged
<b>LOESCHE1</b>	R	1	Must be deleted
<b>VARIABLE1</b>	R	1	Dyn. limit value linking the limit is defined by an absolute value (see field GRENZWERTx).
<b>FUNC1</b>	R	1	Functions linking
<b>ASK_FUNC1</b>	R	1	Execution via Alarm Message List
<b>FUNC_NR1</b>	N	10	ID number of the linked function (if "-1" is entered here, the existing function is not overwritten during import)
<b>A_GRUPPE1</b>	N	10	Alarm/Event Group
<b>A_KLASSE1</b>	N	10	Alarm/Event Class
<b>MIN_MAX1</b>	C	3	Minimum, Maximum
<b>FARBE1</b>	N	10	Color as Windows coding
<b>GRENZTXT1</b>	C	66	Limit value text
<b>A_DELAY1</b>	N	10	Time delay
<b>INVISIBLE1</b>	R	1	Invisible

Expressions in the column "Comment" refer to the expressions used in the dialog boxes for the definition of variables. For more information, see chapter Variable definition.

## 7.6 Communication details (Driver variables)

The driver kit implements a number of driver variables. These variables are part of the driver object type *Communication details*. These are divided into:

- ▶ Information
- ▶ Configuration
- ▶ Statistics and
- ▶ Error message

The definitions of the variables implemented in the driver kit are available in the import file **DRVVAR.DBF** and can be imported from there.

Path to file: %ProgramData%\COPA-DATA\zenon<Versionsnummer>\PredefinedVariables

**Note:** Variable names must be unique in zenon. If driver variables of the driver object type *Communication details* are to be imported from **DRVVAR.DBF** again, the variables that were imported beforehand must be renamed.



## Information

Not every driver supports all driver variables of the driver object type *Communication details*.

For example:

- ▶ Variables for modem information are only supported by modem-compatible drivers.
- ▶ Driver variables for the polling cycle are only available for pure polling drivers.
- ▶ Connection-related information such as **ErrorMSG** is only supported for drivers that only edit one connection at a time.

## INFORMATION

Name from import	Type	Offset	Description
MainVersion	UINT	0	Main version number of the driver.
SubVersion	UINT	1	Sub version number of the driver.
BuildVersion	UINT	29	Build version number of the driver.
RTMajor	UINT	49	zenon main version number
RTMinor	UINT	50	zenon sub version number
RTSp	UINT	51	zenon Service Pack number
RTBuild	UINT	52	zenon build number
LineStateldle	BOOL	24.0	TRUE, if the modem connection is idle
LineStateOffering	BOOL	24.1	TRUE, if a call is received
LineStateAccepted	BOOL	24.2	The call is accepted
LineStateDialtone	BOOL	24.3	Dialtone recognized
LineStateDialing	BOOL	24.4	Dialing active

Name from import	Type	Offset	Description
LineStateRingBack	BOOL	24.5	While establishing the connection
LineStateBusy	BOOL	24.6	Target station is busy
LineStateSpecialInfo	BOOL	24.7	Special status information received
LineStateConnected	BOOL	24.8	Connection established
LineStateProceeding	BOOL	24.9	Dialing completed
LineStateOnHold	BOOL	24.10	Connection in hold
LineStateConferenced	BOOL	24.11	Connection in conference mode.
LineStateOnHoldPendConf	BOOL	24.12	Connection in hold for conference
LineStateOnHoldPendTransfer	BOOL	24.13	Connection in hold for transfer
LineStateDisconnected	BOOL	24.14	Connection terminated.
LineStateUnknow	BOOL	24.15	Connection status unknown
ModemStatus	UDINT	24	Current modem status
TreiberStop	BOOL	28	Driver stopped  For <i>driver stop</i> , the variable has the value <i>TRUE</i> and an <b>OFF</b> bit. After the driver has started, the variable has the value <i>FALSE</i> and no <b>OFF</b> bit.
SimulRTState	UDINT	60	Informs the state of Runtime for driver simulation.
ConnectionStates	STRING	61	Internal connection status of the driver to the PLC.  Connection statuses: <ul style="list-style-type: none"> <li>▶ 0: Connection OK</li> <li>▶ 1: Connection failure</li> <li>▶ 2: Connection simulated</li> </ul> Formatting: <b>&lt;Net address&gt;:&lt;Connection status&gt;;...;;</b> A connection is only known after a variable

Name from import	Type	Offset	Description
			<p>has first signed in. In order for a connection to be contained in a string, a variable of this connection must be signed in once.</p> <p>The status of a connection is only updated if a variable of the connection is signed in. Otherwise there is no communication with the corresponding controller.</p>

## CONFIGURATION

Name from import	Type	Offset	Description
ReconnectInRead	<i>BOOL</i>	27	If TRUE, the modem is automatically reconnected for reading
ApplyCom	<i>BOOL</i>	36	Apply changes in the settings of the serial interface. Writing to this variable immediately results in the method SrvDrvVarApplyCom being called (which currently has no further function).
ApplyModem	<i>BOOL</i>	37	Apply changes in the settings of the modem. Writing this variable immediately calls the method SrvDrvVarApplyModem. This closes the current connection and opens a new one according to the settings <b>PhoneNumberSet</b> and <b>ModemHwAdrSet</b> .
PhoneNumberSet	<i>STRING</i>	38	Telephone number, that should be used
ModemHwAdrSet	<i>DINT</i>	39	Hardware address for the telephone number
GlobalUpdate	<i>UDINT</i>	3	Update time in milliseconds (ms).
BGlobalUpdaten	<i>BOOL</i>	4	TRUE, if update time is global
TreiberSimul	<i>BOOL</i>	5	TRUE, if driver in sin simulation mode
TreiberProzab	<i>BOOL</i>	6	TRUE, if the variables update list should be kept in the memory
ModemActive	<i>BOOL</i>	7	TRUE, if the modem is active for the driver
Device	<i>STRING</i>	8	Name of the serial interface or name of the modem

Name from import	Type	Offset	Description
ComPort	<i>UINT</i>	9	Number of the serial interface.
Baudrate	<i>UDINT</i>	10	Baud rate of the serial interface.
Parity	<i>SINT</i>	11	Parity of the serial interface
ByteSize	<i>USINT</i>	14	Number of bits per character of the serial interface  Value = 0 if the driver cannot establish any serial connection.
StopBit	<i>USINT</i>	13	Number of stop bits of the serial interface.
Autoconnect	<i>BOOL</i>	16	TRUE, if the modem connection should be established automatically for reading/writing
PhoneNumber	<i>STRING</i>	17	Current telephone number
ModemHwAdr	<i>DINT</i>	21	Hardware address of current telephone number
RxIdleTime	<i>UINT</i>	18	Modem is disconnected, if no data transfer occurs for this time in seconds (s)
WriteTimeout	<i>UDINT</i>	19	Maximum write duration for a modem connection in milliseconds (ms).
RingCountSet	<i>UDINT</i>	20	Number of ringing tones before a call is accepted
ReCallIdleTime	<i>UINT</i>	53	Waiting time between calls in seconds (s).
ConnectTimeout	<i>UINT</i>	54	Time in seconds (s) to establish a connection.

## STATISTICS

Name from import	Type	Offset	Description
MaxWriteTime	<i>UDINT</i>	31	The longest time in milliseconds (ms) that is required for writing.
MinWriteTime	<i>UDINT</i>	32	The shortest time in milliseconds (ms) that is required for writing.
MaxBlkReadTime	<i>UDINT</i>	40	Longest time in milliseconds (ms) that is required to read a data block.

Name from import	Type	Offset	Description
MinBlkReadTime	UDINT	41	Shortest time in milliseconds (ms) that is required to read a data block.
WriteErrorCount	UDINT	33	Number of writing errors
ReadSucceedCount	UDINT	35	Number of successful reading attempts
MaxCycleTime	UDINT	22	Longest time in milliseconds (ms) required to read all requested data.
MinCycleTime	UDINT	23	Shortest time in milliseconds (ms) required to read all requested data.
WriteCount	UDINT	26	Number of writing attempts
ReadErrorCount	UDINT	34	Number of reading errors
MaxUpdateTimeNormal	UDINT	56	Time since the last update of the priority group <b>Normal</b> in milliseconds (ms).
MaxUpdateTimeHigher	UDINT	57	Time since the last update of the priority group <b>Higher</b> in milliseconds (ms).
MaxUpdateTimeHigh	UDINT	58	Time since the last update of the priority group <b>High</b> in milliseconds (ms).
MaxUpdateTimeHighest	UDINT	59	Time since the last update of the priority group <b>Highest</b> in milliseconds (ms).
PokeFinish	BOOL	55	Goes to 1 for a query, if all current pokes were executed

## ERROR MESSAGE

Name from import	Type	Offset	Description
ErrorTimeDW	UDINT	2	Time (in seconds since 1.1.1970), when the last error occurred.
ErrorTimeS	STRING	2	Time (in seconds since 1.1.1970), when the last error occurred.
RdErrPrimObj	UDINT	42	Number of the PrimObject, when the last reading error occurred.
RdErrStationsName	STRING	43	Name of the station, when the last reading error occurred.

Name from import	Type	Offset	Description
RdErrBlockCount	<i>UINT</i>	44	Number of blocks to read when the last reading error occurred.
RdErrHwAdresse	<i>DINT</i>	45	Hardware address when the last reading error occurred.
RdErrDatablockNo	<i>UDINT</i>	46	Block number when the last reading error occurred.
RdErrMarkerNo	<i>UDINT</i>	47	Marker number when the last reading error occurred.
RdErrSize	<i>UDINT</i>	48	Block size when the last reading error occurred.
DrvError	<i>USINT</i>	25	Error message as number
DrvErrorMsg	<i>STRING</i>	30	Error message as text
ErrorFile	<i>STRING</i>	15	Name of error log file

## 8 Driver-specific functions

The driver supports the following functions:

### PACKED TASK CODES

The driver uses CAMP packets with packed task code. This means: Several read or write requests are grouped in one CAMP/TCP packet. This increases the performance at reading and writing. In contrast to blockwrite the write order is not lost.

### BLOCKWRITE

The driver supports blockwrite for driver object types *V memory* and not string variables.

Blockwrite allows for the efficient sending of multiple set values (e.g. recipes). Variables that lie next to each other in the PLC memory will be written to with a single write telegram or combined into a few telegrams (for larger areas).

**Attention:** If blockwrite is activated, the write sequence of the variables does not necessarily have to match their sending sequence.

## ACTIVATING BLOCKWRITE

Blockwrite can be activated with an entry in the **project.ini** file:

1. Highlight the project in Project Manager
  2. Press the **Ctrl+Alt+E** keyboard shortcut
- The SQL folder for zenon opens in Windows Explorer

*%ProgramData%\COPA-DATA\SQL\b605c156-b69f-403e-9948-a70fd865c8ae\FILES*

3. Go to `\zenon\system\`.
4. open the **project.ini** file with a text editor.
5. Add the following entry:

```
[CTI]  
BLOCKWRITE=1
```

## 9 Driver command function

The zenon **Driver commands** function is to influence drivers using zenon. You can do the following with a driver command:

- ▶ Start
- ▶ Stop
- ▶ Shift a certain driver mode
- ▶ Instigate certain actions

**Note:** This chapter describes standard functions that are valid for most zenon drivers. Not all functions described here are available for every driver. For example, a driver that does not, according to the data sheet, support a modem connection also does not have any modem functions.

### Attention


The zenon **Driver commands** function is not identical to driver commands that can be executed in the Runtime with Energy drivers!

## CONFIGURATION OF THE FUNCTION

Configuration is carried out using the **Driver commands** function. To configure the function:


1. Create a new function in the zenon Editor.

The dialog for selecting a function is opened

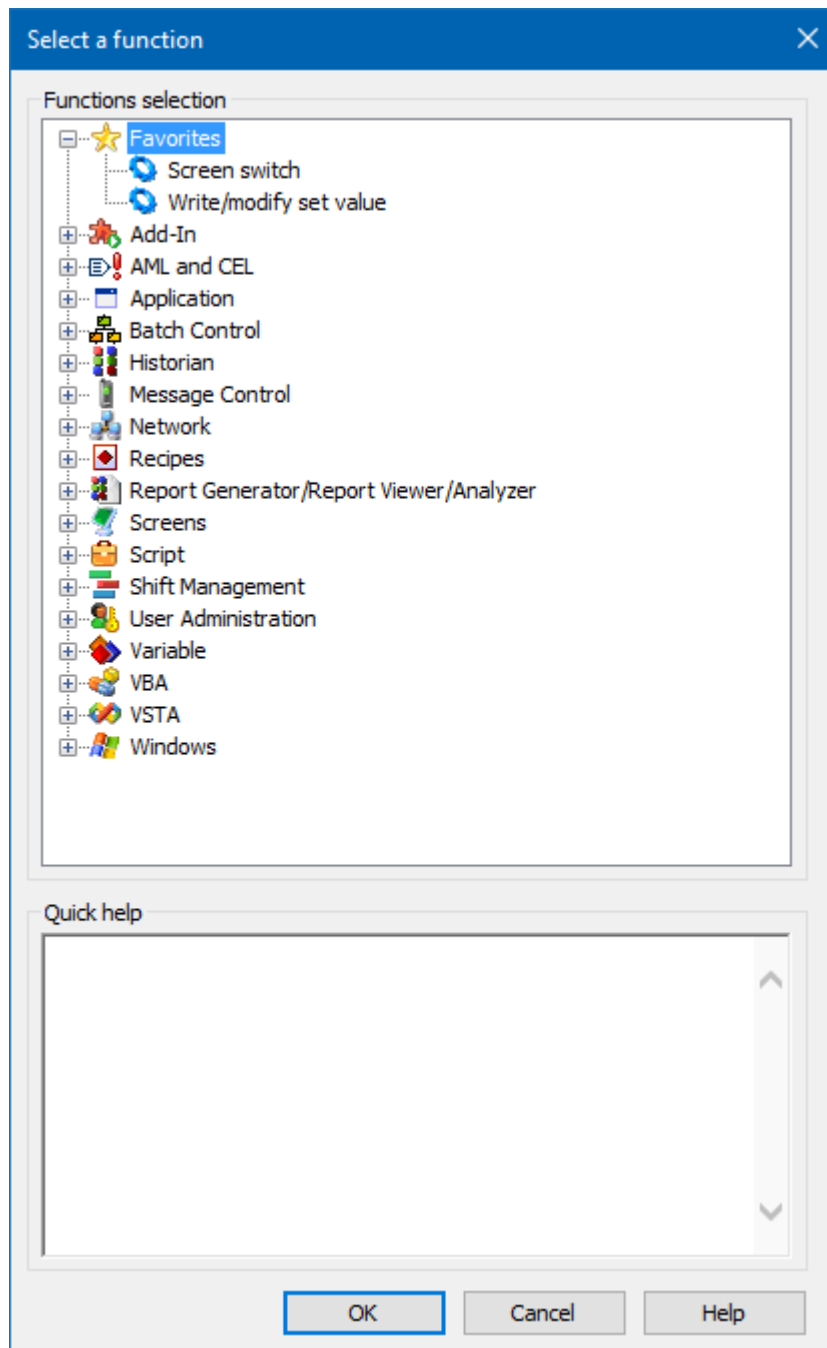


2. Navigate to the node **Variable**.
3. Select the **Driver commands** entry.

The dialog for configuration is opened

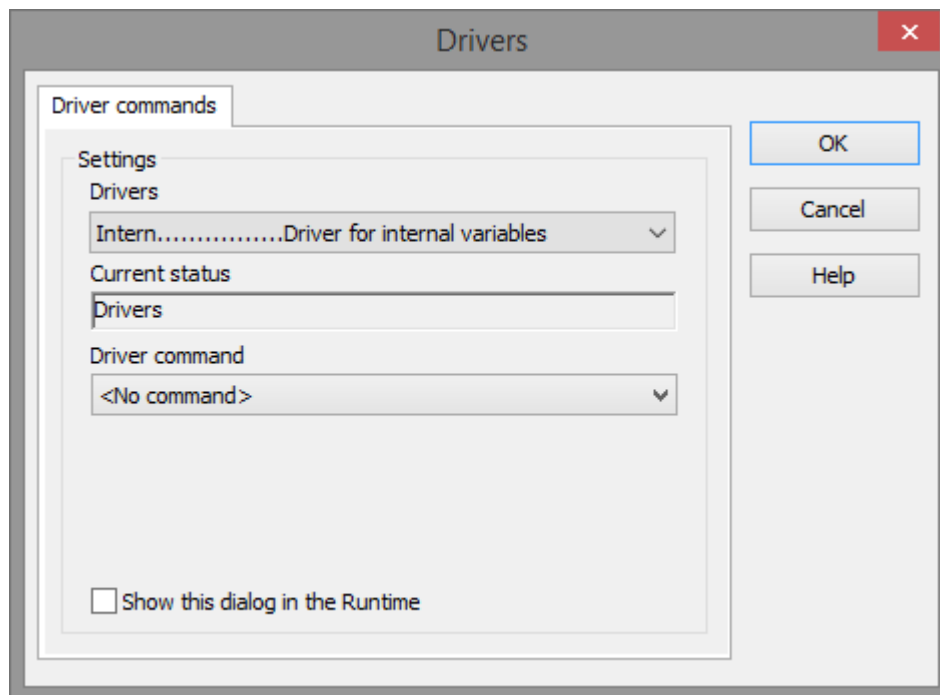

4. Select the desired driver and the required command.
5. Close the dialog by clicking on **OK** and ensure that the function is executed in the Runtime. Heed the notices in the **Driver command function in the network** section.

## DRIVER COMMAND DIALOG

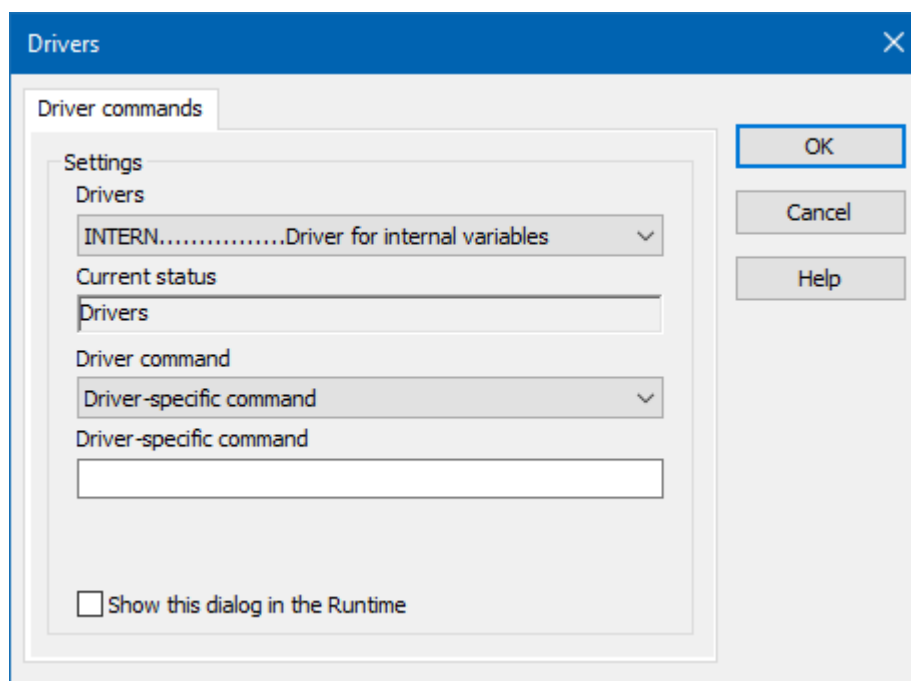

Option	Description
<b>Driver</b>	Selection of the driver from the drop-down list. It contains all drivers loaded in the project.
<b>Current condition</b>	Fixed entry that is set by the system. no function in the current version.
<b>Driver command</b>	no function in the current version.  For details on the configurable driver commands, see the <b>available driver commands</b> section.
<b>Driver-specific command</b>	Entry of a command specific to the selected driver.  <b>Note:</b> Only available if, for the <b>driver command</b> option, the <i>driver-specific command</i> has been selected.
<b>Show this dialog in the Runtime</b>	Configuration of whether the configuration can be changed in the Runtime: <ul style="list-style-type: none"> <li>▶ <i>Active</i>: This dialog is opened in the Runtime before executing the function. The configuration can thus still be changed in the Runtime before execution.</li> <li>▶ <i>Inactive</i>: The Editor configuration is applied in the Runtime when executing the function.</li> </ul> Default: <i>inactive</i>

## CLOSE DIALOG

Options	Description
<b>OK</b>	Applies settings and closes the dialog.
<b>Cancel</b>	Discards all changes and closes the dialog.
<b>Help</b>	Opens online help.

## AVAILABLE DRIVER COMMANDS

These driver commands are available - depending on the selected driver:

Driver command	Description
<i>No command</i>	No command is sent. A command that already exists can thus be removed from a configured function.

Driver command	Description
<i>Start driver (online mode)</i>	Driver is reinitialized and started. <b>Note:</b> If the driver has already been started, it must be stopped. Only then can the driver be re-initialized and started.
<i>Stop driver (offline mode)</i>	Driver is stopped. No new data is accepted. <b>Note:</b> If the driver is in offline mode, all variables that were created for this driver receive the status <i>switched off</i> (OFF; Bit 20).
<i>Driver in simulation mode</i>	Driver is set into simulation mode. The values of all variables of the driver are simulated by the driver. No values from the connected hardware (e.g. PLC, bus system, ...) are displayed.
<i>Driver in hardware mode</i>	Driver is set into hardware mode. For the variables of the driver the values from the connected hardware (e.g. PLC, bus system, ...) are displayed.
<i>Driver-specific command</i>	Entry of a driver-specific command. Opens input field in order to enter a command.
<i>Driver - activate set setpoint value</i>	Write set value to a driver is possible.
<i>Driver - deactivate set setpoint value</i>	Write set value to a driver is prohibited.
<i>Establish connection with modem</i>	Establish connection (for modem drivers)  Opens the input fields for the hardware address and for the telephone number.
<i>Disconnect from modem</i>	Terminate connection (for modem drivers)
<i>Driver in counting simulation mode</i>	Driver is set into counting simulation mode. All values are initialized with 0 and incremented in the set update time by 1 each time up to the maximum value and then start at 0 again.
<i>Driver in static simulation mode</i>	No communication to the controller is established. All values are initialized with 0.
<i>Driver in programmed simulation mode</i>	The values are calculated by a freely-programmable simulation project. The simulation project is created with the help of the zenon Logic Workbench and runs in the zenon Logic Runtime.

## DRIVER COMMAND FUNCTION IN THE NETWORK

If the computer on which the **Driver commands** function is executed is part of the zenon network, further actions are also carried out:

- ▶ A special network command is sent from the computer to the project server. It then executes the desired action on its driver.
- ▶ In addition, the Server sends the same driver command to the project standby. The standby also carries out the action on its driver.

This makes sure that Server and Standby are synchronized. This only works if the Server and the Standby both have a working and independent connection to the hardware.

## 10 Error analysis

Should there be communication problems, this chapter will assist you in finding out the error.

### 10.1 Analysis tool

All zenon modules such as Editor, Runtime, drivers, etc. write messages to a joint log file. To display them correctly and clearly, use the Diagnosis Viewer program that was also installed with zenon. You can find it under **Start/All programs/zenon/Tools 8.20 -> Diagviewer**.

zenon driver log all errors in the LOG files. LOG files are text files with a special structure. The default folder for the LOG files is subfolder **LOG** in the folder **ProgramData**. For example:

**%ProgramData%\COPA-DATA\LOG.**

**Attention:** With the default settings, a driver only logs error information. With the Diagnosis Viewer you can enhance the diagnosis level for most of the drivers to "Debug" and "Deep Debug". With this the driver also logs all other important tasks and events.

In the Diagnosis Viewer you can also:

- ▶ Follow newly-created entries in real time
- ▶ customize the logging settings
- ▶ change the folder in which the LOG files are saved

#### Note:

1. The Diagnosis Viewer displays all entries in UTC (coordinated world time) and not in local time.

2. The Diagnosis Viewer does not display all columns of a LOG file per default. To display more columns activate property **Add all columns with entry** in the context menu of the column header.
3. If you only use **Error-Logging**, the problem description is in the column **Error text**. For other diagnosis level the description is in the column **General text**.
4. For communication problems many drivers also log error numbers which the PLC assigns to them. They are displayed in **Error text** or **Error code** or **Driver error parameter (1 and 2)**. Hints on the meaning of error codes can be found in the driver documentation and the protocol/PLC description.
5. At the end of your test set back the diagnosis level from **Debug** or **Deep Debug**. At **Debug** and **Deep Debug** there are a great deal of data for logging which are saved to the hard drive and which can influence your system performance. They are still logged even after you close the Diagnosis Viewer.

### Attention

In Windows CE errors are not logged per default due to performance reasons.

You can find further information on the Diagnosis Viewer in the Diagnose Viewer manual.

## 10.2 Driver monitoring

Runtime monitors the availability of the driver by means of a watchdog. If a driver is no longer available, the *INVALID* status bit is also set for all checked-in variables.

Possible causes for a triggering of the watchdog:

- ▶ The driver process is no longer running.  
Check whether the driver EXE file is still running in the Task Manager.
- ▶ Operating system is busy with processes that have a higher priority.  
Check the configuration of your system to see whether there is sufficient memory and CPU power. In this case, the driver only resets the *INVALID* status bit if there is a value change on the connected party. Static values retain the *INVALID* status bit until the next time the Runtime or the driver is started.

### CONFIGURATION OF WATCHDOG

For the monitoring of communication in the Runtime, the connection to the driver is checked in a fixed, prescribed time period of 60 seconds. This process is repeated several times. If, within 5 attempts (= within 5 minutes), no valid connection to the driver is detected, the *INVALID* bit is set for the checked-in (*advised*) variables. In addition, the *INVALID* bit is also set when new variables are advised. The *INVALID* bit will no longer be reset.

Corresponding LOG entries are created for this.

## LOG ENTRY

An error message is logged in the LOG when the watchdog is triggered:

Parameter	Description
<i>Communication with driver:&lt;drvExe&gt;/&lt;drvDesc&gt;(id:&lt;drvId&gt;) timed out. No communication for &lt;time&gt; ms.</i>	No communication with driver within the given time. <ul style="list-style-type: none"> <li>▶ &lt;time&gt;: Time (in milliseconds)</li> <li>▶ &lt;drvDesc&gt;: Driver name</li> <li>▶ &lt;drvExe&gt;: Driver EXE name</li> <li>▶ &lt;drvId&gt;: Driver ID in the zenon project</li> </ul>
<i>Communication with %s timed out. Invalid-Bit will be set.</i>	Communication to the %s driver could not be established after 5 attempts within 60 seconds. The <i>INVALID</i> bit is set for the variable.
<i>Communication with %s timed out. Timeout happened %d times</i>	Communication to the %s driver could not be established after %d times within 60 seconds.

## 10.3 Analysis for wrongly addressed variables

If storage areas have status I bit, a reason can be that variables are wrongly addressed. This can be found out with the help of the Diagnosis Viewer. The log files of the Diagnosis Viewer should contain a message similar to this:

**Connection '0': Reading variable block failed. TT '1', offset '2094', count '2'**

In this case the following things are important:

- ▶ Offset of variables: 2094
- ▶ TT number: 1

It is possible to find out the driver object type of the variable from the TT number from the log message.

### LIST OF TT NUMBERS WITH DRIVER OBJECT TYPES

DD	Driver Object Type	Secondary Object	Data Type
01	V Memory		UINT

DD	Driver Object Type	Secondary Object	Data Type
01			INT
01			DINT
01			Real
01			String
02 *	K Memory		UINT
02 *			INT
02 *			DINT
02 *			Real
02 *			String
03 *	Discrete Input (X)		BOOL
4	Discrete Output (Y)		BOOL
5	Control Relay (C)		UINT
09 *	WX Memory		UINT
09 *			INT
0A	WY Memory		UINT
0A			INT
1A *	Status Word (STW) UINT 1A *		DINT
0E	Timer/Counter Preset (TCP) INT 0E	Preset (TCP)	INT
0F		Current (TCC)	INT
10	Drum	Step Preset (DSP)	INT
11		Step Current (DSC)	INT
12		Count Preset (DCP)	INT

DD	Driver Object Type	Secondary Object	Data Type
1B *		Count Current (DCC)	INT
20	Loop Variable	Gain (LKC.)	Real
21		Reset Time - min (LTI.)	Real
22		Rate Time – min (LTD.)	Real
2A		Sample Rate – sec (LTS)	Real
25		Process Variable (LPV)	Real
3A			INT
26		PV High Limit (LPVH)	Real
27		PV Low Limit (LPVL)	Real
2B		Set Point (LSP)	Real
3E			INT
35		SP High Limit (LSPH)	Real
4A			INT
36		SP Low Limit (LSPL)	Real
49			INT
2C		Output (LMN)	Real (%)
3D			INT
31		Bias (LMX)	Real
48			INT
30		Error (empty)	Real
3F			INT

DD	Driver Object Type	Secondary Object	Data Type
32		High-High Alarm Limit (LHHA)	Real
40			INT
23		High Alarm Limit (LHA)	Real
38			INT
24		Low Alarm Limit (LLA)	Real
39			INT
33		Low-Low Alarm Limit (LLLA)	Real
41			INT
37		Alarm Deadband (LADB)	Real
42			INT
28		Orange Dev Alarm Limit (LODA)	Real
3B			INT
29		Yellow Dev Alarm Limit (LYDA)	Real
3C			INT
34		Rate of Change Alarm Limit (LRCA)	Real
4F *		Alarm Acknowledge Flags (LACK)	UINT
4D		Deriv Gain Limiting Coeff (LKD)	Real
1E		Loop Status	UINT
1F		Loop Mode	UNIT

DD	Driver Object Type	Secondary Object	Data Type
2D *		Loop V-Flags (LVF)	UINT
4B		Control Flags – MSW (LCFH)	UINT
4C		Control Flags – LSW (LCFL)	UINT
2F *		Ramp/Soak Status Flags (LRSF)	UINT
4E		Ramp/Soak Step Number (LRSN)	INT
57	Alarm Variable	Sample Rate – sec (ATS)	Real
52		Process Variable (APV)	Real
64			INT
53		PV High Limit (APVH)	Real
54		PV Low Limit (APVL)	Real
58		Set Point (ASP)	Real
67			INT
5F		SP High Limit (ASPH)	Real
70			INT
60		SP Low Limit (ASPL)	Real
6F			INT
5B *		Error (AERR)	Real
69 *			INT
5C		High-High Alarm Limit (AHHA)	Real

DD	Driver Object Type	Secondary Object	Data Type
6A			INT
50		High Alarm Limit (AHA)	Real
62			INT
51		Low Alarm Limit (ALA)	Real
63			INT
5D		Low-Low Alarm Limit (ALLA)	Real
6B			INT
61		Alarm Deadband (AADB)	Real
68			INT
55		Orange Dev Alarm Limit (AODA)	Real
65			INT
56		Yellow Dev Alarm Limit (AYDA)	Real
66			INT
5E		Rate of Change Alarm Limit (ARCA)	Real
73 *		Alarm Acknowledge Flags (AACK)	UINT
59 *		Alarm V-Flags (AVF)	UINT
71		Alarm Control Flags – MSW (ACFH)	UINT
72		Alarm Control Flags – LSW (LCFL)	UINT

\* Read Only Variable

## 10.4 Check list

Checks after communication errors:

- ▶ Is the PLC connected to the power supply?
- ▶ Are the participants available in the **TCP/IP** network?
- ▶ Can the PLC be reached via the **Ping** command?
- ▶ Can the PLC be reached at the respective port via **TELNET**?
- ▶ Did you configure the net address correctly, both in the driver dialog and in the address properties of the variables?
- ▶ Did you use the right object type for the variable?
- ▶ Does the offset addressing of the variable match the one in the PLC?
- ▶ Analysis with the Diagnosis Viewer: Which messages are displayed?