



**COPADATA**  
do it your way

# zenon manual

## Functions and scripts

v.7.20





©2015 Ing. Punzenberger COPA-DATA GmbH

All rights reserved.

Distribution and/or reproduction of this document or parts thereof in any form are permitted solely with the written permission of the company COPA-DATA. Technical data is only used for product description and are not guaranteed qualities in the legal sense. Subject to change, technical or otherwise.

# Contents

<b>1. Welcome to COPA-DATA help .....</b>	<b>5</b>
<b>2. Functions and scripts .....</b>	<b>6</b>
<b>3. Functions .....</b>	<b>6</b>
3.1 Detail view of context menus and toolbar .....	7
3.2 Overview functions in zenon .....	8
3.2.1 Favorites .....	9
3.2.2 AML and CEL .....	9
3.2.3 Application .....	12
3.2.4 Historian .....	14
3.2.5 Batch Control .....	14
3.2.6 User administration .....	15
3.2.7 Screens .....	16
3.2.8 Fault locating in electric grids .....	18
3.2.9 Message Control .....	18
3.2.10 Network .....	19
3.2.11 Report Generator / Report Viewer / Analyzer .....	19
3.2.12 Recipes .....	33
3.2.13 Script .....	33
3.2.14 Variable .....	34
3.2.15 VBA .....	35
3.2.16 VSTA .....	35
3.2.17 Windows .....	36
3.3 Engineering in the Editor .....	36
3.3.1 Creating and editing functions .....	37
3.3.2 Selecting a function .....	38
3.3.3 Deleting functions .....	38
3.3.4 Inserting functions from other projects .....	39
3.4 System functions .....	39
3.4.1 Application - functions .....	39
3.4.2 Windows - Functions .....	44
3.5 Execution sequence during Runtime .....	50

<b>4. Scripts .....</b>	<b>55</b>
4.1 Context menu and tool bar for scripts .....	55
4.2 Engineering in the Editor .....	57
4.3 Pre-defined scripts .....	58
4.4 Executing scripts in Runtime .....	60
4.5 Priorities in the network .....	63
<b>5. Select Functions and scripts dialog .....</b>	<b>64</b>
5.1 Functions selection .....	65
5.2 Script selection .....	66

# 1. Welcome to COPA-DATA help

## GENERAL HELP

If you cannot find any information you require in this help chapter or can think of anything that you would like added, please send an email to [documentation@copadata.com](mailto:documentation@copadata.com) (<mailto:documentation@copadata.com>).

## PROJECT SUPPORT


You can receive support for any real project you may have from our Support Team, who you can contact via email at [support@copadata.com](mailto:support@copadata.com) (<mailto:support@copadata.com>).

## LICENSES AND MODULES

If you find that you need other modules or licenses, our staff will be happy to help you. Email [sales@copadata.com](mailto:sales@copadata.com) (<mailto:sales@copadata.com>).

## 2. Functions and scripts

The user can influence zenon via user-defined project functions. Scripts make it possible to compile several user-defined functions and execute these in a sequence in Runtime.

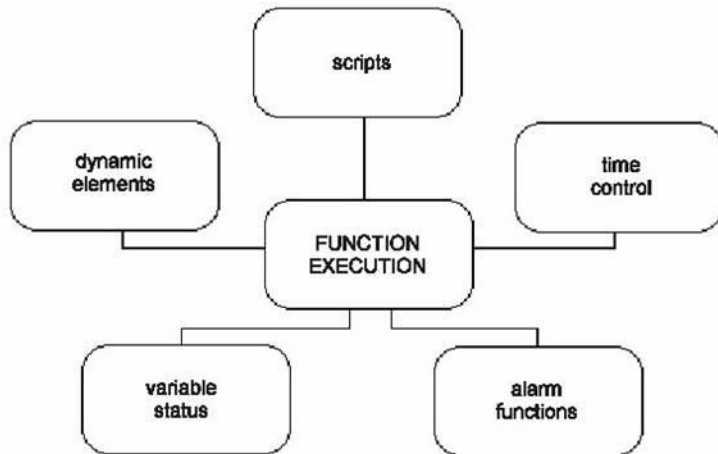

### License information

*Part of the standard license of the Editor and Runtime.*

## 3. Functions

All functions used in a project are based on the existing system functions. These are pre-defined macros that are easy to use and parameterize by the user.

Functions are configured or selected using:

- ▶ The Functions node (on page 36)
- ▶ The Select functions and scripts dialog (on page 64)

### 3.1 Detail view of context menus and toolbar

#### PROJECT MANAGER

Menu item	Action
Function new	Opens a window with function selection to create a new function.
Display unused functions	Creates a project analysis for unused functions in the current project and displays it as result list in an own window.
Export XML all...	Exports all entries as an XML file.
Import XML...	Imports entries from an XML file.
Open in new window...	Opens a new window in order to view and edit the function. The window is displayed at the lower edge of the Editor as a default setting. This can be moved as desired.
Editor profile	Opens the drop-down list with predefined editor profiles.
Help	Opens online help.

#### DETAIL VIEW

Toolbar and context menu



Menu item	Action
Function new	Opens the dialog for creating a new function.
Parameters	Opens the dialog for entering the parameter.
Copy	Copies the selected entries to the clipboard.
Paste	Pastes the contents of the clipboard. If an entry with the same name already exists, the content is pasted as " <b>Copy of . . .</b> ".
Delete	Deletes selected entries after a confirmation from list.
Export selected XML	Exports all selected entries as an XML file.
Import XML	Imports entries from an XML file.
Function use...	Creates a project analysis for selected functions in the current project and displays it as result list in an own window.
Remove all filters	Removes all filter settings.
Edit selected cell	Opens the selected cell for editing. The binocular symbol in the header shows which cell has been selected in a highlighted line. Only cells that can be edited can be selected.
Replace text in selected column	Opens the dialog for searching and replacing texts.
Properties	Opens the <b>Properties</b> window for the selected entry.
Help	Opens online help.

## 3.2 Overview functions in zenon

Functions are sorted in the following groups:

- ▶ AML and CEL (on page 9)
- ▶ Application (on page 12)
- ▶ Historian (on page 14)
- ▶ Batch Control (on page 14)
- ▶ User administration (on page 15)
- ▶ Screens (on page 16)
- ▶ Fault locating in electric grids (on page 18)
- ▶ Message Control (on page 18)
- ▶ Network (on page 19)
- ▶ Report Generator / Report Viewer / Analyzer (on page 19)



- ▶ Recipes (on page 33)
- ▶ Script (on page 33)
- ▶ Variable (on page 34)
- ▶ VBA (on page 35)
- ▶ VSTA (on page 35)
- ▶ Windows (on page 36)

### 3.2.1 Favorites

This group contains functions that you have defined as favorites.

To add functions to this group:

- ▶ Drag the desired functions into this group with Drag & Drop in order to be able to access them more quickly.

### 3.2.2 AML and CEL

This group contains functions for the handling of the alarm message list (AML) and the Chronological Event List (CEL).

Function	Description
<b>Alarms: acknowledge flashing</b>	This function acknowledges the flashing of all elements of the currently open screen of a selected frame. More in chapter: Alarms: acknowledge flashing
<b>Alarms: delete</b>	This function deletes filtered alarms. More in chapter: Alarms: delete
<b>Alarms: acknowledge</b>	This function acknowledges filtered alarms. More in chapter: Alarms: acknowledge
<b>Alarm/event group log in/log off</b>	This function switches on/off the connection to the PLC for a selected alarm/event group. More in chapter: Alarm/event group log in/log off
<b>Alarm Message List active</b>	This function activates the entire alarm message list. More in chapter: Alarm Message List active
<b>Alarm Message List active/inactive</b>	This function activates/deactivates the entire alarm message list. More in chapter: Alarm Message List active/inactive
<b>Alarm Message List inactive</b>	This function deactivates the entire alarm message list. More in chapter: Alarm Message List inactive
<b>Activate/deactivate Alarm Message List, alarm/event groups/classes</b>	This function activates/deactivates an alarm/event group, an alarm/event class or the entire Alarm Message List. More in chapter: Activate/deactivate alarm message list / alarm/event groups / alarm/event classes
<b>Export AML</b>	This function exports filtered entries of the alarm message list to an external format. More in chapter: Export AML
<b>Save AML and CEL memory buffer</b>	This function saves current alarms and events to file ALARM.BIN and CEL.BIN and values from the mathematics variables (counter) in file SY_MA32.BIN. More in chapter: Save AML and CEL memory buffer
<b>Export CEL</b>	This function exports filtered entries of the Chronologic Event List (CEL) to an external format. More in chapter: Export CEL
<b>Print AML or CEL</b>	This function prints selected entries of the alarm list (AML) or the Chronological Event List (CEL). More in chapter: Print AML or CEL
<b>Create/print IPA document</b>	This function creates an IPA report and writes it to an HTML file or prints it out.

	More in chapter: Create IPA document
<b>Switch online printing on/off</b>	<p>This function switches on/off online printing of the alarm message list or the Chronological Event List (CEL).</p> <p>More in chapter: Switch online-printing on/off</p>
<b>Online printing start new page</b>	<p>In activated online printing this function finishes a page and starts a new one. The page number is reset to 1.</p> <p>More in chapter: Online printing start new page</p>
<b>Switch online printer</b>	<p>This function switches the online printing to a selected printer. Optionally, a dialog for the user can be opened before that.</p> <p>More in chapter: Switch online printer</p>

### 3.2.3 Application

This group contains functions for the handling of project settings.

Function	Description
<b>Select printer</b>	<p>This function opens a dialog in which the user can select printers for the different print tasks.</p> <p>More in chapter: Select printer (on page 41)</p>
<b>Start Load Management</b>	<p>This function starts the optimization for a selected service area in the Load Management module. This function is only carried out on the server.</p> <p>More in chapter: Start Load Management</p>
<b>Stop Load Management</b>	<p>This function stops the optimization for a selected service area in the EMS module. This function is only carried out on the server.</p> <p>More in chapter: Stop Load Management</p>
<b>Print Extended Trend diagram</b>	<p>With the help of this function you can print diagrams of the extended trend or save them in a file (JPG or BMP) without opening the screen <code>Extended Trend</code>.</p> <p>More in chapter: Print Extended Trend diagram</p>
<b>Switch palette</b>	<p>Creates a function in order to switch between palettes in the Runtime.</p> <p>More in chapter: Switch palette</p>
<b>Functions active at limit</b>	<p>This function activates the function administration. Automatically executed functions (e.g. via time control, limit violation, etc.) are executed.</p> <p>More in chapter: Functions active at limit (on page 41)</p>
<b>Functions active/inactive at limit</b>	<p>This function switches the function administration on or off. Automatically executed functions (e.g. via time control, limit violation, etc.) are not executed.</p> <p>More in chapter: Functions active/inactive at limit (on page 41)</p>
<b>Functions inactive at limit</b>	<p>This function switches the function administration off. Automatically executed functions (e.g. via time control, limit violation, etc.) are not executed.</p> <p>More in chapter: Functions inactive at limit (on page 41)</p>
<b>Open help</b>	<p>This function opens a selected help page from a CHM file.</p> <p>More in chapter: Open help</p>
<b>Reload project online</b>	<p>This function reloads only changed or all Runtime files.</p> <p>More in chapter: Reload project online (on page 41)</p>

<b>Determine open maintenances</b>	<p>This function sends currently open maintenances from the IMM to status variables.</p> <p>More in chapter: Determine open maintenances</p>
<b>Switch on/off simulation</b>	<p>This function switches between simulation mode and hardware mode. The type of simulation mode or hardware mode can be selected.</p> <p>More in chapter: Activate/deactivate project simulation</p>
<b>PFS - execute user-defined event</b>	<p>This function executes a PFS event previously created by a user.</p> <p>More in chapter: PFS - execute user-defined event</p>
<b>Simulate right click</b>	<p>This function interprets the next mouse click as a right click.</p> <p>More in chapter: Simulate right click (on page 42)</p>
<b>Save remanent data</b>	<p>Allows to the save the data of the configured modules.</p> <p>The choices are: AML ring buffer, CEL ring buffer, system driver and mathematics driver, internal driver, remanent images of all drivers, locking of the Command Processing.</p> <p>More in chapter: Save remanent data (on page 43)</p>
<b>Exit Runtime</b>	<p>This function closes the zenon Runtime.</p> <p>More in chapter: Exit Runtime (on page 42)</p>
<b>S7 Graph heuristics</b>	<p>This function makes it possible to carry out the S7 Graph heuristics without the screen S7 Graph being active.</p> <p>More in chapter: S7 Graph heuristics</p>
<b>Execute SAP function</b>	<p>Enables call up of a SAP function in the Runtime.</p> <p>More in chapter: Execute SAP function</p>
<b>Language switch</b>	<p>This function switches to a selected language in multi-lingual projects.</p> <p>More in chapter: Language switch</p>
<b>Topology - Search for ground fault</b>	<p>Call up of the short circuit detection.</p> <p>More in chapter: Topology - Search for ground fault</p>
<b>Topology - Check connections</b>	<p>Determines the supply state of the topological devices and depicts them on variables.</p> <p>More in chapter: Topology - LoadShedding</p>

### 3.2.4 Historian

This group contains functions for the optional module Historian.

Function	Description
<b>Archive: Stop</b>	This function stops a selected archive of the optional module Historian. More in chapter: Archive: Stop
<b>Index archive</b>	This function indexes archives. More in chapter: Index archive
<b>Archive: Start</b>	This function starts a selected archive of the optional module Historian. More in chapter: Archive: Start
<b>Export archives</b>	This function exports filtered archive entries of the optional module Historian to an external format. More in chapter: Export archives
<b>Display open archives</b>	This function displays a list of running archives of the optional module Historian. More in chapter: Display open archives

### 3.2.5 Batch Control

This group contains functions for the Batch Control.

Function	Description
Execute recipe command change or mode change	You can send control commands to the batch execution with this function.  More in chapter: Execute recipe command change or mode change
Create control recipe function	With the help of this function, a pre-defined control recipe can be created in the Editor by means of a button in Runtime.  More in chapter: Create control recipe function

### 3.2.6 User administration

This group contains functions for the User administration.

Function	Description
<b>Change user</b>	This function opens a dialog, where a logged-in administrator can create, edit or delete users and user groups. More in chapter: Change user
<b>Login with dialog</b>	This function opens the standard login dialog. More in chapter: Login with dialog
<b>Login without password</b>	This function logs in a selected user without asking for his password. More in chapter: Login without password
<b>Logout</b>	This function logs out the currently logged in user. More in chapter: Logout
<b>Change password</b>	This function opens a dialog in which the currently logged-in user can change their password. More in chapter: Change password

### 3.2.7 Screens

This group contains functions for the handling of Screens.

Function	Description
ALC source colors	Function for the configuration of the ALC source colors for the error detection in electric grids. More in chapter: ALC source colors
<b>Screen with index</b>	This function opens a screen with a name containing a selected variable. More in chapter: Screen with index
<b>Close screen</b>	This function closes a selected screen. More in chapter: Close screen
<b>Screen: Return to last</b>	This function returns to the previously opened screen of the selected frame. More in chapter: Screen: Return to last
Delete path for "Screen: Return to last"	with this function, the path of the <b>Screen: Return to last</b> function can be deleted in Runtime. More in chapter: Delete path for "Screen: Return to last"
<b>Screen: Move center</b>	This function scrolls or zooms in a worldview screen. More in chapter: Screen: Move center
<b>Screen switch</b>	This function opens a selected screen. Optionally, a dialog for the user can be opened before that.  <b>Note:</b> Without dialog the function is carried out with the highest priority (1). If a dialog is called up before the execution, the priority is downgraded to <i>high</i> (2). More in chapter: Screen switch
<b>Activate input to the element with the focus</b>	This function executed the functionality of the element, which currently has the input focus. More in chapter: Activate input to the element with the focus
<b>Set focus to frame</b>	This function sets the input focus to the currently open screen of a selected frame. This allows to create projects with pure keyboard operation. More in chapter: Set focus to frame
<b>Move focus</b>	This function sets the input focus to a certain element on the picture, whose frame currently has the focus. More in chapter: Move focus
<b>Take focus away from frame</b>	This function takes the input focus away from the currently open screen of a selected frame. This allows to create projects with pure keyboard operation.



	More in chapter: Take focus away from frame
<b>Show menu</b>	<p>This function opens or closes a selected main menu. Optionally, a dialog for the user can be opened before that.</p> <p>More in chapter: Show menu</p>
<b>Monitor assign</b>	<p>This function assigns a selected virtual monitor to a selected real monitor. Optionally, a dialog for the user can be opened before that.</p> <p>More in chapter: Monitor assign</p>
<b>Runtime profiles</b>	<p>Creates a function with which the profile administration can be opened, a profile can be created or loaded in the Runtime</p> <p>More in chapter: Runtime profiles</p>
<b>Move frame to foreground</b>	<p>With this function, screens that are covered by other screens in Runtime can be moved to the foreground.</p> <p>More in chapter: Move frame to foreground</p>
<b>Close frame</b>	<p>This function closes the currently open screen of a selected frame.</p> <p>More in chapter: Close frame</p>
<b>Print screenshot</b>	<p>This function prints out a screenshot of the whole monitor or frames in Runtime.</p> <p>More in chapter: Print screenshot</p>
<b>Setpoint input for keyboard screen</b>	<p>This function sets a predefined value or writes a predefined value in the keyboard screen type.</p> <p>More in chapter: Setpoint input for screen keyboard</p>
<b>Show overview window</b>	<p>This function opens an overview window. With this you can simulate a multi-monitor system on a one-monitor system.</p> <p>More in chapter: Show overview window</p>

### 3.2.8 Fault locating in electric grids

Contains functions for the fault locating in electric grids.

Function	Description
<b>Acknowledge ground fault message</b>	Function for acknowledging an earth fault message. Opens the dialog for selecting a variable. More in chapter: Acknowledge ground fault message
<b>Stop search for ground fault</b>	Function for closing the search for earth fault. More in chapter: Stop search for ground fault
<b>Start search for ground fault</b>	Function for starting the search for earth fault. More in chapter: Start search for ground fault
<b>Acknowledge ground fault message</b>	Function for acknowledging a short-circuit message. Opens the dialog for selecting a variable. More in chapter: Acknowledge short-circuit message

### 3.2.9 Message Control

This group contains functions for the optional module Message Control.

Function	Description
<b>Save current queue</b>	In the Runtime saves the current message queue. More in chapter: Save current queue
<b>Group/class/area/equipment suppressed</b>	Makes it possible to suppress the sending of messages for certain alarms. More in chapter: Suppress groups/classes/areas/equipment:
<b>Send a Message</b>	Creates a function for sending messages. More in chapter: Send a Message
<b>Send Message: activate</b>	Activates Message Control in the Runtime for the activated project. More in chapter: Send Message: activate
<b>Send Message: deactivate</b>	Deactivates Message Control in the Runtime for the activated project. More in chapter: Send Message: deactivate

### 3.2.10 Network

This group contains functions for the handling of a Network.

Function	Description
<b>Authorization in the network</b>	<p>This function fetches or releases the authorization in a network.</p> <p>More in chapter: Authorization in network</p>
<b>Redundancy switch</b>	<p>This function exchanges the Primary Server and the Standby Server of the project.</p> <p>The configuration dialog is slightly different, depending on the selected <b>Redundancy mode</b>:</p> <ul style="list-style-type: none"> <li>▶ Rated</li> <li>▶ Not dominant</li> </ul> <p>Note: With <b>Redundancy mode</b> not dominant, no additional configuration is necessary.</p> <p>Note: Not available if the CE terminal serves as a data server. You can find further information in the zenon Operator manual in the CE terminal as a data server chapter.</p> <p>More in chapter: Redundancy switch</p>

### 3.2.11 Report Generator / Report Viewer / Analyzer

This group contains functions for:

- ▶ Report Generator
- ▶ Report Viewer
- ▶ zenon Analyzer (on page 20)


Function	Description
<b>Analyzer: Create report</b>	<p>Event-controlled report creation makes it possible to use an event as a trigger for the creation and dispatch of a report in the COPA-DATA product zenon Analyzer; a value change for example.</p> <p>More in chapter: <b>zenon Analyzer</b> (on page 20)</p>
<b>Report Generator: execute</b>	<p>This function executes a selected report of the optional module Report Generator.</p> <p>More in chapter: Report: execute</p>
<b>Print Report Generator</b>	<p>This function prints a selected report of the optional module Report Generator.</p> <p>More in chapter: Print report</p>
<b>Export Report Generator</b>	<p>This function exports a selected report of the optional module Report Generator to an external format.</p> <p>More in chapter: Export Report</p>
<b>Report Viewer: export / print</b>	<p>Makes it possible to issue reports in Runtime as a PDF or online print.</p> <p>More in chapter: Export or print report.</p>

## zenon Analyzer

zenon provides functions that make the exchange of data with the COPA-DATA product zenon Analyzer more easy.

## EVENT-DRIVEN REPORT CREATION

Event-triggered report creation makes it possible to use an event - such as a change of value, for instance - as a trigger for the creation and sending of a report. These reports can be created by means of a zenon function (on page 21).

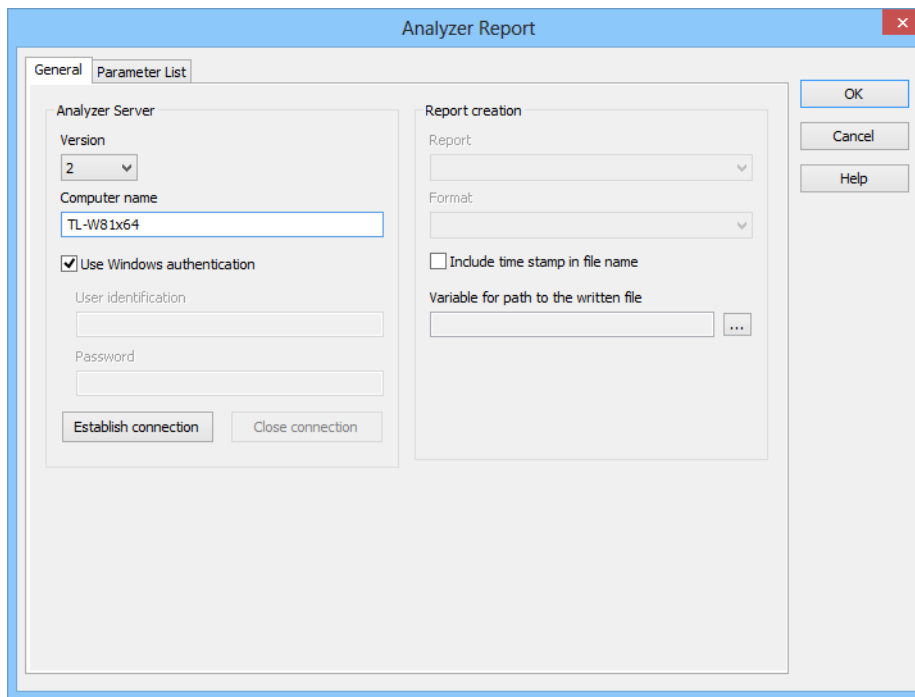

### Create an Analyzer report using the zenon function

## REQUIREMENTS

In order for you to be able to create an event-triggered report for the zenon Analyzer via the zenon **Analyzer: Create report** function, the following requirements must be met:

- ▶ zenon version 7.20 or higher
- ▶ Connection with corresponding rights to an Analyzer server version 2 or higher
- ▶ **Analyzer Server Wrapper** must be installed. Installation is carried out by means of a selection item in the zenon setup.
- ▶ Runtime and Editor must both be restarted after installation of the **Analyzer Server Wrapper**, so that they can find the installed **Analyzer Server Wrapper** DLLs.
- ▶ Recommendation: In order to be sure that the Windows authentication works, the Analyzer server should be in the same domain as zenon Editor and zenon Runtime.


## PROBLEM SOLUTION

- ▶ Communication problems with the Analyzer server: Check the communication in the network as well as the authentication (user and access rights).
- ▶ Reports are rendered but do not contain any data: Check the license of the Analyzer server:

## CREATING A FUNCTION

To create the function:

1. Create a new function.
2. Navigate to the **Report Generator / Report Viewer / Analyzer** group in the selection dialog.

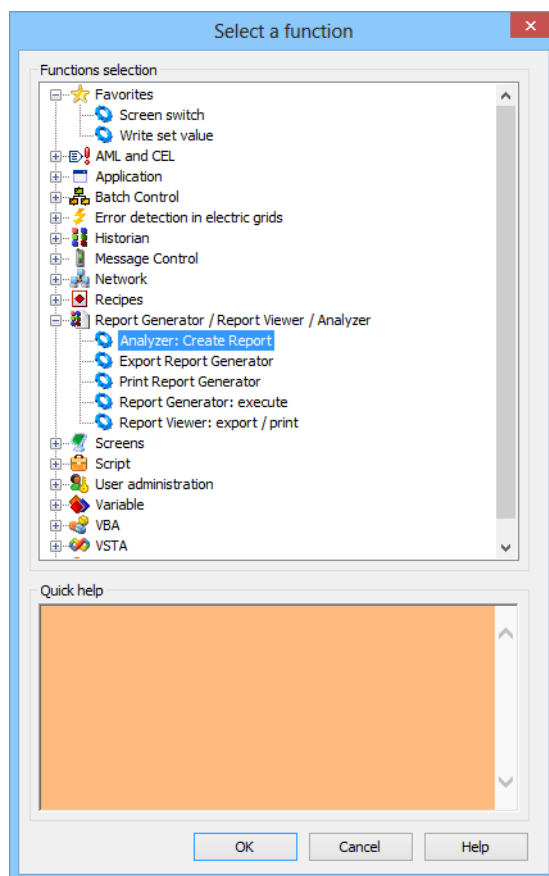

3. Select the **Analyzer: Create Report** function.
4. The dialog for configuration is opened:
5. Configure, in the **General settings** (on page 23) tab, the connection parameters and select the desired report.

**Attention:** Before a switch is made to the second tab, a connection must be made and a report must be selected!

6. Configure the report parameters in the **parameter list** (on page 27) tab.  
When switching to the second tab, an attempt is made to set values that already exist for the parameter input. If this is not successful, the list of set parameter values is displayed as empty.  
Default values can be replaced by individual values. To do this, deactivate the checkbox in front of the value and click on the value. A dialog to enter the new value is opened
7. Connect the function with a button or an event in order to be able to access it in Runtime

## PROCEDURE IN RUNTIME


Procedure when triggering the function to create a report in Runtime:

1. The configured connection is established.
2. The selected report is set.
3. The selected parameter values are set for this report.
4. The report is created and output in the desired form.
5. The file name is generated and the file is saved in the export folder of the project.
6. The complete file name is written to the selected variable.

## General settings

In this tab, the connection to the Analyzer server is configured and selected in the report. This tab must be configured before the switch to **parameter list**.

## GENERAL SETTINGS TAB

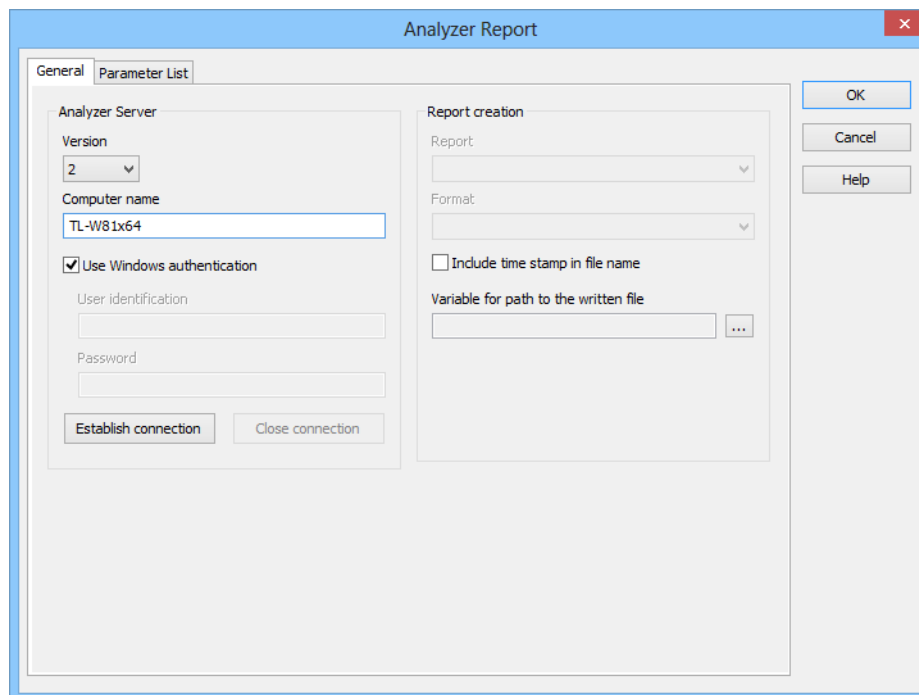

The screenshot shows the 'Analyzer Report' dialog box with the 'General' tab selected. The dialog has a title bar with a close button (X) and two tabs: 'General' and 'Parameter List'. The 'General' tab contains two main sections: 'Analyzer Server' and 'Report creation'. The 'Analyzer Server' section includes a 'Version' dropdown set to '2', a 'Computer name' text box containing 'TL-W81x64', a checked checkbox for 'Use Windows authentication', and empty text boxes for 'User identification' and 'Password'. At the bottom of this section are 'Establish connection' and 'Close connection' buttons. The 'Report creation' section includes a 'Report' dropdown, a 'Format' dropdown, an unchecked checkbox for 'Include time stamp in file name', and a 'Variable for path to the written file' text box with a browse button (...). On the right side of the dialog are 'OK', 'Cancel', and 'Help' buttons.

**Analyzer Report**

General Parameter List

**Analyzer Server**

Version  
2

Computer name  
TL-W81x64

☒ Use Windows authentication

User identification  
[Empty text box]

Password  
[Empty text box]

Establish connection Close connection

**Report creation**

Report  
[Empty dropdown]

Format  
[Empty dropdown]

☐ Include time stamp in file name

Variable for path to the written file  
[Empty text box] ...

OK Cancel Help



## ANALYZER SERVER

Parameters	Description
<b>Analyzer Server</b>	Configuration of the connection to the Analyzer server.
<b>Version</b>	Select the version of the Analyzer server from the drop-down list. Only available if there is no connection.
<b>Computer name</b>	Entry of the name of the computer on which the Analyzer server runs. Only available if there is no connection.
<b>Use Windows authentication</b>	Selection of the type of authentication: <ul style="list-style-type: none"> <li>▶ <b>Active:</b> Windows authentication is used.</li> <li>▶ <b>Inactive:</b> The user must enter the user name and password.</li> </ul>
<b>User name</b>	Entry of the user name. Only available if <b>Use Windows authentication</b> is <i>inactive</i> and there is no connection.
<b>Password</b>	Entry of the password for authentication.  The characters entered are not shown and the length of the password is hidden. The password is saved in encrypted form and is only decrypted to establish a connection.  Only available if <b>Use Windows authentication</b> is <i>inactive</i> and there is no connection.
<b>Connect</b>	Clicking on the button establishes a connection to the analyzer server.  Once the connection has been successfully established, the drop-down lists for <b>report</b> and <b>format</b> are updated.
<b>Close connection</b>	Clicking on the button disconnects the existing connection.

## REPORT CREATION

Parameters	Description
<b>Report creation</b>	Configuration of the basis data for the report.
<b>Report</b>	Selection of the report from a drop-down list.
<b>Format</b>	Selection of the output format from a drop-down list: <ul style="list-style-type: none"> <li>▶ CSV</li> <li>▶ Excel</li> <li>▶ MHTML (Web Archive)</li> <li>▶ PDF</li> <li>▶ TIFF file</li> </ul>

	<ul style="list-style-type: none"> <li>▶ Word</li> <li>▶ XML file with report data</li> </ul>
<b>Include time stamp in file name</b>	<ul style="list-style-type: none"> <li>▶ <b>Active:</b> The execution time stamp is included in the file name.</li> </ul> <p>Sequence of file name creation:</p> <ul style="list-style-type: none"> <li>▶ The report name without a path is the starting point. Example: <b>Alarms</b></li> <li>▶ The time stamp is then added if activated. Example on 15/8/2014 at 15:20:00: <b>Alarms_2014_08_15_15_20_00</b></li> <li>▶ The file name extension is then added according to the selected output format. Example: <b>Alarms_2014_08_15_15_20_00.pdf</b></li> <li>▶ If there is already a file with this name in the export folder of the project, a counter is added until the file name is unique. Example: <b>Alarms_2014_08_15_15_20_00.pdf</b> <b>Alarms_2014_08_15_15_20_00 (2).pdf</b> <b>Alarms_2014_08_15_15_20_00 (3).pdf</b></li> </ul>
<b>Variable for path to file created</b>	<p>Shows the currently-selected zenon variable that contains the path to the written report file.</p> <p>Click on button . . . in order to open the dialog for selecting a variable.</p> <p>Hint: An event-triggered report can thus be sent from zenon via a script or email when a lot archive is closed or when a limit has been breached. In doing so, this variable is used to define the attachment of the Message Control function <b>Send a Message</b>.</p> <p>Procedure:</p> <ul style="list-style-type: none"> <li>▶ Firstly, the report function that writes the variable is executed.</li> <li>▶ Then the <b>Send a Message</b> function is executed, which reads the attachment path from the variables.</li> </ul>


#### CLOSE DIALOG

Parameters	Description
<b>OK</b>	Applies all changes in all tabs and closes the dialog.
<b>Cancel</b>	Discards all changes in all tabs and closes the dialog.
<b>Help</b>	Opens online help.

## Parameter List

You configure the report parameters in this tab. The controls that are offered depend on the selection of the report in the **General settings** tab.

### PARAMETER LIST TAB

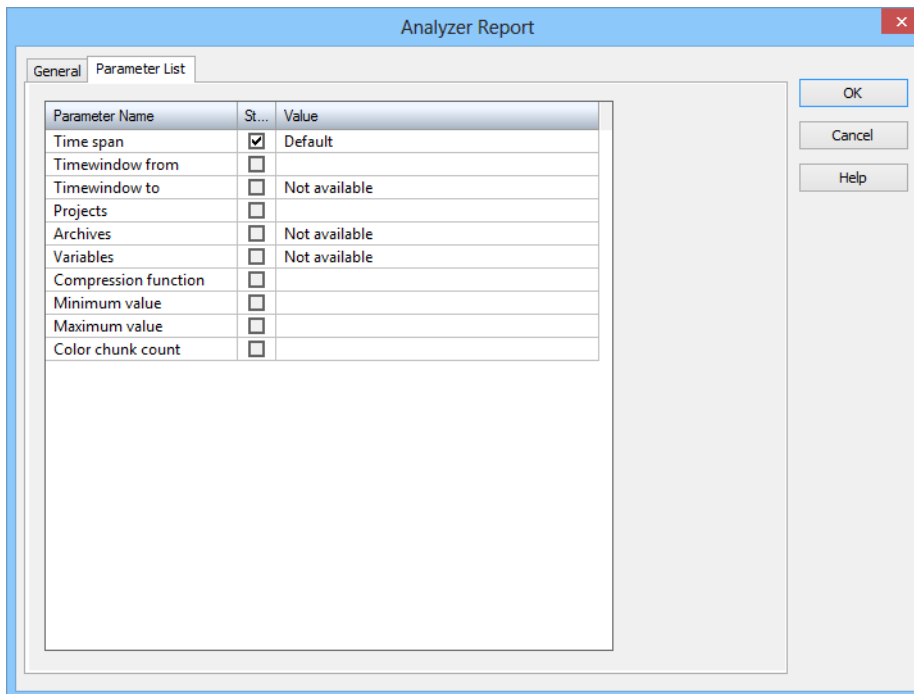

The screenshot shows the 'Analyzer Report' dialog box with the 'Parameter List' tab selected. The dialog has a title bar with a close button. Inside, there are two tabs: 'General' and 'Parameter List'. The 'Parameter List' tab contains a table with three columns: 'Parameter Name', 'St...', and 'Value'. The table lists several parameters, each with a checkbox in the 'St...' column. To the right of the table are three buttons: 'OK', 'Cancel', and 'Help'.

Parameter Name	St...	Value
Time span	<input checked="" type="checkbox"/>	Default
Timewindow from	<input type="checkbox"/>	
Timewindow to	<input type="checkbox"/>	Not available
Projects	<input type="checkbox"/>	
Archives	<input type="checkbox"/>	Not available
Variables	<input type="checkbox"/>	Not available
Compression function	<input type="checkbox"/>	
Minimum value	<input type="checkbox"/>	
Maximum value	<input type="checkbox"/>	
Color chunk count	<input type="checkbox"/>	

Parameters	Description
<b>Parameter List</b>	<p>Display of the report parameters. The sequence corresponds to the sequence in the report.</p> <p><b>Recommendation:</b> Configure the parameters from top to bottom.</p>
<b>Parameter Name</b>	<p>Display of the parameter name.</p> <p>Cannot be configured here.</p>
<b>Standard</b>	<p>Defines whether the parameter is set to its default value.</p> <ul style="list-style-type: none"> <li>▶ <b>Active:</b> The default value from the report is used.</li> <li>▶ <b>Inactive:</b> The value is selected individually by clicking in the <b>Value</b> column.</li> </ul> <p>Clicking with the mouse or pressing the empty button with the parameter highlighted switches the checkbox. If a parameter has a default value, the checkbox is grayed out and inactive.</p>
<b>Value</b>	<p>Display of the current value of the parameter.</p> <ul style="list-style-type: none"> <li>▶ If the <b>Standard</b> checkbox is activated, the text <b>default value</b> is displayed here and the cell does not allow any input.</li> <li>▶ If the <b>Standard</b> checkbox is deactivated, the currently-configured value is shown here. Clicking on the cell or pressing the Enter key with the parameter highlighted opens the input dialog (on page 29) for the respective value.</li> </ul> <p>If a parameter cannot be entered, the text <b>not available</b> is displayed and the cell is deactivated. This can mean, for example, that values for a different parameter must be set first in order to fill the list of values.</p>

## CLOSE DIALOG

Parameters	Description
<b>OK</b>	Applies all changes in all tabs and closes the dialog.
<b>Cancel</b>	Discards all changes in all tabs and closes the dialog.
<b>Help</b>	Opens online help.

Tip for lot/shift reports

In Runtime, the value of a zenon string variable is read. A search for this string as a label is carried out in the list of predefined values for the parameter. The value of the label to be corresponded to is then the parameter value, i.e. the selected shift or lot.

The lot variables of a lot archive can be used here. For the lot report, carry out the **Analyzer: Create report** function when closing the lot archive. The report then has the last lot of this archive as a time filter.

## Configuration of the values

For the configuration of the parameter values, there are appropriate dialogs available for each input. The configuration is carried out depending on the input possibility for:


- ▶ A value without a predefined value: Entry of the value.
- ▶ Several values without predefined values: Entry of the values and adding to a list.
- ▶ A value with predefined value: Selection from drop-down list or list.
- ▶ Several values with pre-defined values: Select from list.

The dialogs that are offered depend on the report selection:

Examples of frequently-used dialogs:

## EQUIPMENT GROUPS


Selection of desired equipment groups:

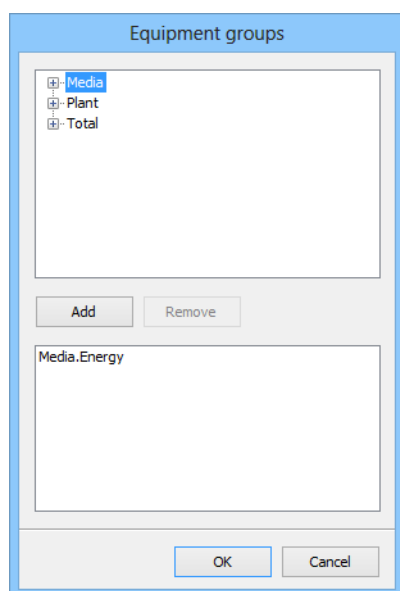

1. Select the desired equipment groups in the top list.
2. Click on **Add**.  
The selected groups are added to the lower list.
3. If you want to remove equipment groups again, highlight these in the lower list and click on **Remove**.


4. To transfer all selected equipment groups to the report, click on **OK**.

## ARCHIVES

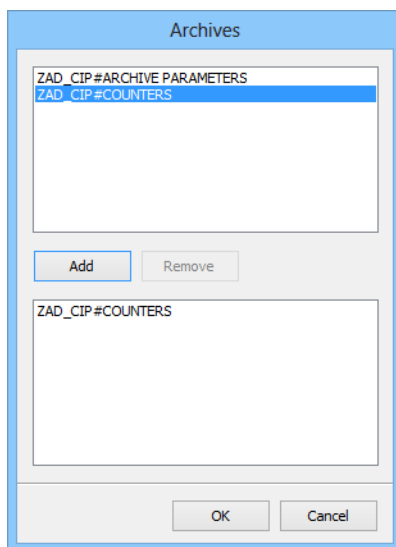


1. Select the desired archive in the the upper list.
2. Click on **Add**.  
the selected archives are added to the lower list.
3. If you want to remove archives again, highlight these in the lower list and click on **Remove**.
4. To transfer all selected archives groups to the report, click on **OK**.

## COMPRESSION

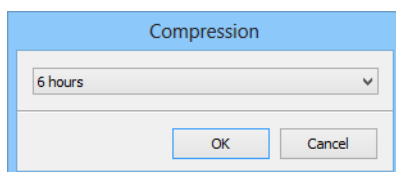


1. Select the desired compression from the drop-down list
2. Click on **OK**.

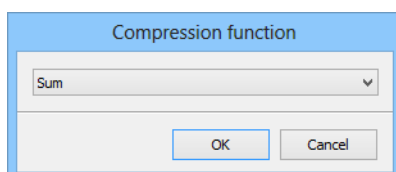

1. Select the desired compression function from the drop-down list.
2. Click on **OK**.


## MAXIMUM VALUE

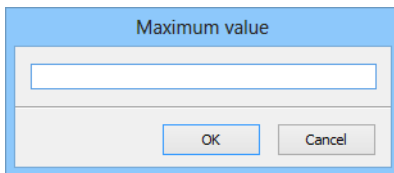

A dialog box titled "Maximum value" with a light blue header. It contains a single-line text input field. Below the field are two buttons: "OK" and "Cancel".

1. Enter the desired value into the field.
2. Click on **OK**.


## Minimum value

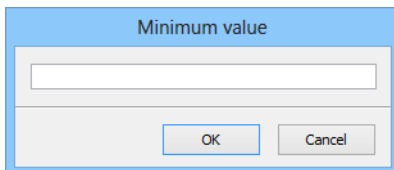

A dialog box titled "Minimum value" with a light blue header. It contains a single-line text input field. Below the field are two buttons: "OK" and "Cancel".

1. Enter the desired value into the field.
2. Click on **OK**.

## PROJECTS

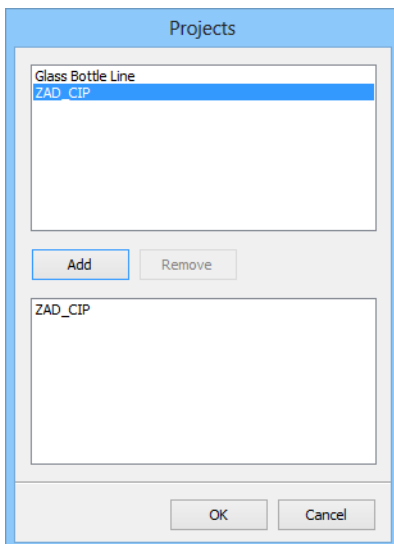


A dialog box titled "Projects" with a light blue header. It features two list boxes. The upper list box contains "Glass Bottle Line" and "ZAD\_CIP", with "ZAD\_CIP" selected. Below the upper list box are "Add" and "Remove" buttons. The lower list box contains "ZAD\_CIP". At the bottom of the dialog are "OK" and "Cancel" buttons.

1. Select the desired project in the upper list.
2. Click on **Add**.  
the selected projects are added to the lower list.

3. If you want to remove projects again, highlight these in the lower list and click on **Remove**.
4. To transfer all selected projects to the report, click on **OK**.


## VARIABLES

Selection of the desired variables.

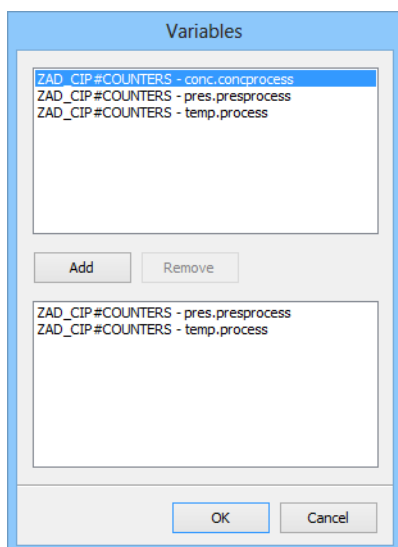

1. Select the desired variables in the upper list.
2. Click on **Add**.  
The selected variables are added to the lower list.
3. If you want to remove variables, highlight these in the lower list and click on **Remove**.
4. To transfer all selected variables to the report, click on **OK**.

## TIME SPAN

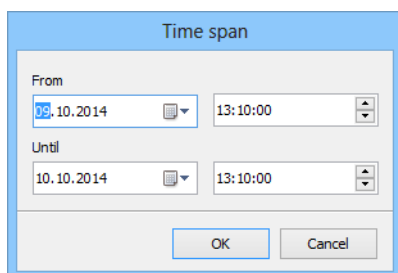

1. Select the desired date and the time for
  - a) **From**
  - b) **To**
2. Click on **OK**.



### 3.2.12 Recipes

This group contains functions for the handling of Standard Recipes and recipes of the optional module Recipegroup Manager.

Function	Description
<b>Recipegroup Manager</b>	This function writes, reads, copies, imports or exports a selected recipe of the optional module Recipegroup Manager (RGM). Optionally, a dialog for the user can be opened before that. More in chapter: Recipegroup Manager
<b>Standard Recipe</b>	This function writes, reads, copies, imports or exports a selected standard recipe. Optionally, a dialog for the user can be opened before that. More in chapter: Standard recipe
<b>Standard Recipe single directly</b>	This function sends the values of a selected standard recipe to the PLC. More in chapter: Standard Recipe single directly
<b>Standard Recipe single with dialog</b>	This function opens a dialog, where the user can change and execute a standard recipe. More in chapter: Standard Recipe single with dialog
<b>Standard Recipe single with online dialog</b>	This function opens a dialog, where the user can select and execute and/or edit a standard recipe. More in chapter: Standard Recipe single with online dialog

### 3.2.13 Script

This group contains functions for the handling of Scripts (on page 60).

Function	Description
<b>Script: execute</b>	This function executes a selected script. More in chapter: Script: execute (on page 60)
<b>Script: select online</b>	This function opens a dialog in which the user can select and execute a script. More in chapter: Script: select online (on page 60)

### 3.2.14 Variable

This group contains functions for the handling of Variables.

Function	Description
<b>Export data</b>	This function exports values of selected variables saved on the hard disk (*.HDD) to an external format. More in chapter: Export data
<b>Read dBase file</b>	This function reads a selected dBase file and executes it as a recipe. More in chapter: Read dBase file
<b>Print current values</b>	This function prints current values of selected variables. More in chapter: Print current values
<b>Unit conversion</b>	Switches from basic unit to conversion unit. More in chapter: Unit conversion
<b>HD administration inactive</b>	This function switches hard disk data storage off. HDD files are not written. More in chapter: HD administration inactive
<b>HD administration active</b>	This function switches hard disk data storage on. HDD files are written. More in chapter: HD administration active
<b>HD administration inactive/active</b>	This function switches hard disk data storage on or off. HDD files are (not) written. More in chapter: HD administration inactive/active
<b>Write set value</b>	This function sends a new value for a selected variable to the PLC. More in chapter: Write set value
<b>Driver Commands</b>	This function sends a selected command to a selected driver. Optionally, a dialog for the user can be opened before that. More in chapter: Driver Commands
<b>Transfer driver simulation image to the Standby Server</b>	Is only carried out at the Standby Standby Server. Demands an image for the selected drivers from the server when it is executed. The driver has 5 seconds of time for this. More in chapter: Transfer driver simulation image to the standby
<b>Write time to variable</b>	This function reads the system time of the operating system and writes it to a string variable in the PLC. This way, the system time of the PLC can be synchronized with the operating system. More in chapter: Write time to variable
<b>Read time from variable</b>	This function reads the time from a string variable of the PLC and sets the system time of the operating system accordingly. This way, the system time of the PLC can be synchronized with the operating system. More in chapter: Read time from variable

### 3.2.15 VBA

This group contains functions for the handling of VBA (on page 6) macros.

Function	Description
<b>Open PCE editor</b>	This function opens the editor of the optional module Process Control Engine (PCE). More in chapter: Open PCE editor
<b>Open VBA editor</b>	This function opens the VBA editor. More in chapter: Open VBA Editor
<b>Execute VBA m (on page 6)acro</b>	This function executes a selected VBA macro.  Attention: The VBA Event <b>project inactive</b> is carried out by script <b>AUTO_END_xxx</b> . Therefore the zenon function <b>Execute VBA macro</b> is no longer executed in scripts as VBA is not running at this time. VBA macros which should be carried out in "AUTOEND" must be called via Project.Inactive. More in chapter: Execute VBA macro
<b>Show VBA macro dialog</b>	This function opens the VBA macro dialog. More in chapter: Show VBA macro dialog

### 3.2.16 VSTA

This group contains functions for the handling of VSTA.

Function	Description
<b>Open VSTA editor</b>	This function opens the VSTA editor. More in chapter: Open VSTA Editor
<b>Execute VSTA macro</b>	This function executes a selected VSTA macro. More in chapter: Execute VSTA macro
<b>Show VSTA macro dialog</b>	This function opens the VSTA macro dialog. More in chapter: Show VSTA macro dialog

### 3.2.17 Windows

This group contains functions for the handling of operating system functionality.

Function	Description
<b>Play audio file</b>	This function plays a selected audio file (*.wav) once. More in chapter: Play audio file (on page 44)
<b>File operations</b>	This function copies, deletes or moves selected files. Optionally, a dialog for the user can be opened before that. More in chapter: File operations (on page 44)
<b>Start continuous tone</b>	This function plays a selected audio file (*.wav) continuously. More in chapter: Start continuous tone (on page 47)
<b>Stop continuous tone</b>	This function stops the continuous playing of a audio file (*.wav). More in chapter: Stop continuous tone (on page 47)
<b>Window to the background</b>	This function switches the zenon Runtime to the background. More in chapter: Window to the background (on page 47)
<b>Window to foreground</b>	This function switches the zenon Runtime to the foreground. More in chapter: Window to foreground (on page 47)
<b>Print screenshot</b>	This function prints either the current screen or the currently open screen of a selected frame. Optionally the print-out can be routed to a fax. More in chapter: Print screenshot
<b>Start program</b>	This function starts an external program. Transfer parameters can be defined. Optionally, a dialog for the user can be opened before that. More in chapter: Start program (on page 48)


## 3.3 Engineering in the Editor

You can configure functions in Runtime in the zenon Editor.

### 3.3.1 Creating and editing functions

#### CREATING A NEW FUNCTION:


In the context menu of the entry **Functions** in the Project Manager the following commands are available:

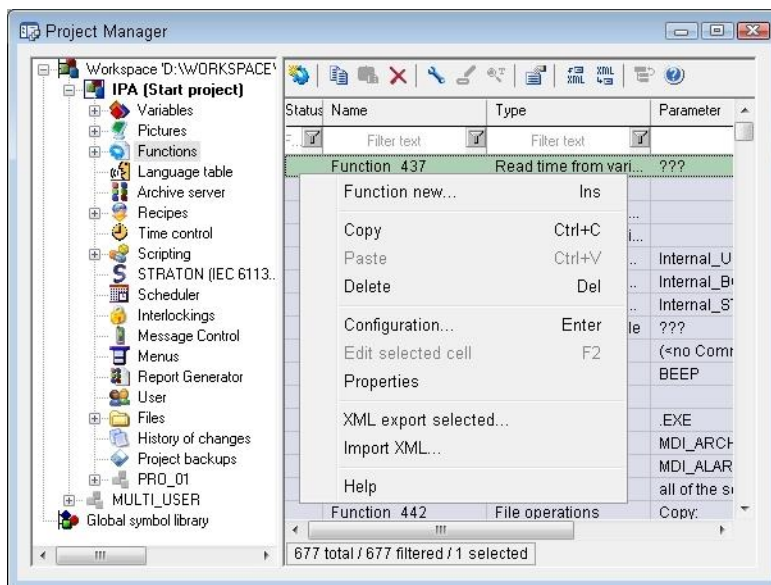

Parameters	Description
<b>Function new ...</b>	A new function is created and can be defined in the properties window.
<b>Script new</b>	A new Script (on page 55) (bundle of functions) is created.
<b>Export XML all...</b>	Export all functions to an XML file See chapter Import/Export.
<b>Import XML ...</b>	Import functions from an XML file. See chapter Import/Export.
<b>Open in new window...</b>	Opens the detailview of the functions in a new window.
<b>Profile</b>	See chapter Profiles.

### 3.3.2 Selecting a function

In order to create a new function, select the entry `New function`. The function selection dialog opens. If a function is selected, you will find a dialog help in the lower part of the dialog. There the selected function is explained. You will find more information in the chapter Overview functions (on page 8).

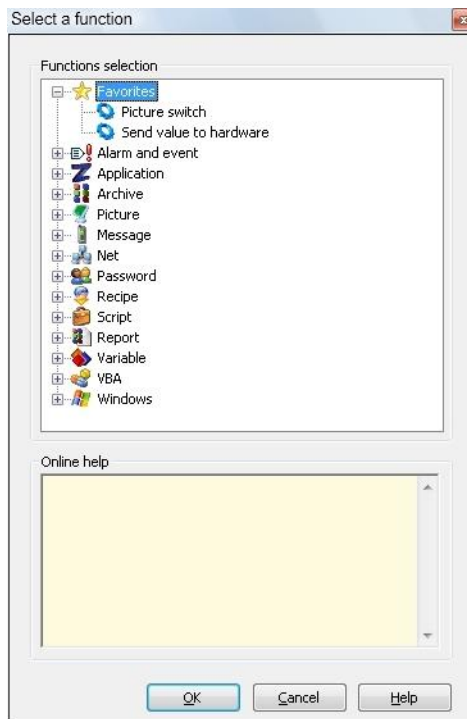

A function is created after you have selected it and confirmed with `OK`. The parameters of this new function can now be defined in the properties window.

If you press the 'Help' button after the selection, you will be forwarded directly to the corresponding function in the online help.

Similar to the properties window also here an individually definable favourite view is available. The section 'Favourites' is always at the top of the list. As a default it contains the functions 'Screen switch' and 'Send value to hardware'. Any function can be added to or removed from the favourites with the context menu or by Drag&Drop.

If a function is selected, you will find a dialog help in the lower part of the dialog. You will find more information on the single functions in the chapter Overview functions (on page 8).

### 3.3.3 Deleting functions

In order to delete a function, the function has to be selected in the detail view and deleted with the `DEL` key.

### 3.3.4 Inserting functions from other projects

It is possible to insert functions from other projects of the same workspace.

This is possible for screens (Screen Start-end Function, Buttons), limits, time control, scheduler, scripts, menus, projects (automatic function execution, archive).

## 3.4 System functions

System functions are not limited to one module. They have an effect on the complete zenon project configuration and control computer settings such as the selection of a printer for example.

### 3.4.1 Application - functions

General zenon functions

Parameters	Description
<b>Select printer</b>	This function opens a dialog in which the user can select printers for the different print tasks. Note: This function is not available for all CE devices.
<b>Start Load Management</b>	
<b>Stop Load Management</b>	
<b>Print Extended Trend diagram</b>	With the help of this function, you can print Extended Trend diagrams or save them in a file (JPG, BMP or SVG) without opening the Extended Trend screen.
<b>Switch palette</b>	Creates a function in order to switch between palettes in the Runtime.
<b>Functions active at limit</b>	This function activates the function administration. Automatically executed functions (e.g. via time control, limit violation, etc.) are executed.
<b>Functions active/inactive at limit</b>	This function switches the function administration on or off. Automatically executed functions (e.g. via time control, limit violation, etc.) are (not) executed.
<b>Functions inactive at limit</b>	This function switches the function administration off. Automatically executed functions (e.g. via time control, limit violation, etc.) are not executed.
<b>Open help</b>	This function opens a selected help page from a CHM file.
<b>Reload project online</b>	This function reloads amended Runtime files in the Editor.
<b>Simulate right click</b>	This function interprets the next mouse click as a right click.
<b>Save remanent data</b>	Allows to the save the data of the configured modules. The choices are: AML ring buffer, CEL ring buffer, system driver and mathematics driver, internal driver, remanent images of all drivers and locking of the Command Processing.
<b>Exit Runtime</b>	This function ends the Runtime of the control system.
<b>Execute SAP function</b>	Carries out an SAP function defined in the SAP interface in the Runtime. The SAP function in turn triggers a remote function call (RFC) in the SAP system.
<b>Language switch</b>	This function switches to a selected language in multi-lingual projects.



## Select printer

The printers for the different lists are generally defined in the Standard Configuration.

This function is used to change the printer selection during online operation. This function needs no parameters.

The settings of the printers are done as described in the chapter Configuration/Standard/Printer.

## Functions active at limit

With this function you activate the administration of the limit functions in the Runtime.

## Functions inactive at limit

With this function you deactivate the administration of the limit functions in the Runtime.

## Function active/inactive at limit

With this function you can switch limit functions between states 0 and 1 in the Runtime. The status stored in the `zenon6.ini` file will be loaded when the Runtime is started:

[FUNKTIONEN]

ON=0 -> inactive

ON=1 -> active

## Reload project online

This function loads changed Runtime files, without having to restart the Runtime.



### Information

*If the names of the server or Standby Server are changed in the Editor, these cannot be loaded subsequently. They are only updated by restarting Runtime.*



### Attention

***PNG** graphics files cannot be overwritten if they are currently being displayed in Runtime.*

***Background:** The Runtime protects opened **.png** files against overwriting.*

***Solution:** Before Remote Transport is instigated, it must be ensured that screens with **\*.png** files:*

- ▶ Are not called up in Runtime
- ▶ Are not being used by another program

*This also applies for the reloading of amended Runtime files. The Runtime sync in the network does not work for a **\*.png** screen if this is switched on a zenon computer that is involved in the process (standby server, client).*

## Exit program

This function is used to exit the Runtime in a defined way (logging in CEL, close the archives, execute the AUTOEND script etc.).

No transfer parameters are needed.



### Attention

- ▶ The VBA Event **project inactive** is carried out by script **AUTO\_END\_xxx**. Therefore the zenon function **Execute VBA macro** is no longer executed in scripts as VBA is not running at this time. VBA macros which should be carried out in "AUTO\_END" must be called via Project.Inactive.
- ▶ Cyclical archives must not be given in the AUTOEND script.

## Simulate right click

After executing this function in the Runtime the next mouse click or the next touch on the touchscreen is interpreted as a click with the right mouse button.


With this function it is possible to use context menus also on touchscreens.

No transfer parameters are needed.

## Save remanent data

Function **Save remanent data** makes it possible to save remanent data at any time in the Runtime. The function can be imported and exported. In order to configure the function:

1. select New Function
2. navigate to node Applications
3. select **Save remanent data**
4. the dialog for the selection of the modules opens.

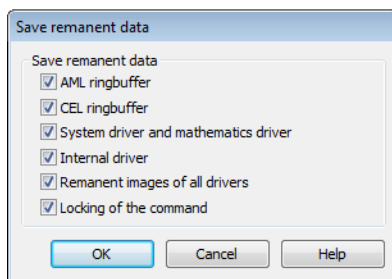

Module	Description
<b>AML ringbuffer</b>	Active: AML ring buffer is saved.
<b>CEL ringbuffer</b>	Active: CEL ring buffer is saved.
<b>System driver and mathematics driver</b>	Active: Data of the system driver and of the mathematics driver are saved.
<b>Internal driver</b>	Active: Data of the internal driver are saved.
<b>Remanent images of all drivers</b>	Active: Data of all drivers are saved.
<b>Locking of the Command Processing</b>	Active: Data of the locking of the command processing are saved.

If errors occur during the saving process, they are written to the error protocol.



### Information

*If the Runtime runs in simulation mode (project simulation active), function **Save remanent data** does not save values from the following drivers:*

- ▶ Internal driver
- ▶ mathematics driver
- ▶ system driver

### 3.4.2 Windows - Functions

Functions that trigger something in the operating system.

Parameters	Description
<b>Play audio file</b>	This function plays a selected audio file (*.wav) once.
<b>File operations</b>	This function copies, deletes or moves selected files. Optionally, a dialog for the user can be opened before that.
<b>Start continuous tone</b>	This function plays a selected audio file (*.wav) continuously.
<b>Stop continuous tone</b>	This function stops the continuous playing of a audio file (*.wav).
<b>Window to the background</b>	This function switches the Runtime of the control system to the background.
<b>Window to foreground</b>	This function switches the zenon Runtime to the foreground.  Attention: At switch to foreground the alarm status bar is overlaid.
<b>Start program</b>	This function starts an external program. Transfer parameters can be defined. Optionally, a dialog for the user can be opened before that.


#### Play audio file

This function is used to play the indicated audio file (\*.wav) once whenever the function is called in the Runtime. Provide the audio file as transfer parameter.

#### File Operations

This function is used to perform a defined file operation during runtime (copying, moving and deleting).

Give the file operation and the file parameters as the transfer parameters. This function is configured via an input dialog.

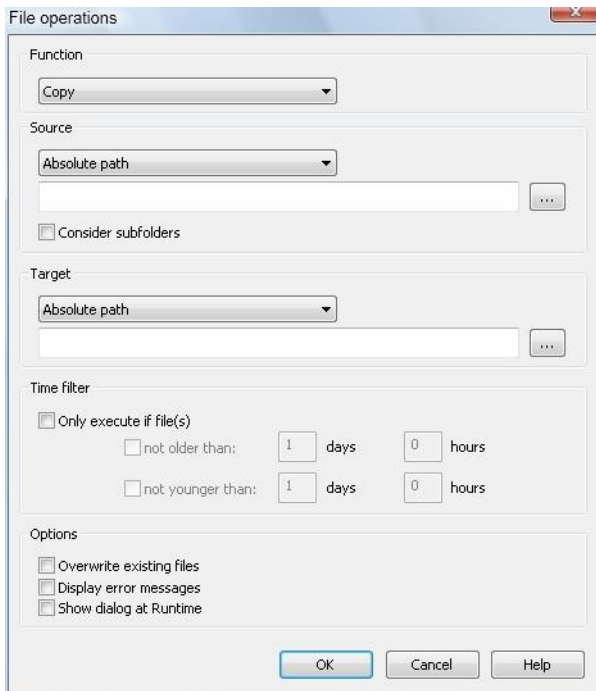

The 'File operations' dialog box is shown. It has a title bar with a close button. The main area contains several sections: 'Function' with a dropdown menu set to 'Copy'; 'Source' with a dropdown menu set to 'Absolute path', a text input field, and a browse button (...); a checkbox for 'Consider subfolders'; 'Target' with a dropdown menu set to 'Absolute path', a text input field, and a browse button (...); 'Time filter' with a checkbox 'Only execute if file(s)' and two rows of checkboxes for 'not older than' and 'not younger than', each with input fields for 'days' and 'hours'; and 'Options' with three checkboxes: 'Overwrite existing files', 'Display error messages', and 'Show dialog at Runtime'. At the bottom are 'OK', 'Cancel', and 'Help' buttons.

#### POSSIBLE FILE OPERATIONS:

Parameters	Description
Copy	copies files from one name and path to a new name and path. Transfer parameters are considered.
Move	Moves files from one name and path to a new name and path and deletes them in source path. Transfer parameters are considered.
delete	Delete files. Transfer parameters are considered.

If the given source cannot be found (file or path is not present or incorrect), the function will not be executed. By default, no error message is generated. You can also force an error message via the options; we do not recommend this, as this might block the runtime or the processing of other functions.

Additional options can be configured after the file operation is defined.

Parameters	Description
<b>Source/Target</b>	<p>Enter the path to source and target. You can also use wild cards (*) for source and target. (Wildcards are only allowed as prefix or suffix; e.g. *xxx or xxx*.)</p> <p>There are three ways of defining a path:</p> <ul style="list-style-type: none"> <li>▶ absolute (You can also use the button '...' next to the text field).</li> <li>▶ relative according to runtime folder (Link: more about the runtime folder)</li> <li>▶ relative according to the data folder. (Link: more about the data folder).</li> </ul> <p>For example:</p> <p><b>absolute:</b> Source 'C:\temp\datenbank.mdb' to target 'D:\backup\' -&gt; The file 'database.mdb' is copied to the directory 'D:\backup\''. In order for the copying to work, the target directory must already exist and it must be followed by a backslash.</p> <p><b>relative:</b> relative according to the data directory: '*.aml' to target 'D:\backup\' copies all files of the alarm list to the folder 'D:\backup\''.</p> <p><b>Rename files:</b> It is possible to rename single files. For example: 'C:\temp\datenbank.mdb' to target 'D:\backup\backupdb.mdb' copies the file 'datenbank.mdb' to the directory 'D:\backup\' and renames it to 'backupdb.mdb'. Renaming several files simultaneously with wild cards is not possible.</p>
<b>Consider subfolders</b>	Looks for files also in the sub folder of the source path and creates that tree structure in the target directory.
<b>Overwrite existing files</b>	If the source file already exists in the destination directory, it will be overwritten by the new file.
<b>Display error messages</b>	If copying or moving file is not possible, an error message is displayed as system message. We do not recommend to activate this option, as it may block the runtime or the processing of other functions.
<b>Show dialog at Runtime</b>	Before the function is executed in online operation, a dialog box is loaded, which allows to adjust parameters (file operation, source, target etc.). The modified settings remain during the runtime of the online operation. In this dialog box, the option dialog box before execution is missing.
<b>Only execute if file(s)</b>	File operation is executed only when time criterion was defined (days, hours).
<b>older than</b>	The file must be older than the entered time. '1 day' always means 24 hours after execution time.

<b>newer than</b>	The file must be more up to date than the entered time. '1 day' always means 24 hours after execution time. Note: 'not older than' must be bigger than 'not younger than'.
-------------------	---

### Start continuous tone

By using this function the defined audio file (\*.wav) is played repeatedly in the Runtime via a function call until function `stop continuous tone` is executed. Provide the audio file as transfer parameter.

### Stop continuous tone

This function stops the repeated playing of an audio file (\*.wav) which has been started via function `start continuous tone`.

### Window to the background

With this function the zenon window is switched to the background in the Runtime. The entry `SYSKEY` in the file `project.ini` is not regarded. The selection of other applications (program manager) is possible.

[DEFAULT]	
...	
SYSKEY=	0 - system keys active
	1 - system keys blocked (default)

No transfer parameters are needed.

### Window to foreground

With this function the zenon window is switched to the foreground in the Runtime. All other applications are switched to the background (Exception: applications with the **always in the foreground** property). The entry `syskey` in the file `project.ini` is regarded.

Entry	Meaning
[DEFAULT]	
SYSKEY=	Block or activation of the system keys: <ul style="list-style-type: none"> <li>▶ 0 : System keys active</li> <li>▶ 1 : System keys blocked (default)</li> </ul>

No transfer parameters are needed.



### Information

*At moving the Runtime to the foreground the Runtime window is defined as the topmost window. At this the alarm status line is covered. In order to get the alarm status line back to the foreground, you can:*

- ▶ activate the system keys (deactivate project setting **Lock system keys**) and get back the alarm status line via **Alt+Tab** to the foreground
- ▶ activate the Windows task bar and click on window **Status**
- ▶ move the Runtime back to the background
- ▶ restart the Runtime
- ▶

## Start program

This function is used to execute an external program (\*.exe) from the Runtime. On executing the function transfer parameters for the application to start can be defined.

Give the program file (\*.EXE) as the transfer parameter. This function is configured via an input dialog.



Configurable options are:

Parameters	Description
<b>Name</b>	name of file which will be executed; search and select via button is possible
<b>Parameters</b>	transfer parameter for program
<b>Show this dialog in the Runtime</b>	changes program and parameter during online operation when function is called

The program is selected via a dialog mask.



For the start of a program it has to be in a search path (system environment under Windows NT). User-defined programs (Visual Basic) should be stored in the installation path of zenon.

When the Alarm Message List is active and an alarm in the list has been selected, the call of the variables' name can be transferred as a parameter (for external database information systems). The parameter is transferred as a key word.

Parameters	Description
@alarm.name	Name of the variable
@alarm.unit	unit of the variable
@alarm.value	value, which violated a limit
@alarm.stext	limit text
@alarm.ctime	time comes (value in seconds since 1.1.1970)
@alarm.ctimemilli	with milliseconds
@alarm.gtime	Time cleared
@alarm.gtimemilli	with milliseconds
@alarm.qtime	Time acknowledged
@alarm.user	user, who quitted
@alarm.identification	Identification of the variable

If no Alarm Message List is open, or several or no alarms are selected, no transfer parameters are generated. If several Alarm Message Lists are displayed (global or selective list), the entry of the first found list is used.

When the Chronologic Event list is active and an entry in the list has been selected, the call of the variables' name can be transferred as a parameter (for external database information systems). The parameter is transferred as a key word.

Parameters	Description
@cel.name	Name of the variable
@cel.unit	unit of the variable (only if a variable is linked)
@cel.value	value, which violated a limit (only if limit entry)
@cel.stext	limit text
@cel.ctime	time comes (value in seconds since 1.1.1970)
@cel.ctimemilli	with milliseconds
@cel.user	user, who quitted
@cel.identification	Identification of the variable

If no Chronologic Event List is open, or several or no entries are selected, no transfer parameters are generated. If several Chronologic Event Lists are open (global or selective list), the entry of the first found list is used.

Additional parameters are:

@screen	screen from within which the function was executed
---------	--

This function is used to consider the effects of the started program on the system as a whole (required resources, multitasking, program stability, etc.).

### 3.5 Execution sequence during Runtime

The execution of functions in the Runtime is done according to a 3 priority levels:

- ▶ Priority 1: Immediate (it is executed immediately)
- ▶ Priority 2: High (a dialog is displayed before it is executed)
- ▶ Priority 3: Low

If for a function with priority 1 a dialog is displayed before the function is carried out, the priority is set to 2.

Within one project all functions of one script (on page 55) are in the same queue. In one script all functions of the same priority level are executed. These functions are executed one after the other.



### Example

Via a script a screen arrangement with screens of different projects is activated via function **Screen Switch**. This arrangement depends on the sequence of execution (screens above other screens).

## PRIORITY OF THE EXECUTION IN THE RUNTIME

Function groups	Functions	Priority
AML and CEL	Controlling the AML and CEL administration	
	▶ Alarms: acknowledge flashing	1
	▶ Alarms: delete	1
	▶ Acknowledge alarms	1
	▶ Alarm/event group log in/log off	1
	▶ Alarm Message List active	1
	▶ Alarm Message List active/inactive	1
	▶ Alarm Message List inactive	1
	▶ Activate/deactivate Alarm Message List, alarm/event groups, alarm/event classes	1
	▶ Save AML and CEL memory buffer	1
	▶ Print AML or CEL	3
	▶ Export alarms	2
	▶ Export CEL	2
	▶ Create/print IPA document	1
	▶ Switch online printing on/off	1
	▶ Online printing start new page	?
	▶ Switch online printer	3
Application (on page 39)	Call applications	
	▶ Select printer	3
	▶ Print extended trend diagram	1
	▶ Switch palette	2
	▶ Functions with inactive/active limit values	1
	▶ Functions active at limit	1

	‣ Functions inactive at limit	1
	‣ Open Help	3
	‣ Reload project online	1
	‣ Determine open maintenances	3
	‣ Execute PFS event	1
	‣ Exit program	3
	‣ Simulate right click	3
	‣ Save remanent data	1
	‣ Analyze S7 Graph heuristics	1
	‣ Switch simulation on/off	1
	‣ Language switch	2
Historian	control of archives	1
	‣ Archive: Stop	1
	‣ Index archive	1
	‣ Archive: Start	1
	‣ Archive: List of active archives	2
	‣ Export archives	1
User administration	User administration	
	‣ Change user	3
	‣ Login with dialog	2
	‣ Login without password	2
	‣ Logout	2
	‣ Change password	2
Screens	Select and control screens	
	‣ Change ALC source color	1
	‣ Screen with index	1
	‣ Close screen	2
	‣ Screen: Return to last	1
	‣ Screen: Move center	1
	‣ Screen switch	1

	▶ Activate input to the element with the focus	1
	▶ Set focus to frame	1
	▶ Move focus	1
	▶ Take focus away from frame	1
	▶ Show menu	1
	▶ Monitor assign	1
	▶ Runtime profiles	1
	▶ Close frame	1
	▶ Overview Window	1
Fault locating in electric grids		
	▶ Acknowledge ground fault message	1
	▶ Stop search for ground fault	1
	▶ Start search for ground fault	1
	▶ Acknowledge short-circuit message	1
Message Control	sending of messages (Message Control)	
	▶ <b>Save current queue</b>	1
	▶ <b>Group/class/area/equipment suppressed</b>	1
	▶ <b>Send a Message</b>	1
	▶ <b>Send Message: activate</b>	1
	▶ <b>Send Message: deactivate</b>	1
Network	Network - Functions	
	▶ Authorization in network	1
	▶ Redundancy switch	1
Report Generator	Functions for reports	
	▶ Print report	2
	▶ Export report	2
	▶ Report: execute	2
Recipes	operating recipes	
	▶ Recipegroup Manager	2
	▶ Standard Recipe	2

	▶ Standard recipe single directly	2
	▶ Standard recipe single with dialog	2
	▶ Standard recipe single with online dialog	2
Script (on page 60)	Execute functional blocks (scripts)	
	▶ Script: execute	1
	▶ Script: select online	2
Variable	Functions for variables	
	▶ Export data	3
	▶ Read dBase file	2
	▶ Print current values	2
	▶ measuring unit conversion	2
	▶ HD administration active	1
	▶ HD administration inactive	1
	▶ HD administration inactive/active	1
	▶ Write set value	1
	▶ Driver Commands	2
	▶ Transfer driver simulation image to the standby	1
	▶ Write time to variable	1
	▶ Read time from variable	1
VBA	VBA - Functions	
	▶ Open PCE editor	3
	▶ Open VBA Editor	3
	▶ Execute VBA macro	3
	▶ Show VBA macro dialog	3
VSTA	VSTA functions	
	▶ Open VSTA editor	3
	▶ Execute VSTA macro	3
	▶ Show VSTA macro dialog	3
Windows (on page 44)		
	▶ Play audio file	2
	▶ File operations	3

	▶ Start continuous tone	1
	▶ Stop continuous tone	1
	▶ Window to the background	2
	▶ Window to foreground	2
	▶ Print screenshot	2
	▶ Start program	2

## 4. Scripts

Scripts compile several functions together in order to execute these in a sequence in Runtime. zenon also provides some pre-defined scripts (on page 58).

Scripts are configured or selected using:

- ▶ The Scripts node (on page 57)
- ▶ The Select functions and scripts dialog (on page 64)

### 4.1 Context menu and tool bar for scripts

#### CONTEXT MENU PROJECT MANAGER

Menu item	Action
<b>Script new</b>	Creates a new script.
<b>Export XML all...</b>	Exports all entries as an XML file.
<b>Import XML...</b>	Imports entries from an XML file.
<b>Editor profile</b>	Opens the drop-down list with predefined editor profiles.
<b>Help</b>	Opens online help.

#### SCRIPTS TOOL BAR DETAIL VIEW



Symbol	Description
<b>Script new</b>	Adds a new script to the list.
<b>Add functions</b>	Opens the dialog for adding functions (on page 57).
<b>Use of scripts</b>	Opens the Project analysis in the main window and displays the elements with which the selected script is used.
<b>Show unused scripts</b>	Opens the Project analysis in the main window and shows unused scripts.
<b>Copy</b>	Copies the selected script or the selected functions to the Windows clipboard.
<b>Paste</b>	Pastes an element that was copied to the Windows clipboard.
<b>Delete</b>	Deletes the selected script or removes the selected function from the script.
<b>Expand/collapse</b>	Allows all or selected nodes to be expanded or collapsed. Selection: <ul style="list-style-type: none"> <li>‣ <b>Expand all</b></li> <li>‣ <b>Collapse all</b></li> <li>‣ <b>Expand selected</b></li> <li>‣ <b>Reduce selected</b></li> </ul>
<b>Export selected XML</b>	Exports selected entries as an XML file.
<b>Import XML</b>	Imports elements from an XML file.
<b>Edit selected cell</b>	Renames the script. It is also possible by left-clicking the field with the mouse or by pressing <b>F2</b> .
<b>Properties</b>	Opens the <b>Properties</b> window for the selected entry.
<b>Help</b>	Opens online help.

## CONTEXT MENU SELECTED SCRIPT

Parameters	Description
<b>Add functions</b>	Opens the dialog for adding functions (on page 57).
<b>Script new</b>	Adds a new script to the list.
<b>Create standard function</b>	Automatically creates a standard function for the selected script.
<b>Use of scripts</b>	Opens the project analysis in the main window and displays the elements with which the selected script is used.
<b>Show unused scripts</b>	Opens the project analysis in the main window and shows unused scripts.



<b>Copy</b>	Copies the selected script or the selected functions to the Windows clipboard.
<b>Paste</b>	Pastes an element that was copied to the Windows clipboard.
<b>Delete</b>	Deletes the selected script or removes the selected function from the script.
<b>Expand/collapse node</b>	Allows all or selected nodes to be expanded or collapsed. Selection: <ul style="list-style-type: none"> <li>‣ <b>Expand all</b></li> <li>‣ <b>Collapse all</b></li> <li>‣ <b>Expand selected</b></li> <li>‣ <b>Reduce selected</b></li> </ul>
<b>Export selected XML</b>	Exports selected entries as an XML file.
<b>Import XML</b>	Imports elements from an XML file.
<b>Edit selected cell</b>	Renames the script. It is also possible by left-clicking the field with the mouse or by pressing <b>F2</b> .
<b>Properties</b>	Opens the <b>Properties</b> window for the selected entry.
<b>Help</b>	Opens online help.

## 4.2 Engineering in the Editor

To configure or edit scripts, click on the Scripts node and select the desired action in the tool bar or in the context menu.



### Information

*When you change the script name, the parameters of the linked functions are changed accordingly. With multi-user projects, functions are changed automatically after requesting confirmation (*Allow changes*). After the name has been changed successfully, the script is changed.*

### CONFIGURING A SCRIPT

To configure a new script:

1. Select **New symbol** in the context menu or in the tool bar.
2. A new script is added to the list.
3. Issue a name or select a pre-defined script (on page 58) from the drop-down list.

4. Add functions and sort them.  
Functions are executed in the sequence of the project configuration.
5. Create a function to start (on page 60) the script in Runtime.

## ADD FUNCTIONS AND PLACE THEM IN SEQUENCE

You can add new functions to a script using a command or add or change the sequence of previously-linked functions by dragging & dropping.

### FUNCTION NEW

To add a function to a script using a command:

1. Select **Add functions** in the context menu or in the tool bar.
2. The dialog to select one or several functions is opened.
3. Select the desired functions and close the dialog by clicking OK
4. The functions are added to the end of the list of pre-existing functions.

### DRAW & DROP ACTIONS

To add a function to a script by dragging & dropping:

1. Select the desired function from the a script.
2. Move the function to the desired position:
  - Within the source script: The sequence of the function is changed.  
*Hint:* If the **Shift** key is held when dragging & dropping, the function is copied.
  - In a different script: The function is copied to the target script.  
If the node of the script is closed, the function is added at the end.  
If the node is opened, the function is inserted at the displayed location.  
*Hint:* If the **Shift** key is held when dragging & dropping, the function is deleted in the source script.

## 4.3 Pre-defined scripts

zenon provides a range of pre-defined scripts. The action of this script in Runtime is pre-defined. The functions to be executed must be configured individually.

Script	Description
AUTOSTART	<p>The start information (e.g. open headings and status lines, reset alarm outputs etc.) is configured in the script.</p> <p>The script will be executed automatically at the start of Runtime when the start screen is called up if the project is the Runtime start project. The script is not executed, if the project is not defined as the start project or if it is a sub-project in a multi-hierarchical network.</p> <p><b>Attention:</b> The start screen must not be executed in the <code>AUTOSTART</code> script because it is defined via the project property <b>Start screen</b>.</p> <p>For switching to a partial screens that belongs to a main screen, such as screen-specific menus etc., a separate script is defined. This ensures that on selection of the screen via the <code>Screen switch</code> function, selection from the screen catalog or the <code>Return to last screen</code> function, all detail screens are always opened with it.</p>
AUTOEND	<p>The defined end functions are configured in the script.</p> <p>The script is executed automatically when Runtime is ended if the project is the Runtime start project. The script is not executed, if the project is not defined as the start project or if it is a sub-project in a multi-hierarchical network.</p> <p><b>Attention:</b></p> <ul style="list-style-type: none"> <li>▶ The VBA Event <code>Project.Inactive</code> is executed by the <code>AUTOEND_xxx</code> script. Therefore the zenon function <code>Execute VBA macro</code> is no longer executed in scripts as VBA is not running at this time. VBA macros which should be carried out in <code>AUTOEND</code> must be called via <code>Project.Inactive</code>.</li> <li>▶ Cyclical archives must not be included in the <code>AUTOEND</code> script.</li> </ul>
AUTOSTART_CLIENT	<p>The start information (e.g. open headings and status lines, reset alarm outputs etc.) is configured in the script. The script will be executed automatically at start of the Runtime on a client and before activation of start display on a client if the project is the Runtime start project.</p>
AUTOEND_CLIENT	<p>The defined end functions are configured in the script.</p> <p>The script will be executed automatically at the end of Runtime on a client if the project is the Runtime start project.</p>
AUTOSTART_SRVPRJ	<p>Script will be executed automatically at the start of Runtime operation on the computer that is the server for the project, before opening the start screen, regardless of whether the project has been defined as the start project or whether it is a sub-project in a multi-hierarchical network.</p>
AUTOEND_SRVPRJ	<p>Script will be executed automatically at the end of Runtime operation on the computer that is the server for the project, regardless of whether the project has been defined as the start project or whether it is a sub-project in a</p>

	multi-hierarchical network.
--	-----------------------------

The following scripts are available for simulation mode; they are executed automatically:

Script	Description
AUTOSTART_SIMUL	If Runtime is started in simulation mode, the script with the name <b>AUTOSTART_SIMUL</b> is executed automatically if it is available.
AUTOEND_SIMUL	If Runtime is ended in simulation mode, the script with the name <b>AUTOEND_SIMUL</b> is executed automatically if it is available.

## 4.4 Executing scripts in Runtime


Scripts can be started in Runtime by means of functions: zenon provides two functions for this:

- ▶ **Script: Execute** Executes a script that was pre-defined in the Editor in Runtime.
- ▶ **Script: Select online** Allows selection of the script to be executed in Runtime.

To configure a function to execute a script:

1. Select the **New function** command in the **Functions** node
2. The dialog to select the function is opened.
3. Navigate to the **Scripts** node.
4. Select the desired function:
  - a) **Execute script**, in order to execute the script selected in this dialog directly
  - b) **Scripts with online selection** in order to make it possible to select the script that is to be executed in Runtime.
5. Confirm the configuration by clicking **OK**.

## SELECT SCRIPT DIALOG

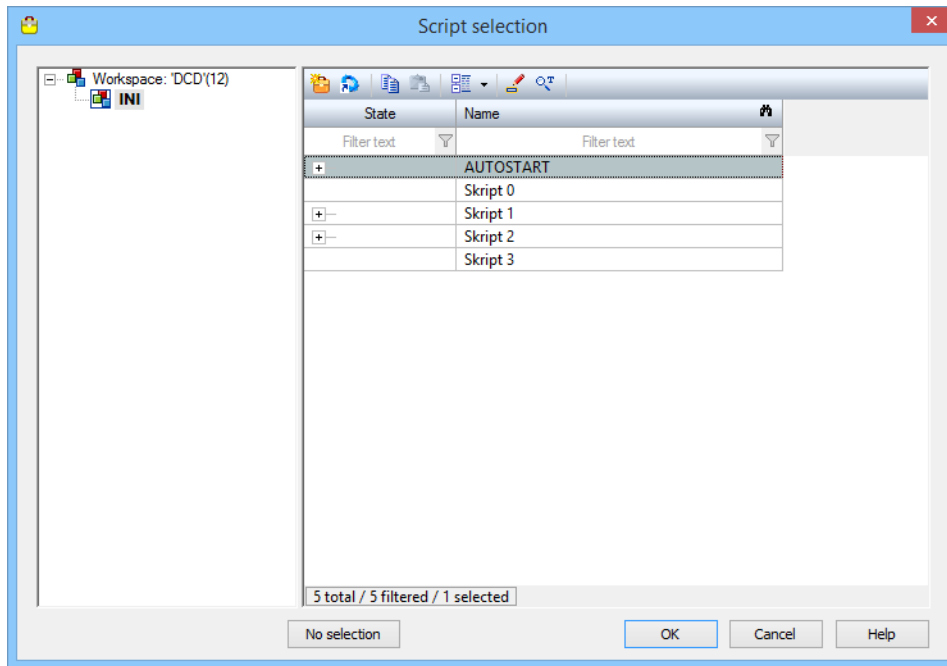

Parameters	Description
List of projects (left)	Selection of the project from which the script is to be selected.  Note: Ensure, when selecting scripts from a different project than the current one, that this project is also available in Runtime.
List of scripts (right)	Selection of the script. Only one script can be linked.  Scripts can be created and edited using the tool bar and context menu. New scripts and changes are saved immediately.  The functions of a script can be rearranged by means of <b>Drag &amp; Drop</b> .
No selection	Removes a pre-existing linking and closes the dialog.
OK	Applies settings and closes the dialog.  With <b>Execute script</b> , the selected script is started in Runtime when this function is executed.  With <b>Script with online selection</b> , this dialog is opened in Runtime when this function is executed.
Cancel	Discards all changes and closes the dialog.
Help	Opens online help.

## TOOLBAR AND CONTEXT MENU



Symbol/Command	Description
<b>Script new</b>	Adds a new script to the list.
<b>Add functions</b>	Opens the dialog for adding functions (on page 57).
<b>Copy</b>	Copies the selected script to the clipboard.
<b>Paste</b>	Pastes script from the clipboard.
<b>Expand/collapse</b>	Allows all or selected nodes to be expanded or collapsed. Selection: <ul style="list-style-type: none"> <li>▶ <b>Expand all</b></li> <li>▶ <b>Collapse all</b></li> <li>▶ <b>Expand selected</b></li> <li>▶ <b>Reduce selected</b></li> </ul>
<b>Edit selected cell</b> (only toolbar)	Renames the script. It is also possible by left-clicking the field with the mouse or by pressing <b>F2</b> .
<b>Replace text in selected column</b> (only toolbar)	Opens the dialog to search and replace texts in the currently-selected column.

## SCRIPTS IN THE NETWORK

With an active network, it is possible to use the properties in the **Execution** group to define the computer on which the script is executed.



### Information

*Take care of the priorities of the script execution in the network (on page 63)*

## 4.5 Priorities in the network

At active network you define via property node **Execution** for scripts where the script is executed:

- ▶ Current computer
- ▶ Client
- ▶ Server
- ▶ Standby

This execution location is true for functions contained in the script. Function which had a different execution location assigned, take over the execution location defined here.

**EXAMPLE 1: CURRENT COMPUTER**

- ▶ Function 1 was defined with execution location `Server`.
- ▶ Function 2 was defined with execution location `Client`.
- ▶ For function `Execute script` the `current computer` was defined.
- ▶ Consequence: Both functions are carried out on the same computer; the computer in which function `Execute scripts` is executed. This can be a Client, a Server or a Standby.

**EXAMPLE 2: CLIENT VERSUS SERVER**

- ▶ The script contains 2 functions with execution location `Client`.
- ▶ For function `Execute script` `Server` was defined.
- ▶ Consequence: Both scripts are executed on the Server no matter on which computer `Execute script` was started.

**EXAMPLE 3: DRIVER COMMANDS:**

Driver commands are executed on the Server and the Standby per default. If a script with driver commands is started on the Client, then:

- ▶ the function driver command is started on the Client
- ▶ the driver is stopped after the execution of the script on the Server

## 5. Select Functions and scripts dialog

Individual functions and scripts can be configured for many functions in dialogs, properties and dynamic elements by means of a specific dialog. Several functions are configured in their own dialogs.

The dialog to select functions and scripts is called up for:

- ▶ Archive configuration / tab for Runtime: Execute function for archive start or archive end
- ▶ Combo box/list box: each element that has its own functions
- ▶ Dialogs: all properties with functions
- ▶ Dynamic elements: all properties with functions and double click on a dynamic element
- ▶ Reaction matrices: Function
- ▶ Replace links: Replace function dialog
- ▶ WPF: Event properties



The dialog offers the possibility to select functions and to configure scripts:

- ▶ **Functions selection** (on page 65): Selection of a function or creation of a new function
- ▶ **Script selection** (on page 66): Selection of a script or creation of a new script as well as assignment of a function **Script: execute**


## 5.1 Functions selection

Selection and configuration of functions that are to be linked.

To select a function:

1. Select the project that contains the function.  
**Note:** If a different project than the current one is selected, ensure that the project is available in Runtime.
2. Select the desired function.  
 If necessary, it is possible to use the tool bar or context menu to create new functions or copy existing functions.
3. Confirm the selection by clicking **OK**.

### FUNCTION SELECTION DIALOG

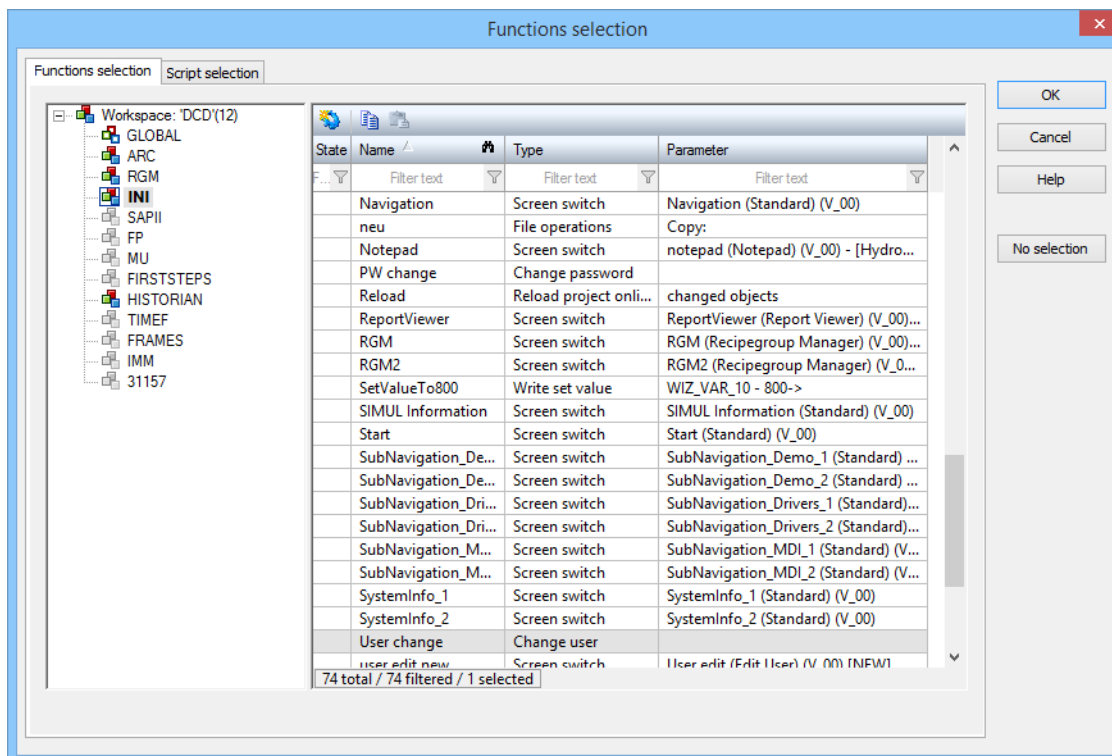

Parameters	Description
List of projects (left)	Selection of the project from which the function is to be selected.  Note: Ensure, when selecting functions from a different project than the current one, that this project is also available in Runtime.
List of functions (right)	Selection of the function. Only one function can be linked. If more than one function is selected, then the function that was selected last was linked.  Functions can be created and edited using the tool bar and context menu. New functions and changes are saved immediately.
OK	Applies the selected function and closes the dialog.
Cancel	Closes the dialog without linking a function.
Help	Opens help
No selection	Removes a pre-existing linking and closes the dialog.

#### TOOLBAR AND CONTEXT MENU

Symbol/Command	Description
Function new	Adds a new function to the list.
Copy	Copies the selected function to the clipboard.
Paste	Pastes a function from the clipboard.

## 5.2 Script selection

Selection and configuration of scripts that are to be linked, as well as assignment of the **Script: execute** function.

To select a script:


1. Select the project that contains the script.

Note: If a different project than the current one is selected, ensure that the project is available in Runtime.

2. Select the desired script.

3. Edit the script if required.  
You can use the commands of the context menu or tool bar to create new scripts, add functions and copy or rename scripts.
4. Confirm the selection by clicking **OK**.

## SCRIPT SELECTION DIALOG

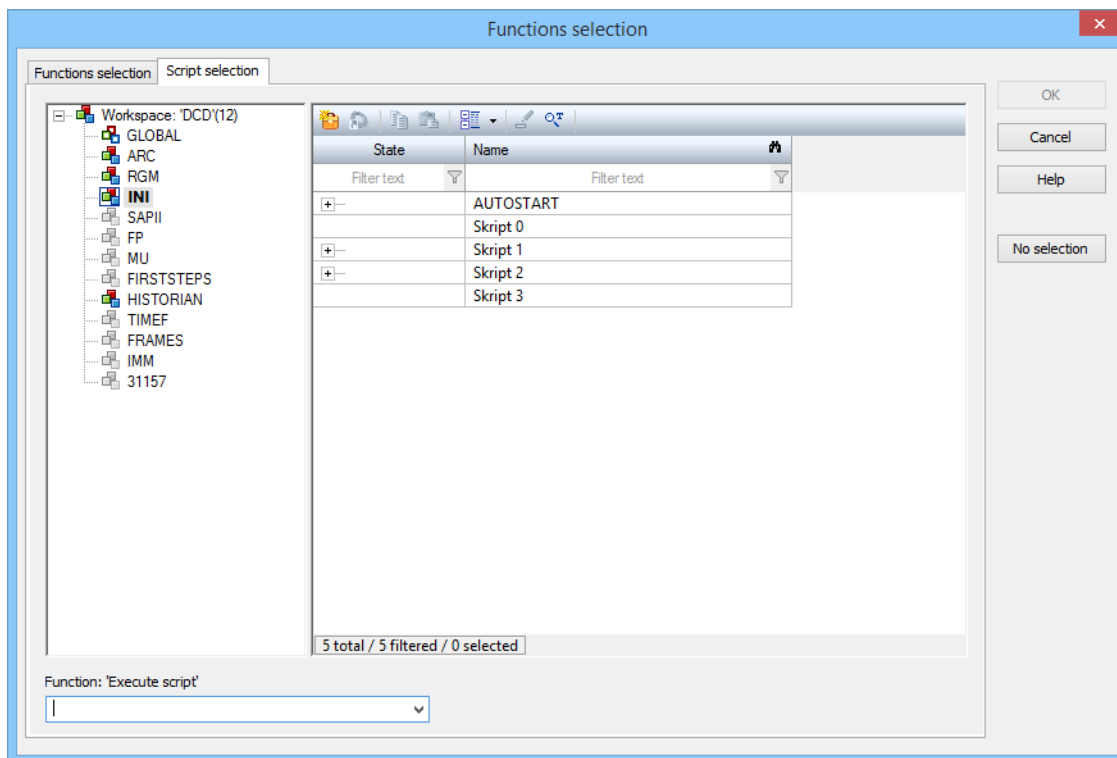

Parameters	Description
List of projects (left)	Selection of the project from which the script is to be selected.  Note: Ensure, when selecting scripts from a different project than the current one, that this project is also available in Runtime.
List of scripts (right)	Selection of the script. Only one script can be linked.  Scripts can be created and edited using the tool bar and context menu. New scripts and changes are saved immediately.  The functions of a script can be rearranged by means of <b>Drag &amp; Drop</b> .
Function: Script: execute	Selection of the function that is to execute the selected script from a combo box.  The combo box contains, in a drop-down list, all functions that have already been defined that can execute the selected script. The name for a new function to execute the script can be entered in the input field.
OK	Accepts the selected or newly-issued name for the <b>Script: execute</b> function, links the selected script and closes the dialog.
Cancel	Closes the dialog without linking a script.
Help	Opens help
No selection	Removes a pre-existing linking and closes the dialog.

## TOOLBAR AND CONTEXT MENU



Symbol/Command	Description
<b>Script new</b>	Adds a new script to the list.
<b>Add functions</b>	Opens the dialog for adding functions (on page 57).
<b>Copy</b>	Copies the selected script to the clipboard.
<b>Paste</b>	Pastes script from the clipboard.
<b>Expand/collapse</b>	Allows all or selected nodes to be expanded or collapsed. Selection: <ul style="list-style-type: none"> <li>▸ <b>Expand all</b></li> <li>▸ <b>Collapse all</b></li> <li>▸ <b>Expand selected</b></li> <li>▸ <b>Reduce selected</b></li> </ul>
<b>Edit selected cell</b> (only toolbar)	Renames the script. It is also possible by left-clicking the field with the mouse or by pressing <b>F2</b> .
<b>Replace text in selected column</b> (only toolbar)	Opens the dialog to search and replace texts in the currently-selected column.