



zenon
by COPA-DATA



The background features a series of overlapping, 3D-rendered rectangular blocks in various shades of blue and orange, creating a sense of depth and perspective against a white and dark blue gradient.

Manuel de zenon HTML Web Engine

v.8.10



© 2019 Ing. Punzenberger COPA-DATA GmbH

Tous droits réservés.

La distribution et/ou reproduction de ce document ou partie de ce document, sous n'importe quelle forme, n'est autorisée qu'avec la permission écrite de la société COPA-DATA. Les données techniques incluses ne sont fournies qu'à titre d'information et ne présentent aucun caractère légal. Document sujet aux changements, techniques ou autres.

Contenu

1 Bienvenue dans l'aide de COPA-DATA.....	5
2 HTML Web Engine	6
3 Required components and their definitions	9
4 Basic system construction of the HTML Web Engine	10
5 System requirements.....	13
6 Licensing	15
7 Installation	16
7.1 Installation du service de publication IIS.....	16
7.1.1 .NET registration on IIS under Windows 7	22
8 SCADA Runtime Connector	23
9 Client authentication for a connection to Runtime.....	24
10 Deployment of the Web Engine	25
10.1 zenon Web Engine Deployment Tool	25
10.1.1 General settings for the Web Engine.....	27
10.1.2 Security settings	30
10.1.3 Validation of the settings	32
10.1.4 Progress.....	34
11 Engineering in the Editor	34
11.1 Create, amend and call up an HTML screen	35
11.1.1 Options for opening external web pages	38
11.2 Example: Simple start screen	39
11.3 Supported functionalities for HTML visualization.....	40
11.3.1 AML and CEL.....	41
11.3.2 Synoptiques, cadres, éléments et symboles	47
11.3.3 Functions.....	57
11.3.4 Play audio signal or continuous tone	59
11.3.5 Variables.....	60
12 Compiler le projet pour le Web.....	62

13 Traitement d'une session HTML Web Engine.....	64
14 System diagnosis and troubleshooting.....	64

1 Bienvenue dans l'aide de COPA-DATA

TUTORIELS VIDÉO DE ZENON.

Des exemples concrets de configurations de projets dans zenon sont disponibles sur notre chaîne YouTube (https://www.copadata.com/tutorial_menu). Les tutoriels sont regroupés par sujet et proposent un aperçu de l'utilisation des différents modules de zenon. Les tutoriels sont disponibles en anglais.

AIDE GÉNÉRALE

Si vous ne trouvez pas certaines informations dans ce chapitre de l'aide ou si vous souhaitez nous suggérer d'intégrer un complément d'information, veuillez nous contacter par e-mail : documentation@copadata.com.

ASSISTANCE PROJET

Si vous avez besoin d'aide dans le cadre d'un projet, n'hésitez pas à adresser un e-mail à notre service d'assistance : support@copadata.com

LICENCES ET MODULES

Si vous vous rendez compte que vous avez besoin de licences ou de modules supplémentaires, veuillez contacter l'équipe commerciale par e-mail : E-mail sales@copadata.com.

2 HTML Web Engine

The **HTML Web Engine** is for the provision of zenon screens as a HTML5 web page. The user interface is called up and displayed on the visualization end device using a web browser. No special software installation - or any browser plug-ins - are required on the end device. Process data for the visualization is taken from zenon Runtime.



Alarm Message List

Alarms MUC

Alarms CGN

Alarms SBG

	Time received	Time cleared	Time acknowledged
	01.06.2016 13:16:42	01.06.2016 13:16:43	
	01.06.2016 13:16:46	01.06.2016 13:16:48	
	01.06.2016 13:16:51	01.06.2016 13:16:54	
	01.06.2016 13:16:56	01.06.2016 13:16:58	
	01.06.2016 13:17:01	01.06.2016 13:17:03	
	01.06.2016 13:17:06	01.06.2016 13:17:08	
	01.06.2016 13:17:08	01.06.2016 13:17:08	
	01.06.2016 13:17:08	01.06.2016 13:17:08	
	01.06.2016 13:17:08	01.06.2016 13:17:08	
	01.06.2016 13:17:09	01.06.2016 13:19:54	
	01.06.2016 13:17:09	01.06.2016 13:19:54	
	01.06.2016 13:17:09	01.06.2016 13:19:54	

FUNCTIONALITIES OF THE HTML WEB ENGINE

Overview of the functions of the HTML web engine:

- ▶ Session-based provision of HTML5 visualization content on HTML web clients.
- ▶ Display of basic visualization content that was created in the zenon Editor.
- ▶ Data view:
 - ▶ Variable values
Displays are updated dynamically in the HTML Web Engine.
 - ▶ Chronological Event List (CEL)
Entries in the CEL are updated dynamically in the HTML Web Engine.
 - ▶ Extended Trend (ETM)
The display in the ETM is not updated dynamically in the HTML Web Engine. This means that the ETM only draws with existing data when called up and is then no longer updated.
 - ▶ Messages from the Alarm Message List (AML)
Entries in the AML are updated dynamically in the HTML Web Engine.
- ▶ Forwarding of process information, such as variable values, alarm messages or event messages from a zenon Runtime to one or more HTML web clients.
- ▶ Support of active operations, such as write set value.
- ▶ Mobile, location-independent operation and observation.
- ▶ No installation and/or configuration on the end device, i.e. the client is necessary.
Platform-independent display in HTML5 standard.
- ▶ Operation of the HTML web server on a different computer, such as is possible in a DMZ for example.
- ▶ Secure network communication via HTTPS, based on SSL certificates.
- ▶ Protection of sensitive visualization areas or processes by means of user authentication and support of user levels.
- ▶ Access information from the **Service Grid**.

The HTML Web Engine supports the authentication of a Web Engine client with increased security in relation to the zenon user authentication and active directory. Login is via entry of the user name and password.

REGIONAL SETTINGS

The HTML Web Engine supports most common languages, settings, number formats and date formats.

3 Required components and their definitions

Components	Description
zenon Runtime	The process data for the HTML5 visualization is provided by a zenon Runtime (server or client).
HTML Web Engine (à la page 6)	<p>The HTML Web Engine is for the provision of process screens as an HTML5 web page. The user interface is called up and displayed on the visualization end device using a web browser. Neither special software installation nor a software plug-in are required on the end device. Process data for the visualization is taken from zenon Runtime.</p> <p>Note: The HTML Web Engine processes process data for the purpose of visualization and operation by the HTML web client. The process data is only administered by zenon Runtime.</p>
IIS (à la page 16) Publishing Service	Services platform of Microsoft for PCs and servers. It can be used to make documents and files accessible in the network. The HTML Web Engine uses IIS as a runtime environment and for the publishing of zenon process screens. HTTPS is used as a communication protocol. Deployment (à la page 25) is used to instance the HTML Web Engine on the IIS.
Web browser	Web browsers are special computer programs for the display of documents and data, especially web sites in the World Wide Web.
zenon Web Engine Deployment Tool (à la page 25)	Provides the HTML Web Engine as a web application in IIS and allows the configuration thereof. An existing HTML Web Engine instance can also be updated or deleted.
Web engine compiler	Generates, from a zenon project, the data that the HTML Web Engine needs to provide HTML5 content for the zenon Web Client. When translating this project data, the HTML Web Engine compiler checks the project contents and provides information on non-supported functions or properties. As a result of the translation process, a file is created that is provided to the Web Engine.

Components	Description
SCADA Runtime Connector (à la page 23)	<p>Serves as a communication interface to zenon Runtime.</p> <p>You can find the SCADA Runtime Connector in the following path:</p> <pre>%programfiles(x86)%\Common Files\COPA-DATA\Connectors\zrsConnector.exe</pre> <p>If the web deployment tool is used, the SCADA Runtime connector must be executed, because its status is checked when used.</p> <p>The Connector Container can be started automatically using the Startup Tool if a user logs on to the system.</p>

4 Basic system construction of the HTML Web Engine

The HTML Web Engine is a web application that provides an HTML5 web page.

Attention

Recommendations:

- ▶ Always operate the whole system configuration in a trusted network area.
- ▶ Never publish the HTML5 web site in the Internet directly.

In the course of a session, a distinction between two different connection levels is made:

1. Display of visualization pages without process data
2. Display of the visualization pages and display of process data

DISPLAY OF VISUALIZATION PAGES WITHOUT PROCESS DATA

The zenon Web Client connects itself to the HTML Web Engine by calling up the URL (Uniform Ressource Locator) for the HTML5 web page. Once the session has been set up successfully, the project can be visualized without access to process data of zenon Runtime.

DISPLAY OF THE VISUALIZATION PAGES AND DISPLAY OF PROCESS DATA


The HTML Web Engine connects itself to zenon Runtime via the SCADA Runtime Connector. This connection is only approved if user authentication on the basis of a user name and password has been carried out successfully. Authentication is carried out by means of external authentication to the user administration of zenon Runtime. The transfer of user information can be either manual by the zenon Web Client operator or automatic by the Web Engine.

No special tools are required to configure the HTML5 visualization. The screens and functions are created in the zenon Editor by default.

You can find a list of the supported elements, properties and functions in the **Supported functionalities for HTML visualization** (à la page 40) chapter.

ACCESS TO HTML5 VISUALIZATION FROM AN END DEVICE

This is how you use an HTML5-compatible web browser to access the HTML5 visualization from a visualization end device:

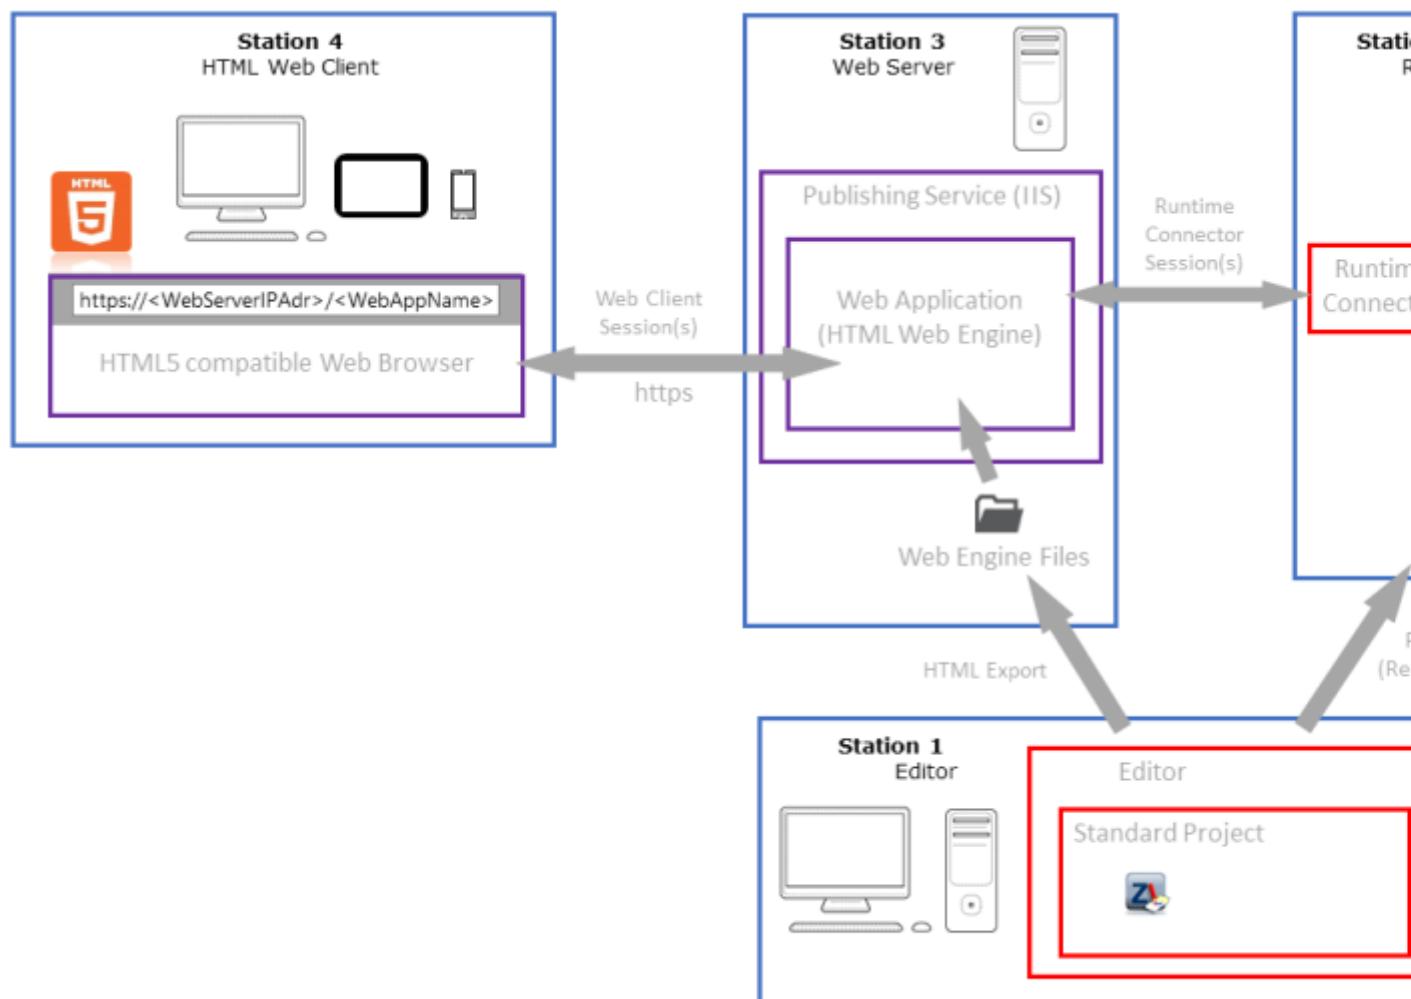

Note: The breakdown of the components is only for simple display. The complete configuration shown here can be operated in a network or also on any one of the individual computers in any desired distribution of the components.


Procedure:

1. The operator on Station 4 connects with a standard web browser by entering the web page URL to the web server on Station 3.
As a result, it gets the visualization pages there from the Web Engine.
2. Process data is only displayed in the HTML5 visualization after successful user authorization.
After a check of the user name and password has been carried out, the connection to zenon Runtime is established (to Station 2 in the example).
3. The interface between zenon Runtime and Web Engine is formed by the **SCADA Runtime Connector**.
The SCADA Runtime Connector must be started on the computer the zenon Runtime is running.
4. The configuration of the HTML5 visualization is derived from a zenon Editor project (on Station 1 in this case).
The project states on Station 2 (zenon Runtime) and Station 3 (Web Engine) should be identical for this.
With the **Web Engine Compiler**, the project data is translated for use by the HTML Web Engine. The necessary steps for the installation of the HTML Web Engine on Station 3 and the deployment on the Internet Information Server are described in the Deployment of the web engine (à la page 25) chapter.
The file from the **Web Engine Compiler** is saved in a freely-definable folder. It is read by the HTML Web Engine from here.

Note: Provide, for the connection of HTML5 visualization, a dedicated zenon Runtime, in order to guarantee smooth interaction for process-related procedures. After changes are made in the zenon project, carry out the compiling process again.

RELEASE SCREENS

Certain screens from the active project can be called up in a web browser by means of the HTML Web Engine. You determine the screens that are unlocked for display in the web browser for each screen using the **Disponible sur le Web** property.

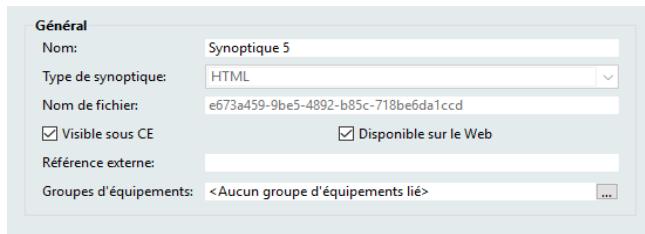

All screens for which this property has been activated are compiled with the **Web Engine Compiler** for the Web Engine and are primarily available for provision in the web browser on the client. Screens that have not been activated for this property can be used for the zenon Runtime visualization, but are not available in the web browser.

The following screen types can be used for visualization in the web:

- ▶ *AML*
- ▶ *CEL*
- ▶ *ETM*
- ▶ *Login*
- ▶ *HTML*
- ▶ *Standard*

5 System requirements

WEB SERVER

The HTML Web Engine supports the following operating systems:

Supported desktop operating systems and required service packs:

Operating system	Service packs
Windows 7 (Professional, Enterprise and Ultimate version, x86 and x64 versions).	SP 1
Windows Embedded Standard 7 (if all necessary operating system components exist).	SP 1
Windows 8 and 8.1 (Standard, Professional, Enterprise version, x86 and x64 versions)	SP 0
Windows Embedded 8 Standard (if all necessary operating system components exist).	SP 0
Windows 10 (Home, Pro, Enterprise, Education, Pro Education, Enterprise LTSB, IoT Enterprise, Pro for Workstations)	SP 0

Supported server operating systems and required service packs:

Server operating system	Service Packs
Windows Server 2008 R2 (All editions with the exception of Core)	SP 1
Windows Server 2012 and 2012 R2 (All editions with the exception of Core)	SP 0
Windows Server 2016 (All editions with the exception of Core)	SP 0

Note: For operation of the HTML Web Engine, the .NET Framework 4.5 or higher is required.



Information

Note the limitation of the number of simultaneous client connections by the Microsoft IIS.

Note: When using Windows Server operating systems, the number of simultaneous client connections is not limited by the Microsoft IIS. When using Windows desktop operating systems, this number varies depending on the version of the installed operating system.

WEB CLIENT

No special installation is required for the HTML Web Client. It generally works with any web browser that supports the following technologies:

- ▶ HTML5
- ▶ HTML5 Canvas
- ▶ JavaScript (ECMAScript 5.1)

HTML5 content is processed in the web browser regardless of the operating system. Use of a current version of one of the following web browsers is recommended:

- ▶ Windows Internet Explorer from version 11
- ▶ Microsoft Edge
- ▶ Mozilla Firefox
- ▶ Apple Safari
Exception: Does not support playback of audio files.
- ▶ Google Chrome

Note: JavaScript must be activated in the web browser.

CLIENT-SERVER CONNECTIONS

There must be a sufficient data rate available for the connection between web server and HTML client. With a data rate that is too low, corresponding messages are displayed on the HTML web client. A data rate that is too low can lead to a session not taking place or having to be canceled.

Note: When using Windows Server operating systems, the number of simultaneous client connections is not limited by the Microsoft IIS. When using Windows desktop operating systems, the possible number of simultaneous connections depend on the version the installed operating system.

6 Licensing

The HTML Web Engine must be licensed for each instance. **Licensing** is carried out using the **Gestion des licences**. If there is no license, the HTML Web Engine is started in a time-limited demo mode.

The following expansions are available for the HTML web engine:

- ▶ *Standard*: Only read access to the visualization. The **HTML Web Client** can be used as an observer.
- ▶ *Pro*: Full access to the visualization, read and write.



Information

Note the limitation of the number of simultaneous client connections by the Microsoft IIS.

Note: When using Windows Server operating systems, the number of simultaneous client connections is not limited by the Microsoft IIS. When using Windows desktop operating systems, this number varies depending on the version of the installed operating system.

Differences between the HTML web engine and zenon Web Server:

- ▶ The license check is carried out on the basis of instances. Each project corresponds to an instance.
- ▶ If a license is invalid, a further license is first searched for. If none is found, a further license can be searched for using the license search button.
- ▶ If demo licenses expire, the service must be restarted in order to be able to use the demo mode. The demo mode is only available if a demo license has been saved.

7 Installation

You need the following installations to operate the HTML Web Engine:

Web Server:

- ▶ IIS publishing service:

Set up the publishing service in accordance with the instructions in the Install IIS publishing service (à la page 16) chapter.

- ▶ zenon Web Server.

Install zenon Web Server from the installation medium.

Microsoft Web Deploy It also automatically installed during setup.

Project configuration and runtime application:

- ▶ zenon (Editor and Runtime).

Note: No special installation is required for the HTML Web Client.

7.1 Installation du service de publication IIS


Le service Internet information Services (IIS) est dédié à la publication de documents, tels que des pages HTML, à l'aide du protocole HTTP. Pour les systèmes d'exploitation indiqués au chapitre Configuration système requise (à la page 13), le service de publication IIS est déjà inclus dans l'installation standard. Celui-ci doit uniquement être activé par le biais des fonctionnalités de Windows.

IIS 7, WINDOWS 7

Pour activer IIS Publishing Service :

1. Appuyez sur les touches **Windows + R**

La boîte de dialogue de saisie d'une commande pour la gestion des commandes s'affiche.

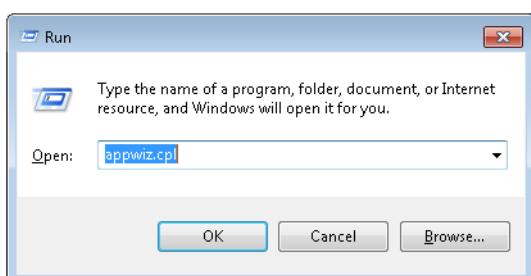


2. Saisissez *appwiz.cpl* dans le champ de saisie.

Cliquez sur **OK**.

Un nouveau panneau de configuration des **programmes et fonctionnalités de Windows** s'affiche.

3. Dans cette fenêtre, cliquez sur **Activer ou désactiver des fonctionnalités Windows**.

La fenêtre de sélection des fonctions du système d'exploitation s'affiche.

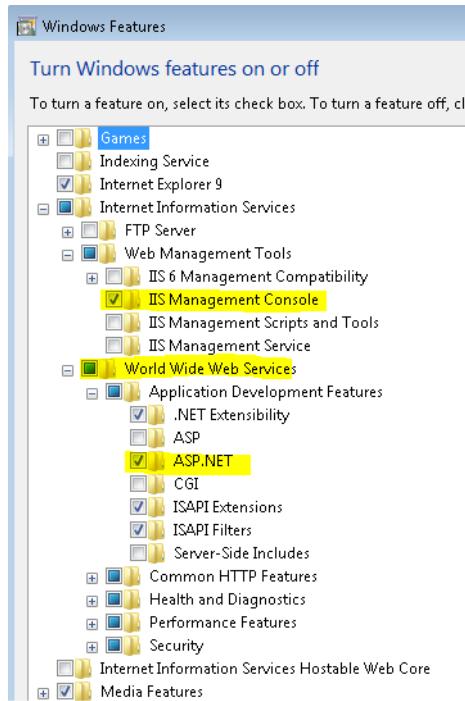

4. Développez la section **Internet Information Services** de ce nœud.
5. Activez l'option *Service WWW*.
Les paramètres par défaut sont alors définis dans tous les sous-dossiers de la propriété.
6. Développez le nœud **Fonctionnalités de développement d'applications**.
7. Activez l'option **ASP.NET**.
8. Développez le nœud **Outils d'administration Web**.
9. Ensuite, activez la **console d'administration IIS**.
10. Cliquez sur **OK**.


Remarque : Dans le cas d'une installation ou mise à niveau ultérieure de .NET Framework sous Windows 7, ce logiciel doit être enregistré manuellement dans le service de publication IIS. Pour plus de détails, reportez-vous au chapitre **Enregistrement de .NET dans IIS sous Windows 7** (à la page 22).

IIS 8, WINDOWS 8/8.1

Pour activer IIS Publishing Service :

1. Appuyez sur les touches **Windows + R**

La boîte de dialogue de saisie d'une commande pour la gestion des commandes s'affiche.

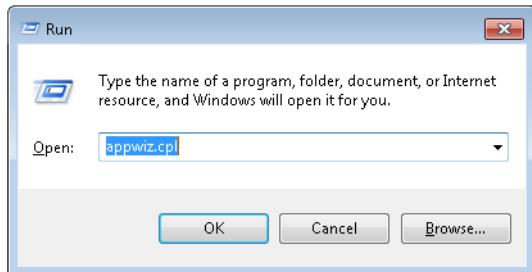


2. Saisissez *appwiz.cpl* dans le champ de saisie.

Cliquez sur **OK**.

Un nouveau panneau de configuration des **programmes et fonctionnalités de Windows** s'affiche.

3. Dans cette fenêtre, cliquez sur **Activer ou désactiver des fonctionnalités Windows**.

La fenêtre de sélection des fonctions du système d'exploitation s'affiche.

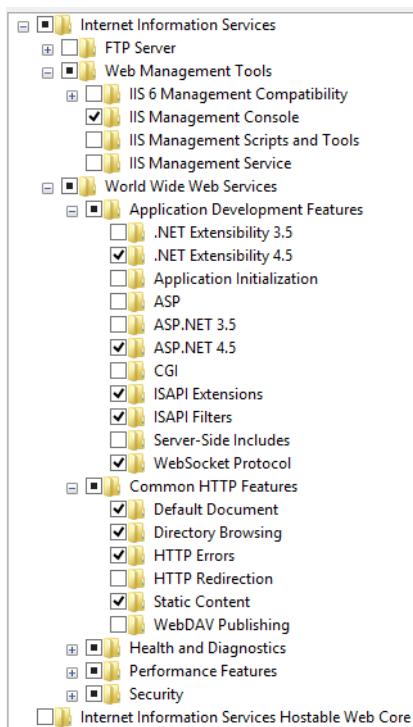

4. Développez la section **Internet Information Services** de ce nœud.
5. Activez l'ensemble des *Services World Wide Web*.
6. Développez le nœud **Fonctionnalités de développement d'applications**.
7. Activez *ASP.NET 4.5*.
8. Développez le nœud **Fonctionnalités HTTP communes**.
9. Ensuite, activez l'option *Contenu statique*.


10. Développez le nœud **Outils d'administration Web**.
11. Ensuite, activez la *console d'administration IIS*.
12. Développez le nœud **Fonctionnalités de développement d'applications**.
13. Activez l'option *Protocole WebSocket*.
14. Cliquez sur **OK**.

WINDOWS 10

Pour activer IIS Publishing Service :

1. Appuyez sur les touches **Windows + R**

La boîte de dialogue de saisie d'une commande pour la gestion des commandes s'affiche.

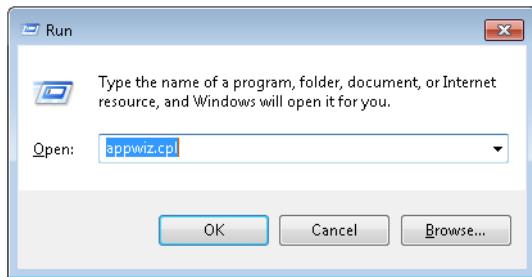


2. Saisissez *appwiz.cpl* dans le champ de saisie.

Cliquez sur **OK**.

Un nouveau panneau de configuration des **programmes et fonctionnalités de Windows** s'affiche.

3. Dans cette fenêtre, cliquez sur **Activer ou désactiver des fonctionnalités Windows**.

La fenêtre de sélection des fonctions du système d'exploitation s'affiche.

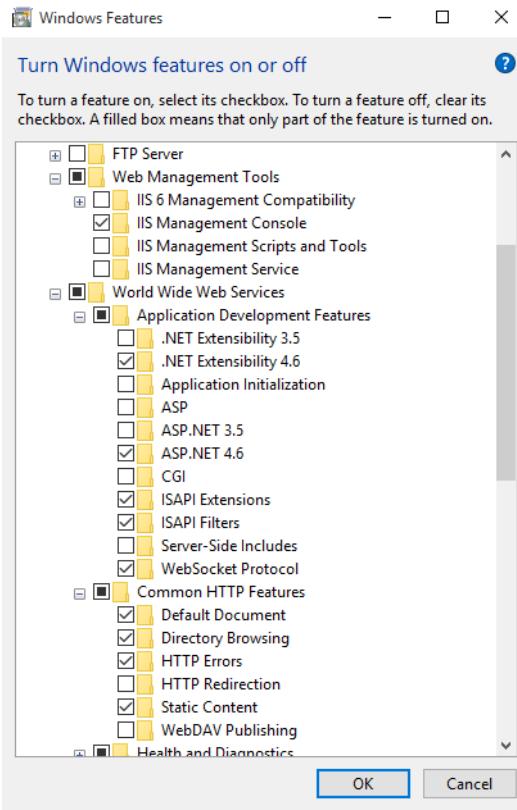

4. Développez la section **Internet Information Services** de ce noeud.
5. Activez l'ensemble des *Services World Wide Web*.
6. Développez le noeud **Fonctionnalités de développement d'applications**.
7. Activez *ASP.NET 4.7*.
8. Développez le noeud **Fonctionnalités HTTP communes**.
9. Ensuite, activez l'option *Contenu statique*.
10. Développez le noeud **Outils d'administration Web**.
11. Ensuite, activez la *console d'administration IIS*.
12. Développez le noeud **Fonctionnalités de développement d'applications**.
13. Activez l'option *Protocole WebSocket*.
14. Cliquez sur **OK**.


WINDOWS SERVER 2008 R2

Suivez les instructions fournies par Microsoft : <https://technet.microsoft.com/en-us/library/cc771209.aspx>

1. Ouvrez l'assistant **Ajouter des rôles**.

2. Activez le rôle Web Server (IIS).

L'assistant **Ajouter des rôles** s'affiche.

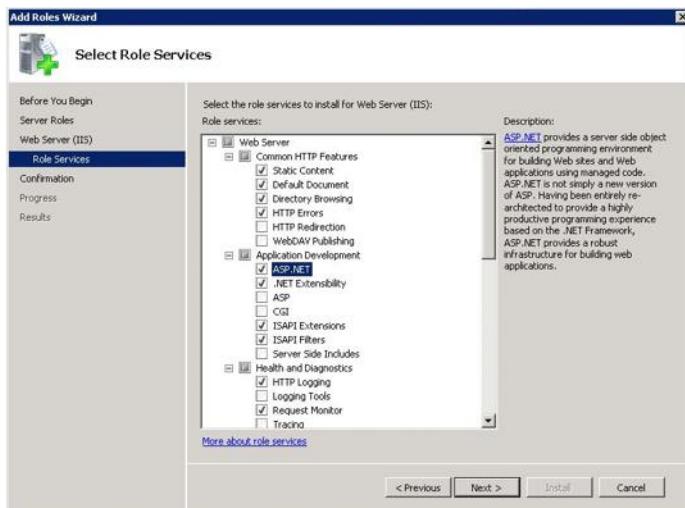

3. Cliquez sur **Services de rôle**.
4. Développez le nœud **Fonctionnalités de développement d'applications**.
5. Activez les services de rôle suivants :
 - ▶ ASP.NET
 - ▶ .NET Framework
 - ▶ Extensions ISAPI
 - ▶ Filtre ISAPI


Attention : Ne désactivez aucun service de rôle présélectionné par Microsoft.

Remarque : L'utilisation de Windows Server 2012 est recommandé, car Windows Server 2008 R2 ne prend pas en charge les protocoles WebSocket.

WINDOWS SERVER 2012 (R2)

Suivez les instructions fournies par Microsoft :
<https://technet.microsoft.com/en-us/library/hh831475.aspx>

- Ouvrez l'assistant **Ajouter des rôles et fonctionnalités**.

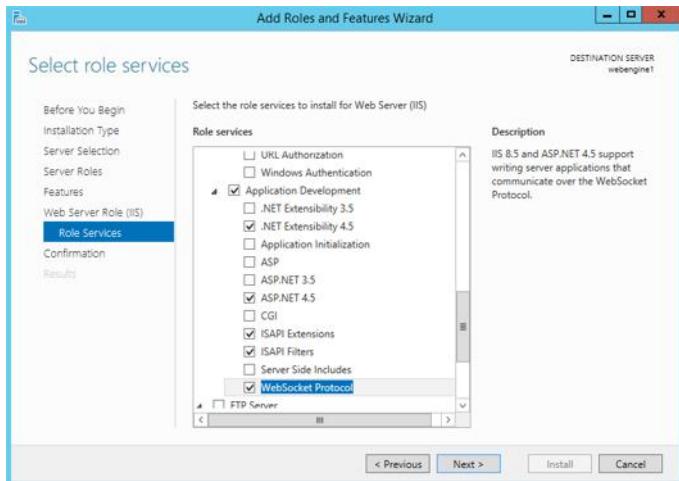

- Développez le nœud **Développement d'applications**.

- Activez les services de rôle suivants :


- ▶ .NET Framework 4.5
- ▶ ASP.NET 4.5
- ▶ Extensions ISAPI
- ▶ Filtre ISAPI
- ▶ Protocole WebSocket

7.1.1 .NET registration on IIS under Windows 7

In the event of a subsequent installation or upgrade of the .NET framework under Windows 7, it is necessary to register with the IIS publishing service.

To do this:


- Open the Windows command prompt with the *as administrator* option.
- Switch to the Microsoft.NET installation directory with the highest version number.
- Enter command **aspnet_regiis -i**.

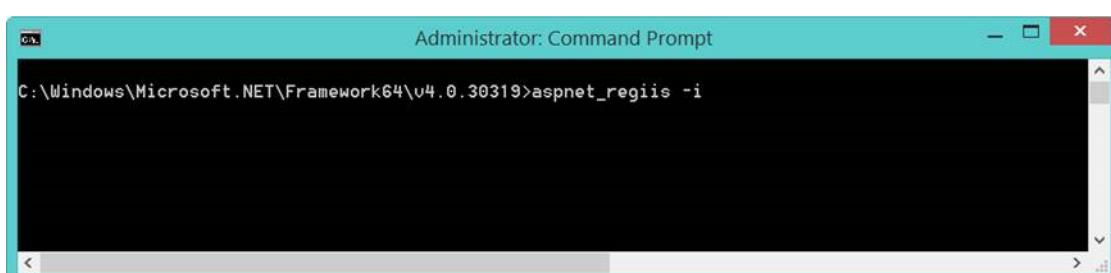

After successful registration, the current Microsoft .NET framework version is available for use with IIS.

4. Ensure that the Application Pool on the IIS in which the HTML Web Engine is operated uses the current .NET version.

This can be checked and set with the Information Services Manager:

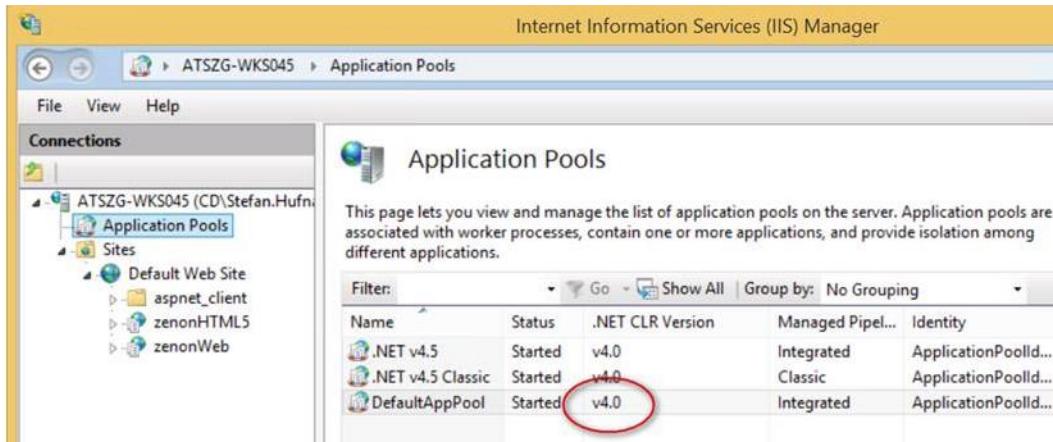

8 SCADA Runtime Connector

The **SCADA Runtime Connector** must also be started on zenon Runtime, as soon as interaction with the HTML Web Engine is required. The **SCADA Runtime Connector** is also installed when zenon Runtime is installed. The interaction starts with the user authentication for the first HTML web client.

The SCADA Runtime Connector can be started manually or automatically:

- ▶ Manually:
 - ▶ Start the application in the **Startup Tool** under **Tools**. Select, under **Available applications (current folder)**, the **SCADA Runtime Connector** entry. Confirm the selection by clicking on **Start**.
 - ▶ Start the application directly from the folder `%programfiles(x86)%\Common Files\COPA-DATA\Connectors\zrsConnector.exe`
- ▶ Automatic:
 - ▶ Activate Autostart for the Connector Container in the **Startup Tool**.

For each HTML Web Engine session, a separate **SCADA Runtime Connector** session is set up.

The following are transferred in this session:

- ▶ Variables:
 - ▶ Screen variables that are needed for the current screen display on the HTML client:
For example, variables for displaying variable values or element dynamics. Variables can be registered and deregistered for a session. Once the user has been authenticated successfully for an HTML web client, the HTML Web Engine reports a list of variables for communication and spontaneous updating by means of the SCADA Runtime Connector.

The HTML Web Engine can thus forward value changes to the web clients that are currently connected.

- ▶ **Variables continuellement surveillées**, which remain permanently advised (à la page 60) and are required to execute a function in the event of a limit value violation.
- ▶ Write set value via the SCADA Runtime Connector:
To increase security before a value change, an explicit check of the authenticity is carried out with zenon Runtime on the basis of the user data of the **HTML Web Client**. A block or removal of users by zenon Runtime becomes effective for the writing of set values immediately.

ENCRYPTED COMMUNICATION

The TCP connection between **SCADA Runtime Connector (zrsConnector.exe)** and **SCADA Runtime Connector Client (zrsConnCli.dll)** can be encrypted with AES.

To use the encrypted communication, issue an encryption password for Runtime and Client.
To do this:

1. In the zenon Startup Tool, enter the password in the **Network configuration** tab.
This is also saved in zenon6.ini in encrypted form.
Section: **[ZRSCONNECTOR]**
Entry: **ENCRYPTION_PWD**
2. In the **Deployment Tool** of the **HTML Web Engine**, in the **Security options** window, set the same password in the **Security options** (à la page 30) tab. This is saved in encrypted form in **web.config** in the **Encryption_Password** setting.

If, during validation, the **SCADA Runtime Connector** can be reached on the set target computer but the encryption password does not correspond, the connector test times out. You receive notification that the password set may be incorrect.

9 Client authentication for a connection to Runtime

Runtime data from zenon Runtime, such as variable values for display or for display dynamics, are only provided if the HTML client can authenticate itself to zenon Runtime. This can happen in two ways by means of user name and password:

- ▶ Automatic login by configuring a user as part of deployment.
For more details, see the Deployment of the Web Engine (à la page 25) chapter.
- ▶ Manual login by the zenon Web Client in a *login* screen.
For details, see the Create *login* screen chapter.

Note: Authentication can be carried out by transferring the login data (user name and password) for a zenon user or an Active Directory user. The user data is validated by zenon Runtime.

10 Deployment of the Web Engine

The **zenon Web Engine Deployment Tool** offers important operations for the management of the web engine as a web application in the Internet Information Services (IIS).

To start the **Deployment Tool**:

1. Open the zenon **Startup Tool**.
2. click on the **Tools** button.
3. Under **Available applications**, select the *Web Engine Deployment Tool*.
4. Click **Start**.

The tool is started


 **Information**

Note: The **Deployment Tool** is automatically installed with the zenon Web Server. Administrator rights are required for the use of this tool.

The **Deployment Tool** is only available in English.

10.1 zenon Web Engine Deployment Tool


HTML web engine instances are administered on the IIS with the **zenon Web Engine Deployment Tool**. You can create new instances and amend or remove existing ones.

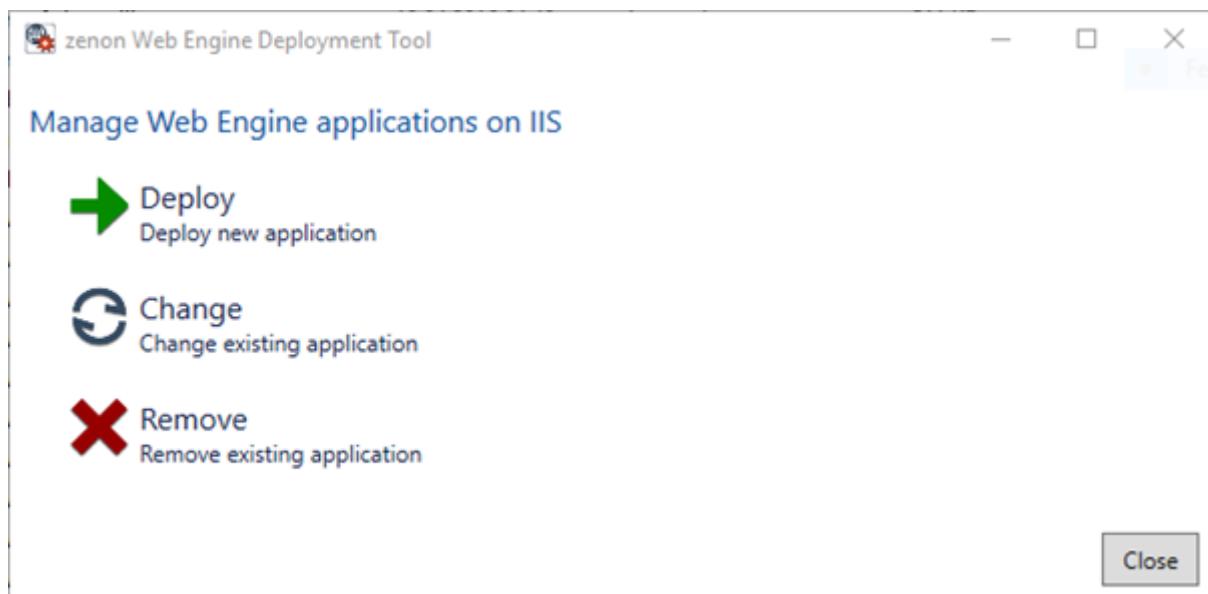

Option	Description
Deploy	<p>Provides a new instance of the HTML Web Engine on the IIS.</p> <p>The necessary options are configured in the following tabs.</p>
Change	<p>Updates existing Web Engine Applications.</p> <p>The following can be amended for the HTML Web Engine in the following tab:</p> <ul style="list-style-type: none"> ▶ Version. ▶ Configuration. ▶ SCADA Runtime Connector: Host name, IP address. ▶ Path of the data folder. Data Directory in which the exported project data (*.webx) is. ▶ Security settings: User name, password or switch for automatic sign-in. <p>Note: Not available if no valid Web Engine application is available on the IIS.</p>
Remove	<p>Removes a running application of the HTML Web Engine.</p> <p>The version to be removed is selected in the following tab.</p> <p>If the web engine is to be replaced by a more recent version, use the Change option.</p> <p>Note: Not available if no valid Web Engine application is available on the IIS.</p>

10.1.1 General settings for the Web Engine

In this dialog, you configure the general settings for the operation of the HTML Web Engine.

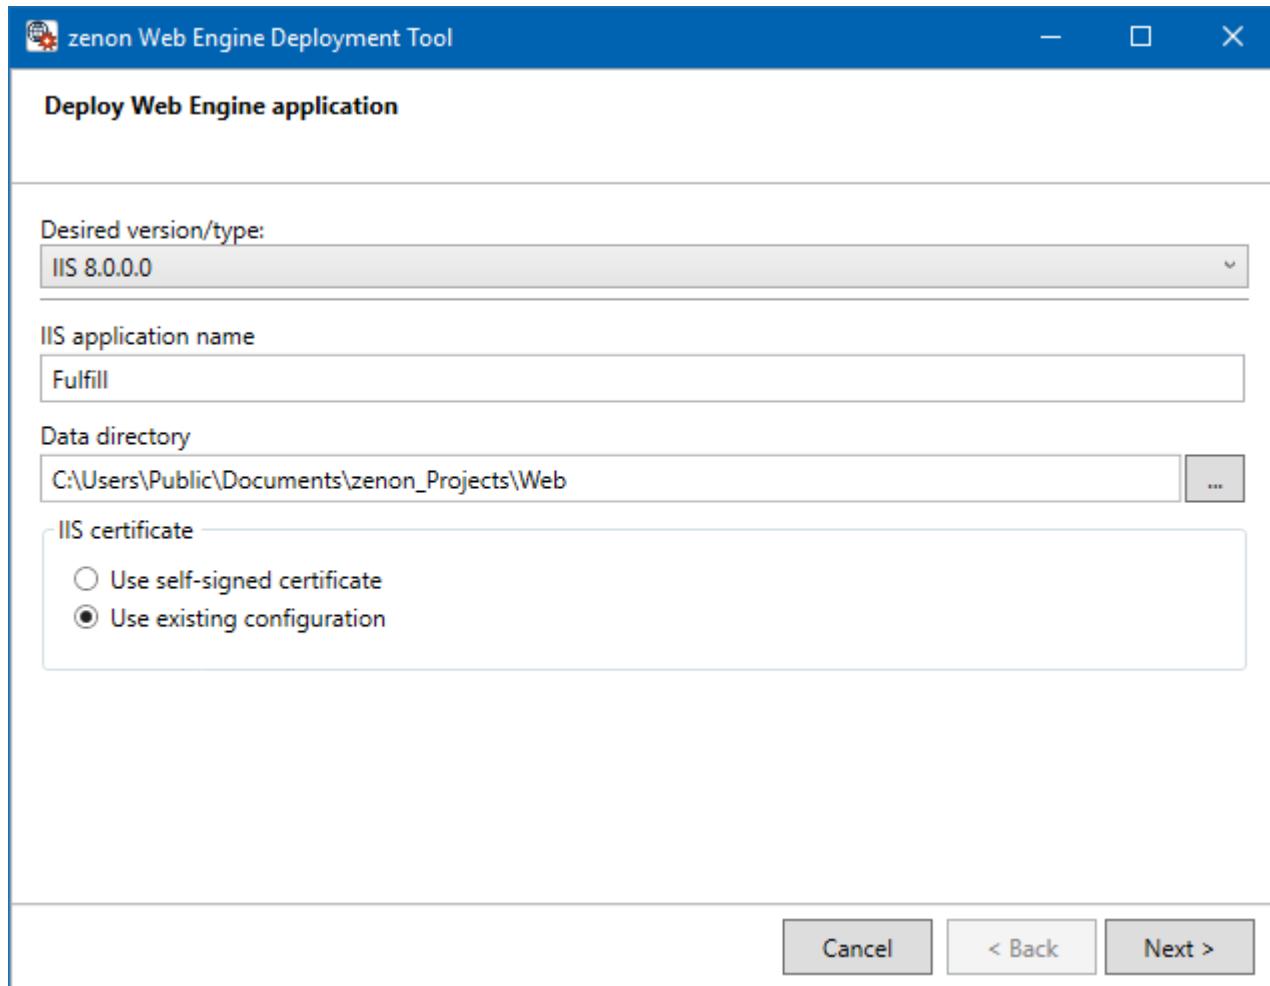

The options that are available depend on the option that was selected in the start dialog:

- ▶ **Deploy:** New configuration of a **HTML Web Engine**.
- ▶ **Change:** Amendment to an existing **HTML Web Engine**.
- ▶ **Remove:** Removal of an existing **HTML Web Engine**.

Option	Description
Web Engine application to change	Selection of the instance that is to be amended. Note: Not available with the Change selection in the start dialog.
Web Engine application to change	Selection of the instance that is to be deleted. Note: Not available with the Remove selection in the start dialog.

Option	Description
Desired version/type	<p>Selection of the version from the drop-down list.</p> <p>Note: Only available for Deploy and Change.</p>
IIS application name	<p>Entry of the desired name for the Web Engine application</p> <p>This name will be part of the URL under which the HTML5 web page will later be reached.</p> <p>Example: https://server address/<applicationname></p> <p>Note: Only available for Deploy and Remove (display only).</p>
Data directory	<p>Folder from which the Web Engine is to read the exported project data.</p> <p>Note: The webx file generated by the Web Engine Compiler must be available in this folder. When the HTML Web Engine is first accessed, the first webx file in the file list is loaded. If a webx file that was loaded by the web engine is amended or deleted, the Web Engine automatically restarts and in turn loads the first webx in the folder.</p> <p>Default folder: <i>C:\Users\Public\Documents\zenon_Projects\Web</i></p> <p>Note: Only available for Deploy and Change.</p>

IIS CERTIFICATE

zenon HTML Web Engine communication is always via a secure (HTTPS, port 443) connection.

In this area, you define whether the **Deployment Tool** uses a self-signed certificate for communication. If there is not yet a self-signed certificate, it is created by the **Deployment Tool**. This certificate is assigned to the IIS.

Note: A security certificate is a mandatory requirement for communication between the zenon Web Server and zenon Web Client.

Option	Description
Use self-signed certificate	<p>Activate this option if you want to create a temporary, self-signed certificate.</p> <p>This option is offered as a default for the first</p>


Option	Description
	<p>Deploy.</p> <p>Note: This option is mandatory if there is no certificate present on the IIS.</p>
Use existing certificate	<p>Select this option if there is already a valid configuration.</p> <p>If there is already a valid configuration, this option is offered as a default.</p> <p>Note: Use of an official certificate from a certification body is recommended.</p> <p>Possible certification body: https://www.digicert.com/ssl-certificate-installation-microsoft-iis-8.htm</p>

NAVIGATION

Cancel	Annule les modifications et ferme la boîte de dialogue.
Back	Recule d'un onglet dans le déroulement de l'assistant.
Next	Avance d'un onglet dans le déroulement de l'assistant.

10.1.2 Security settings

In this dialog, you configure the security settings for the operation of the HTML Web Engine.

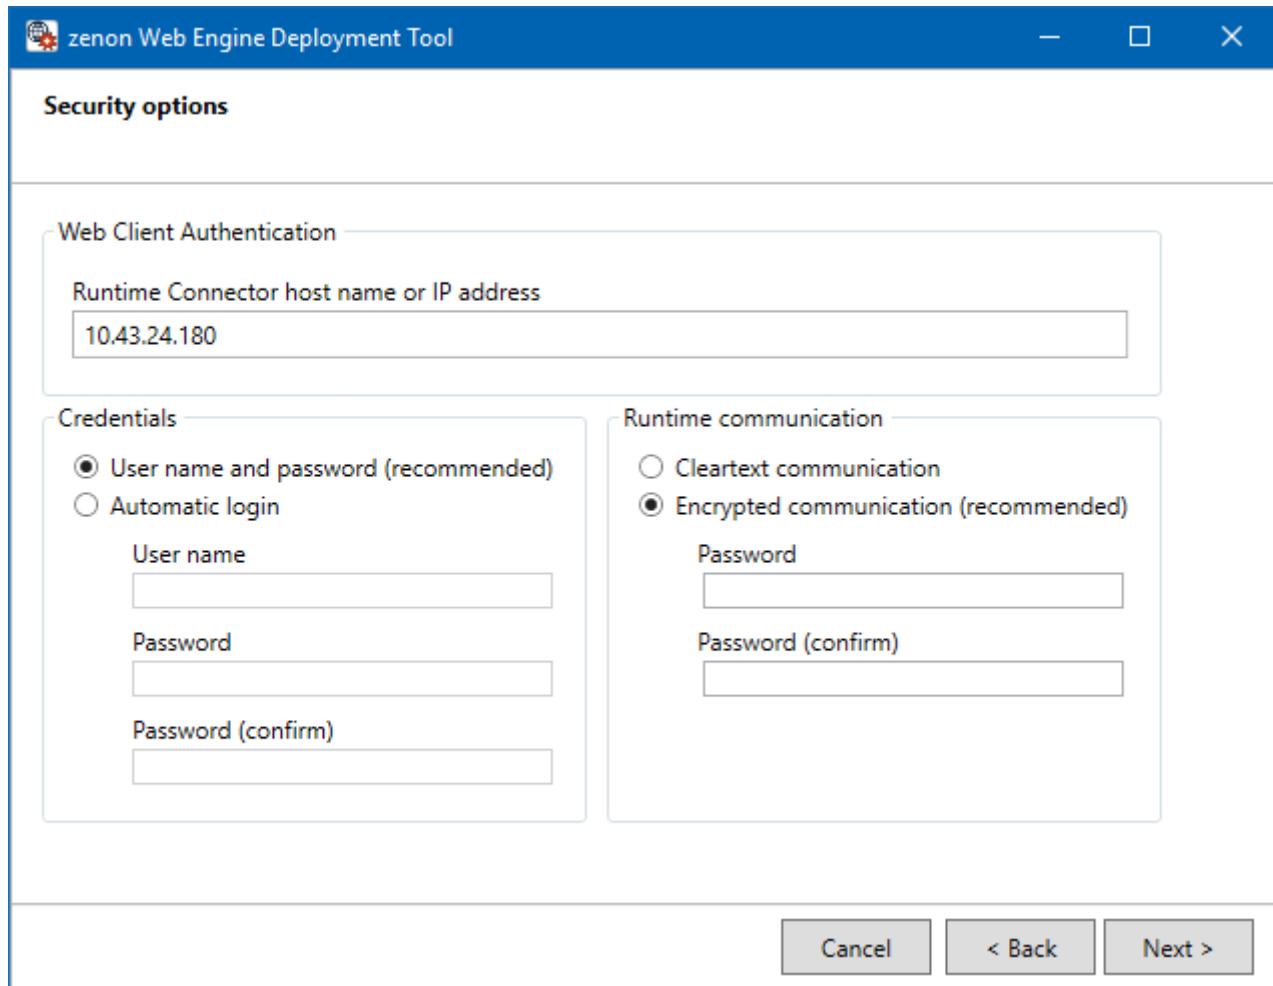

WEB CLIENT AUTHENTICATION

Application version	zenon version of the instance (display only). Only available for Remove.
Runtime Connector host name or IP address	Enter the host name or the IP address of the computer on which the zenon Runtime and the SCADA Runtime Connector are installed. Note: Only available for Deploy and Change.

CREDENTIALS

In this area, you define how the authentication of the zenon Web Client is to be carried out.

Option	Description
User name and password (recommended)	<p>Input field for authentication of the zenon Web Client.</p> <p>The zenon Web Client is authenticated by manual entry of user name and password.</p> <p>Note: The user name and password must be entered in a zenon login screen.</p>
Automatic login	<p>Activate this option if you want the web engine to automatically establish a connection to zenon Runtime. The given user data is used for authentication.</p> <p>Attention: When this option is used, each zenon Web Client receives a connection to zenon Runtime.</p>
User name	<p>Input field for zenon user name.</p> <p>Enter the desired user name here.</p>
Password	<p>Input field for zenon user password.</p> <p>Enter the user password here.</p> <p>Note: Not available if <i>User name and password</i> has been selected for Web Client Authentication.</p>
Password (confirm)	<p>Enter the user password again.</p> <p>Note: Not available if <i>User name and password</i> has been selected for Web Client Authentication.</p>

RUNTIME COMMUNICATION

Configuration of communication to the Web Engine.

Option	Description
Cleartext communication	<p>Communication to the web engine is implemented by means of plain text without encryption.</p>
Encrypted communication (recommended)	<p>Communication to the web engine is encrypted.</p> <p>Note: The settings for Runtime are configured in the Startup Tool in Network configuration tab with the Encrypt Runtime Connector</p>

Option	Description
	communication property. The passwords for Runtime and the HTML Web Engine must correspond.
Password	Input field for password for secure communication. Enter the user password here.
Password (confirm)	Enter the user password again.


NAVIGATION

Cancel	Annule les modifications et ferme la boîte de dialogue.
Back	Recule d'un onglet dans le déroulement de l'assistant.
Next	Avance d'un onglet dans le déroulement de l'assistant.

10.1.3 Validation of the settings

The settings are validated in this dialog. The progress is shown with a green bar during validation.

The result of the validation is shown in a list.

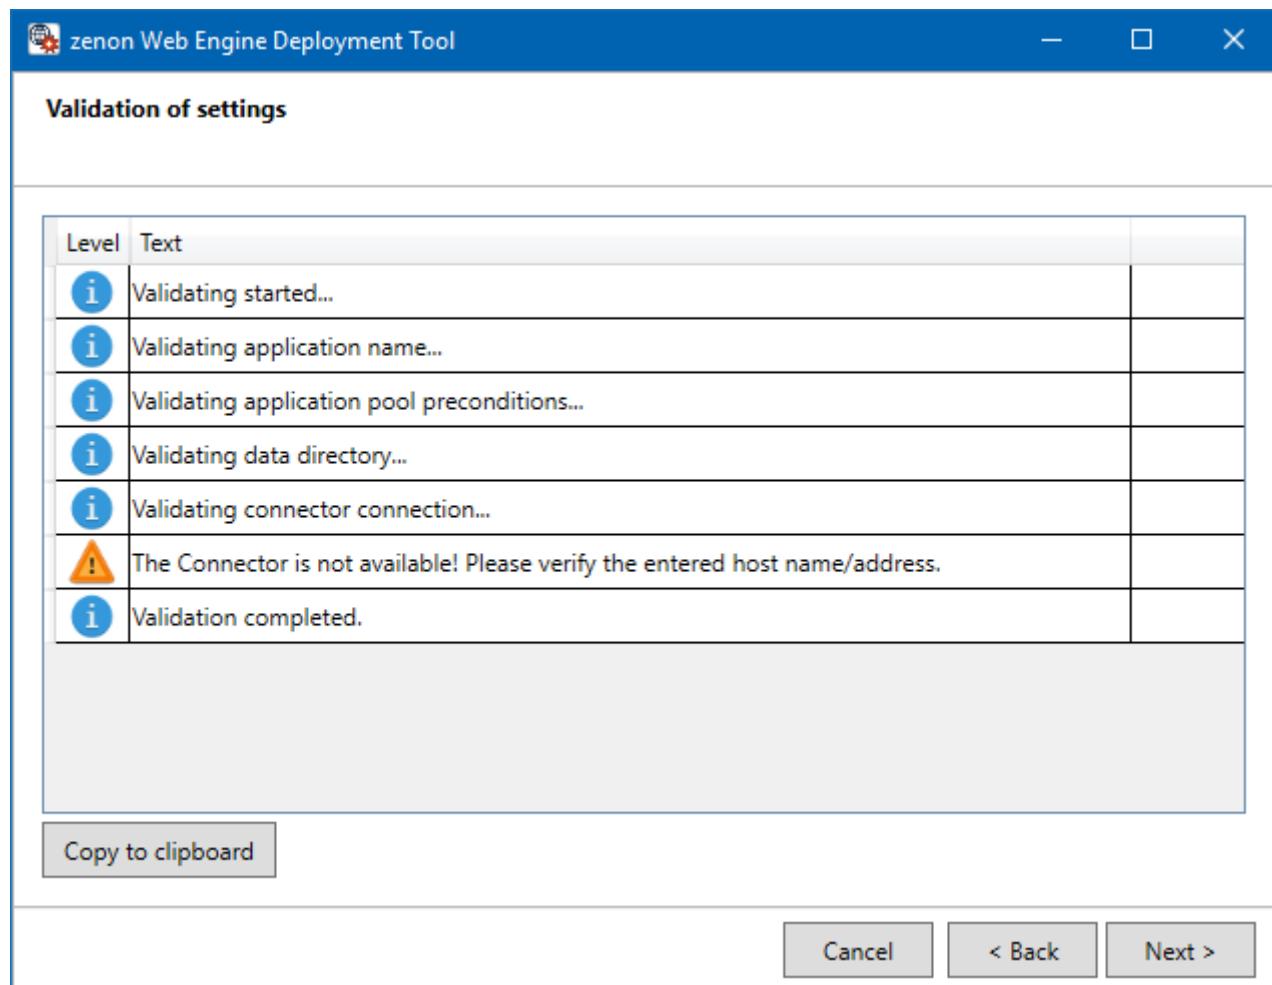

The screenshot shows the "zenon Web Engine Deployment Tool" window with the title "Validation of settings". The main area is a table with two columns: "Level" and "Text". The table contains the following rows:


Level	Text
i	Validating started...
i	Validating application name...
i	Validating application pool preconditions...
i	Validating data directory...
i	Validating connector connection...
!	The Connector is not available! Please verify the entered host name/address.
i	Validation completed.

Below the table is a button labeled "Copy to clipboard". At the bottom right are three buttons: "Cancel", "< Back", and "Next >".

Copy the output to the clipboard by clicking on the **Copy to clipboard** button.

10.1.4 Progress

In this dialog, you see the progress of the **Web Engine Deployments** on the IIS.

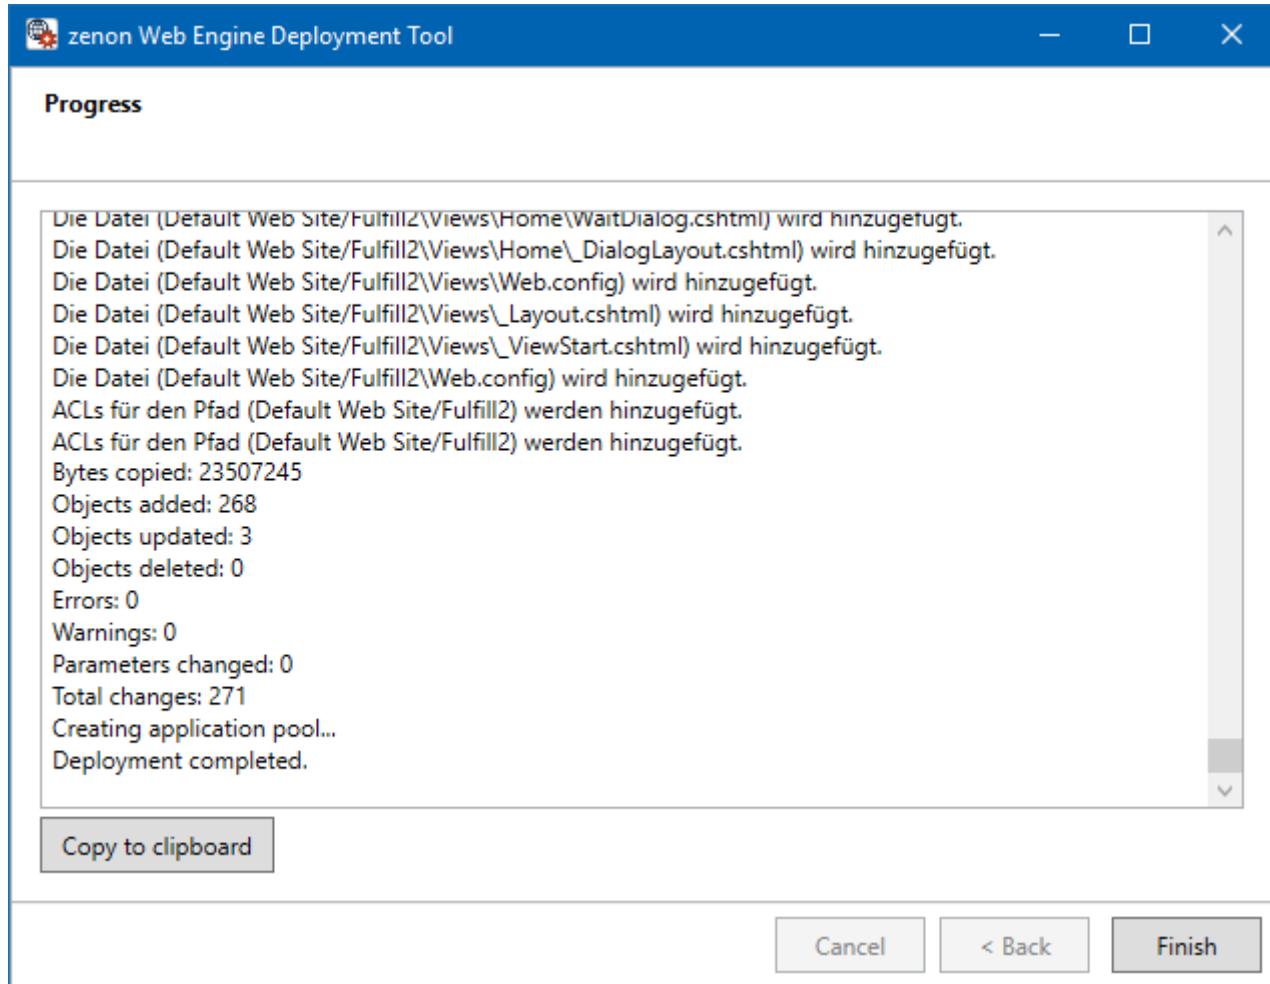

Copy the output to the clipboard by clicking on the **Copy to clipboard** button.

Once the procedure has been completed, click on the **Finish** button to close the Deployment Tool.

11 Engineering in the Editor

The data required by the Web Engine for visualization is created from a zenon standard project. The zenon Editor must be open for this.

Note: When engineering, please take the supported properties, screen elements and functions of the HTML Web Engine into consideration.

CREATE PROJECT

For HTML Web Engine visualization with the zenon web server, create a standard zenon project. You can also use certain resources from a global project for this.

Attention

Only the *standard* screen type can be used as a start screen for the HTML web engine. Special screen types are not suitable.

11.1 Create, amend and call up an HTML screen

Set up an *HTML* screen and create a screen-switch function

CREATING A SCREEN OF THE TYPE HTML

Développement

Deux procédures sont disponibles pour créer un écran :

- ▶ L'utilisation de la boîte de dialogue de création de synoptique
- ▶ par l'intermédiaire des propriétés de création de synoptique

Étapes de création du synoptique à l'aide des propriétés si la boîte de dialogue de création de synoptique a été désactivée dans la barre de menus dans **Outils**, **Paramètres** et **Utiliser l'assistant**:

1. Create a new screen.

To do this, select the **New screen** command in the tool bar or in the context menu of the **Screens** node.

2. Change the properties of the screen:


- a) Name the screen in the **Nom** property.
 - b) Select *HTML* in the **Type de synoptique** property.
 - c) Select the desired frame in the **Gabarit** property.

3. Configurez le contenu du synoptique :

- a) Sélectionnez l'option de menu **Éléments (type de synoptique)** dans la barre de menus.
 - b) Sélectionnez *Insérer un modèle* dans la liste déroulante.
La boîte de dialogue de sélection de mises en forme prédefinies s'affiche à l'écran. Certains éléments de contrôle sont insérés dans le synoptique à des positions prédefinies.
 - c) Supprimez les éléments superflus du synoptique.

- d) Si nécessaire, sélectionnez des éléments supplémentaires dans la liste déroulante **Éléments**. Placez-les aux emplacements souhaités sur le synoptique.
4. Create a screen switch function.

HTML SCREEN



Control element	Description
Insert template	<p>Opens the dialog for selecting a template for the screen type.</p> <p>Templates are shipped together with zenon and can also be created by the user.</p> <p>Templates add pre-defined control elements to pre-defined position in the screen. Elements that are not necessary can also be removed individually once they have been created. Additional elements are selected from the drop-down list and placed in the zenon screen. Elements can be moved on the screen and arranged individually.</p>
Browser	Control elements for the browser.
Browser Window	The browser is displayed.
Address field	Field for entry of the address (URL).
Home page	The start page is called up.

Control element	Description
Search forward	Go forward.
Search back	Go back.
Refresh search	Refresh display.
Cancel	Stop navigation.
Search	Control elements for the search. When clicking a link in the Search field, the corresponding page is shown in the browser. So e.g. in the field Search a navigation bar or the results of a search engine can be displayed without changing the contents, when a link is activated.
Search window	Display of the search.
Search field	Search for address or file.
Home	Back to home in the search area.
Forward	Page down in the search area.
Search back	Page up in the search area.
Refresh	Refresh display in search area.
Stop	Cancel search action.
Filter	Open filterbox.


AMEND SCREEN

To amend the screen for use with the HTML Web Engine:

1. Activate the **Disponible sur le Web** property in the group **Général** for this screen.
2. Note the **options for opening external web pages** (à la page 38).

CREATE SCREEN SWITCHING

Create a screen switch function in order to be able to call up the screen in the Runtime.

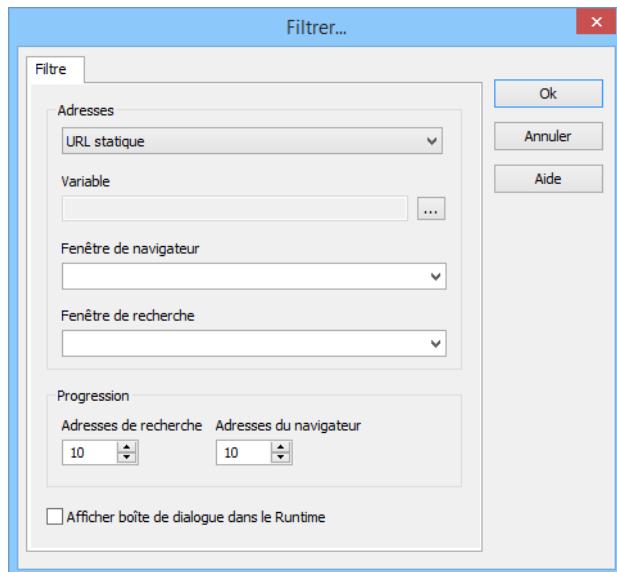

The HTML Web Engine supports the following options:

Option	Description
Addresses	<ul style="list-style-type: none"> ▶ <i>URL static</i> The URL is set as static. Note: This setting is mandatory.
Browser window	Enter the complete URL of the external web page here, including https:// Example: https://serveraddress

11.1.1 Options for opening external web pages

The opening of external web pages is supported by the HTML Web Engine either by means of an embedded browser or as a new browser window.

EMBEDDED BROWSER WINDOW:

To see an embedded browser window that you have entered in the screen switching function from the URL in Runtime:

- ▶ In the **Elements [screen type name]** menu, select **Browser -> Browser window**.

- ▶ Draw the frame for the browser window in the screen. The given website (URL) is displayed in this frame.

Note: The opening of the embedded display (**iFrame**) only works if the X-Frame options on the remote server are configured accordingly. In addition, the address of the embedded web page must also be available for HTTPS via the HTTPS connection between the HTML Web Engine and HTML web client.

NEW BROWSER WINDOW:

To open an external web page in a new browser window:

- ▶ Delete the browser window control from the inserted template in the screen.
The external web page is opened in a new browser window if there is no browser window control element in the screen.

Note: The calling up of several URLs is supported via script. However some browsers prevent tabs being called up with their pop-up blocker. In such cases, a dialog appears with the URLs that cannot be called up. These URLs can be opened manually.

11.2 Example: Simple start screen

Check the functionality of the HTML Web Engine with a simple example.

To do this:

1. Create a *standard* screen.
2. Activate the **Disponible sur le Web** property in the group **Général** for this screen.
3. Enter this screen into the project properties in the **Apparence graphique** group as **Synoptique de départ**.

Note: You can define any desired start page for the web with an Autostart script.

4. Add simple elements to the screen, for example a **Rectangle**, **Circle** or **Static text**.
5. Ensure that the current project is set as a start project.
6. Export the project for HTML5 visualization.

EXTENSION: AUTHENTICATION WITH LOGIN


In order to be able to exchange data with zenon Runtime, the zenon Web Client must be authenticated as a user to Runtime. You can read more details about this in the following chapter: **Client authentication for a connection to Runtime** (à la page 24).

This is how you expand a project for manual authentication:

1. Add a dynamic element to display a variable value, for example **dynamic text** or **numeric value**.
2. Assign this element a variable from the project.

Note: Variable values can also be used for position or color dynamics of an element.

3. Create a new *login* screen which you can display in the visualization.
Use the **Appel de synoptique** function for display.
4. Activate the **Disponible sur le Web** property in the screen in the **Général** group.
5. In the *login* screen, add the elements **user name**, **password**, **login** and **Cancel**.

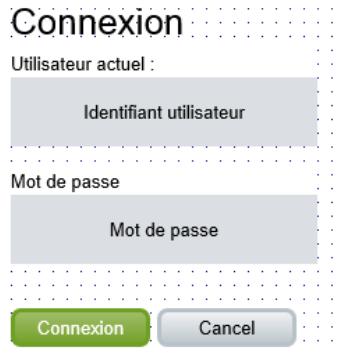

6. Carry out the HTML export for the current project.

The zenon Web Client now has the possibility to carry out authentication by means of entry of the user data. If authentication is successful, a connection to zenon Runtime is established. As a result of this, variable values for HTML5 visualization are available, for example.

11.3 Supported functionalities for HTML visualization

For HTML visualization, basic elements, properties and functions are available:

GENERAL

Functionality	Support for
Variables	<ul style="list-style-type: none"> ▶ Display of static and dynamic values. ▶ Écrire valeur prescrite in the HTML Web Engine directly ▶ Making the element display dynamic with variable values. For example Visibilité/Clignotement, rotation, positioning, size adjustment... ▶ Limit values for the dynamic aspects of the element display (such as Couleur de limite, Texte valeur limite) are fundamentally supported. ▶ Permanent reading (à la page 60) of variables that execute a zenon function in the event of limit value violations. <p>Attention: Limit value information of reaction matrices is not</p>

Functionality	Support for
	<p>supported!</p> <p>Archives and variables can also be taken from the Service Grid.</p>
Font types and font lists	<ul style="list-style-type: none"> ▶ Selection and display of any desired font lists that are available on the system. <p>Note: Selected font types must be available on both the project configuration computer and on the zenon Web Client. The steps must be defined in the local project.</p> <ul style="list-style-type: none"> ▶ Display in <i>Normal</i> font style, <i>italic</i> and <i>bold</i>. ▶ Selection and display of the font in accordance with the font list. ▶ Online switching of the font list. <p>Note: The first font list of the zenon project is shown when a session starts</p>

GLOBAL PROJECT

The HTML export takes the use of the following resources from a global project into account:

- ▶ **Frames**
- ▶ **Color Palettes**
- ▶ **Language Files**

11.3.1 AML and CEL

The *AML* and *CEL* screen types support the following functions for the HTML Web Engine:

ALARMS: ALARM CAUSE REQUIRED

Alarms for limit values can be created with the **Cause d'alarme nécessaire** property activated. The acknowledgment of these alarms is however not supported by the HTML Web Engine.

LIST DISPLAYS

Lists are subdivided into pages. A footer for navigation is shown under the list. List entries can be called up by clicking on the symbols. The number of the list entries shown can be defined by clicking on the drop-down list.

SORTING IN RUNTIME

Lists in AML and CEL can be shown in sorted form.
To change the sorting of a list, click on the column title.
Clicking switches between:

- ▶ Ascending
- ▶ Descending
- ▶ Standard (as supplied in zenon Runtime)

The behavior of the header, the sorting and the column widths is configured in the zenon Editor in the project properties.

SORTING OF TEXT

Text is sorted according to natural sorting:

- ▶ alphabetic sequence
- ▶ Figures with several digits are seen as a character

Example:

- ▶ Alphabetic sorting: 1, 11, 2, 3, 33, 4
- ▶ Natural sorting: 1, 2, 3, 4, 11, 33

COLUMN LABELING

The **Identification** and **Description externe** columns are shown with the labeling **Identification** and **Resource Label**. The language of the texts used in these columns can be switched.

LANGUAGE SWITCHING IN RUNTIME

Language switching is available for the following columns of the AML and CEL:

- ▶ **Text**
- ▶ **Identification**
- ▶ **Description externe**
- ▶ **Unité de mesure**

Note: Language switching is carried out for each cell individually. If switching takes place in Runtime, the switching to the new language can take a few seconds.

TIME FORMATS

Date and time in AML and CEL are shown in the localized display of the respective client. In doing so, the **UTC-DateTime** is transferred and reformatted on the basis of the settings of the local computer.

You can find further information and examples in the **Runtime** manual, in the **Handling of date and time** chapter.

11.3.1.1 Properties and options

The HTML Web Engine supports the following properties and options for control elements, screen switching and project properties:

AML AND CEL SCREEN SWITCH FUNCTION:

Tab	Group	Settings and notes
General	Variable filter	<ul style="list-style-type: none"> ▶ Variable name ▶ Identification <p>Note: Capitalization is not taken into account.</p>
	Alarm type (AML only)	<p>Options:</p> <ul style="list-style-type: none"> ▶ Only non-acknowledged alarms ▶ Only cleared alarms ▶ Only current alarms <p>Note: Other settings are ignored.</p>
	Origin of the data	<p>Settings are ignored. Historical data from zenon Runtime is always used. Maximum: 65535</p>
	Runtime settings	<p>Settings are ignored. The Show list without refresh list is always used. The list entries that were present at the time of the screen switching in zenon Runtime are shown.</p>
Time	Filter	Options:

Tab	Group	Settings and notes
		<ul style="list-style-type: none"> ▶ No time filter ▶ Absolute time period ▶ Relative time period
	Settings	The Preset option only. All other settings are ignored.
Column settings	Columns	<ul style="list-style-type: none"> ▶ Alarm condition (Including display by means of circle symbol or graphics file.) ▶ Time received ▶ Time cleared (AML only) ▶ Time acknowledged (AML only) ▶ Text ▶ Variable name ▶ Value ▶ Measuring unit ▶ User - full name ▶ Computer name ▶ Comments (AML only) <p>Note: The set display sequence is taken into account as follows.</p> <p>The column labeling can be edited and the language can be switched.</p>
	Table settings	<p>Always active:</p> <ul style="list-style-type: none"> ▶ Use alternating background colors ▶ Display grid ▶ Sort descending <p>Note: Color palette switching is supported for:</p> <ul style="list-style-type: none"> ▶ Row color 1 ▶ Row color 2

Tab	Group	Settings and notes
Equipment Modeling		From local and global project.

CONTROL ELEMENTS FOR THE ALARM MESSAGE LIST SCREEN TYPE

Group	Subgroup	Settings and notes
En-tête et grille	En-tête	<p>Montrer l'en-tête: Setting always active.</p> <p>Style d'affichage: Setting always standard.</p> <p>Couleur de remplissage: provides background color. Is also used in the footers in the web for:</p> <ul style="list-style-type: none"> ▶ Static/fixed color. ▶ Color palette and switching of color palettes. <p>Police is also in the footer in the web Applied for:</p> <ul style="list-style-type: none"> ▶ Static selection. ▶ Switching of font lists. <p>Couleur du texte is also in the footer in the web Applied for:</p> <ul style="list-style-type: none"> ▶ Static/fixed color. ▶ Color palette and switching of color palettes.
Remplissage	Remplissage	<p>Couleur du texte is used for:</p> <ul style="list-style-type: none"> ▶ Static/fixed color ▶ Color palette and switching of color palettes
Affichage	Affichage	<p>Is used for:</p> <ul style="list-style-type: none"> ▶ Static selection ▶ Switching of font lists

AML PROJECT PROPERTIES

Property group	Supported properties
Liste d'alarmes	En-tête liste d'alarmes
Stockage des données d'alarmes	not available.
Date/heure d'apparition	All.
Date/heure de disparition	All.
Date/heure d'acquittement	All.
Confirmer acquittement de l'alarme	Not available. Alarms whose acknowledgment has been confirmed are not shown in the HTML Web Engine.
Ligne d'état des alarmes	not available.

11.3.1.2 Acquittement d'alarmes

Les alarmes peuvent être sélectionnées et acquittées individuellement. Seules les alarmes pour lesquelles la propriété **Acquittement obligatoire** est activée sont prises en charge.

Dans ce cas, ce qui suit s'applique :

- ▶ L'acquittement des alarmes s'effectue en cliquant sur le bouton **Acquitter** dans le synoptique de type *Gestion des alarmes*.
- ▶ Si la propriété **Acquittement obligatoire** n'est pas activée pour une valeur limite, le bouton **Acquitter** du synoptique *Gestion des alarmes* est désactivé.
- ▶ Le bouton **Acquitter tout** du synoptique de type *Gestion d'alarmes* n'est pas pris en charge.
- ▶ L'acquittement d'une alarme nécessite les autorisations sur fonctions requises pour les utilisateurs connectés.
Un message d'erreur s'affiche si ces autorisations ne sont pas présentes.

Remarque : Assurez-vous que l'utilisateur dispose de l'autorisation sur fonction *Acquitter les alarmes depuis les synoptiques d'alarmes*.

D'autres informations sont disponibles dans le manuel Gestion des utilisateurs, au chapitre Autorisation sur fonctions.

- ▶ Indisponible :
 - ▶ **Commentaire requis**
 - ▶ **Cause d'alarme nécessaire**

Remarque : Ces propriétés permettent de configurer les valeurs limites. L'acquittement des alarmes nécessitant ces propriétés n'est pas pris en charge dans HTML Web Engine.

11.3.2 Synoptiques, cadres, éléments et symboles

Prise en charge des synoptiques et des cadres, ainsi que des éléments et des symboles dans les synoptiques.

SYNOPTIQUES ET CADRES

Synoptique/Cadre	Prise en charge de :
Cadre	<ul style="list-style-type: none"> ▶ Affichage de cadres rectangulaires dans une position absolue. <p>Remarque : Les noms de cadres doivent être uniques. Ils ne sont pas sensibles à la casse.</p>
Synoptiques, propriétés générales :	<ul style="list-style-type: none"> ▶ Affichage de synoptiques à la taille du cadre lié. ▶ Affichage de la couleur d'arrière-plan et des éléments graphiques d'arrière-plan. ▶ Exécution d'une fonction de démarrage et de fin pour un synoptique.
Synoptique standard	<ul style="list-style-type: none"> ▶ Affichage de ce type de synoptique.
Synoptique Connexion	<ul style="list-style-type: none"> ▶ Affichage de ce type de synoptique. ▶ Authentification de l'utilisateur avec les éléments de spécifiques au type de synoptique Saisir le nom de l'utilisateur et Saisir le mot de passe ou la commande Connexion.
Synoptique de type AML (à la page 41)	<ul style="list-style-type: none"> ▶ Affichage de ce type de synoptique. ▶ Affichage de listes AML dynamiques. Dynamique signifie que les données affichées sont mises à jour.
Synoptique de type CEL (à la page 41)	<ul style="list-style-type: none"> ▶ Affichage de ce type de synoptique. ▶ Affichage de listes CEL dynamiques. Dynamique signifie que les données affichées sont mises à jour.
Synoptique de type HTML (à la page 35)	<ul style="list-style-type: none"> ▶ Affichage de ce type de synoptique. ▶ Affichage d'éléments spécifiques au type de synoptique, par ex. un navigateur Web.
Synoptique de type ETM (à la page 51)	<ul style="list-style-type: none"> ▶ Affichage de ce type de synoptique. ▶ Affichage statique de diagrammes à ligne simples.

Synoptique/Cadre	Prise en charge de :
	Statique signifie que les données affichées ne sont pas mises à jour.

ÉLÉMENTS DE SYNOPTIQUE

ÉLÉMENTS DE SYNOPTIQUE STATIQUES

Les fonctions suivantes sont prises en charge :

Élément	Prise en charge de :
Cercle	<ul style="list-style-type: none"> ▶ Element-specific display options for display, colors and fill options. Effects are not supported. ▶ Display dynamics via variables for coloring and position dynamics. ▶ Inverser le gradient de couleur property. When selecting <i>color gradient</i> for the Remplissage (type) property, the brightness gradient of the fill pattern is shown as inverted.
Arc de cercle	<ul style="list-style-type: none"> ▶ Element-specific display options for display, colors and fill options. Effects are not supported. ▶ Display dynamics via variables for coloring and position dynamics.
Quartier de cercle	<ul style="list-style-type: none"> ▶ Element-specific display options for display, colors and fill options. Effects are not supported. ▶ Display dynamics via variables for coloring and position dynamics. ▶ Inverser le gradient de couleur property. When selecting <i>color gradient</i> for the Remplissage (type) property, the brightness gradient of the fill pattern is shown as inverted.
Ligne	<ul style="list-style-type: none"> ▶ Element-specific display options for display, colors and fill options. Effects are not supported. ▶ Display dynamics via variables for coloring and position dynamics.
Polygone	<ul style="list-style-type: none"> ▶ Element-specific display options for display, colors and fill options. Effects are not supported. ▶ Display dynamics via variables for coloring and position

Élément	Prise en charge de :
	<p>dynamics.</p> <ul style="list-style-type: none"> ▶ Inverser le gradient de couleur property. When selecting <i>color gradient</i> for the Remplissage (type) property, the brightness gradient of the fill pattern is shown as inverted.
Ligne brisée	<ul style="list-style-type: none"> ▶ Element-specific display options for display, colors and fill options. Effects are not supported. ▶ Display dynamics via variables for coloring and position dynamics.
Rectangle	<ul style="list-style-type: none"> ▶ Element-specific display options for display, colors and fill options. Effects are not supported. ▶ Display dynamics via variables for coloring and position dynamics. ▶ Inverser le gradient de couleur property. When selecting <i>color gradient</i> for the Remplissage (type) property, the brightness gradient of the fill pattern is shown as inverted.
Texte statique	<ul style="list-style-type: none"> ▶ Element-specific display options for display, colors and fill options. Effects are not supported. ▶ Display dynamics via variables for coloring and position dynamics.

ÉLÉMENTS DE SYNOPTIQUE DYNAMIQUES GÉNÉRAUX

Les fonctions suivantes sont prises en charge :

Élément	Prise en charge de :
Bouton	<ul style="list-style-type: none"> ▶ Element-specific display options for display, colors and fill options. Effects are not supported. ▶ Display dynamics via variables for coloring and position dynamics. ▶ Exécution de fonctions du projet local. Remarque : Le niveau d'utilisateur requis pour l'exécution de l'action est vérifié. ▶ Propriétés Remplissage (type) et Gradient de couleur : Gradient de couleur a uniquement un effet si l'option <i>Degradié de couleurs</i> est sélectionnée pour la propriété Remplissage (type).

Élément	Prise en charge de :
Élément combiné	<ul style="list-style-type: none"> ▶ Element-specific display options for display, colors and fill options. Effects are not supported. ▶ Display dynamics via variables for coloring and position dynamics. ▶ Configuration des valeurs limites numériques via la boîte de dialogue standard. ▶ Commutateur et bouton-poussoir <p>Pour plus de détails, reportez-vous à la section Élément combiné (à la page 53).</p>
Texte dynamique	<ul style="list-style-type: none"> ▶ Element-specific display options for display, colors and fill options. Effects are not supported. ▶ Display dynamics via variables for coloring and position dynamics. ▶ Affichage d'informations concernant les variables : <i>valeur de la variable</i>, Nom, Identification, Description externe, Unité de mesure et Texte valeur limite sont possibles. ▶ Écriture de valeur prescrite dans une boîte de dialogue. ▶ Écriture de valeur prescrite via un élément. Pour plus de détails, reportez-vous à la section Écriture de valeur prescrite (à la page 56). ▶ Remarque : Le niveau d'utilisateur requis pour l'exécution de l'action Écrire valeur prescrite est vérifié.
Valeur numérique	<ul style="list-style-type: none"> ▶ Element-specific display options for display, colors and fill options. Effects are not supported. ▶ Display dynamics via variables for coloring and position dynamics. ▶ Écriture de valeur prescrite dans une boîte de dialogue en tenant compte des limites de point de consigne statiques. Remarque : Le niveau d'utilisateur requis pour l'exécution de l'action est vérifié.

GROUPES D'ÉLÉMENTS ET SYMBOLES

Fonctionnalités	Prise en charge de :
Groupe d'éléments	<ul style="list-style-type: none"> ▶ Affichage de groupes d'éléments.

Fonctionnalités	Prise en charge de :
	<ul style="list-style-type: none"> ▶ Les éléments contenus sont affichés conformément à leur configuration et aux propriétés prises en charge.
Symbole liés	<ul style="list-style-type: none"> ▶ Affichage de symboles liés. ▶ Prise en charge de la fonction Remplacer les liens lorsqu'elle est utilisée dans un synoptique. Les entrées résultantes doivent renvoyer à des ressources dans le projet local. ▶ Les éléments contenus sont affichés conformément à leur configuration et aux propriétés prises en charge.
Propriétés des symboles	<ul style="list-style-type: none"> ▶ Propriétés des symboles autorisées pour toutes les propriétés prises en charge par Web HTML Engine. Ceci inclut toutes les propriétés de zenon associées aux éléments pris en charge par HTML Web Engine. Les propriétés non prises en charge génèrent un message d'erreur lors de la compilation (à la page 62).

11.3.2.1 Screens of type Extended Trend

The *Extended Trend* screen type supports the following functionalities for the HTML Web Engine:

OPTIONS WITH THE SCREEN SWITCH FUNCTION

Tab	Group	Settings and notes
Data	Origin of the data	Option: Archive data
	Options	The Options settings are not supported for the HTML Web Engine.
	Curves	Display of simple curves without further options.
Display	Diagram name	Display of the diagram name, as configured
	Refresh	Options in the Refresh properties group are not supported.
	Design	Options in the Design properties group are not supported.

Tab	Group	Settings and notes
		A pre-defined display is shown.
	Runtime	The display of this dialog is not supported in the HTML Web Engine. Filtering is not possible.
X-Axis	X-Axis	Option: <ul style="list-style-type: none"> ▶ Only YT display <p>Note: XY display is not supported.</p>
Time	Filter	The following are supported: <ul style="list-style-type: none"> ▶ Absolute time period ▶ Relative time period All other time filters are not supported. Attention: Screen switching with invalid time configurations are not available in the HTML Web Engine. Buttons with corresponding calls are deactivated.
Lots		The settings of the Lots tab are not supported for the HTML Web Engine.
Column settings		The settings of the Column settings tab are not supported for the HTML Web Engine.
Printer properties		The settings of the Printer settings tab are not supported for the HTML Web Engine.

DIAGRAM CONTROL ELEMENT

Group	Subgroup	Settings and notes
Darstellung		The configuration of the display is not supported for the HTML Web Engine. The action is defined and fixed.
Linien		The configuration of the lines is not supported for the HTML Web Engine. The action is defined and fixed.
Füllung		The configuration of fills is not supported for the HTML Web Engine. The action is defined

Group	Subgroup	Settings and notes
		and fixed.

11.3.2.1.1 Data aggregation

Data is aggregated under certain conditions for display in the extended trend. The speed of the display via the HTML Web Engine is thus sped up so that it corresponds to that of zenon Runtime.

Procedure:

- ▶ The maximum number of variables to be displayed is determined by the width of the template (in pixels) on which the screen is based.
 - ▶ There is no aggregation if, during an archive query, fewer variables are returned than pixels are present.
 - ▶ If the number of the archive variables exceeds the column width, average values are generated. To do this, the time axis is divided into time ranges. The archive values that are transferred by Runtime are arranged into the respective time ranges. The average value within a time range is calculated using the archive values. If there is no archived value within a time range, this tie range is deleted.
- Note:** The generation of the average values is not just carried out for numeric values, but also binary variables.
- ▶ Unnecessary variables continue to not be taken into account, because these are not required for the current display. This reduces background calculations, saves computer processing power and speeds up the switching time. This happens regardless of the number of archive values and the average value calculation. To do this, 3 archived values of a variable that are consecutive in terms of time are analyzed. If all 3 variables have the same value, the average variable is removed. If, for example, a recorded archive variable has the same value over the queried time period, only 2 variables (start and end) are displayed.

Note: When generating average values, the trend line is generally shown differently to with raw values.

11.3.2.2 Combined element

The combined element supports the following in the HTML web engine:

Group and/or property	Remark
Point de référence	
Paramètres bitmap	

Group and/or property	Remark
Clignotement	<u>Not supported:</u> <ul style="list-style-type: none"> ▶ Reprendre le clignotement de toutes les variables
Affichage	<u>Not supported:</u> <ul style="list-style-type: none"> ▶ Groupe de styles ▶ 3D ▶ Visualiser l'état de la variable principale ▶ Visualiser l'état avec le carré ▶ Type d'affichage ▶ Configuration et test ▶ Appliquer les propriétés projet pour "verrouillé"
Remplissage	<u>Not supported:</u> <ul style="list-style-type: none"> ▶ Style de remplissage
Position	
Commutateur	The element switches the value of a bit variable.
Visibilité	<u>Not supported:</u> <ul style="list-style-type: none"> ▶ Verrouillage
Écrire valeur prescrite	<p>Numeric values via write set value dialog and function.</p> <p>The linked function is executed as in the zenon Runtime only after closing the dialog to write a set value. Closing is carried out through successful writing by clicking on OK or by canceling.</p>
Écrire valeur prescrite/Valeur binaire	<p>The Remise à 0 en quittant property is always active.</p> <u>Not supported:</u> <ul style="list-style-type: none"> ▶ Garder l'état appuyé ▶ Réaction immédiate ▶ Durée de maintien [ms]
Écrire valeur prescrite/Valeur numérique	Only the <i>Standard dialog</i> setting is supported for

Group and/or property	Remark
	<p>the Écrire valeur prescrite par property.</p> <p><u>Not supported:</u></p> <ul style="list-style-type: none"> ▶ Sans dialogue ▶ Programme externe ▶ Utiliser le synoptique clavier ▶ Synoptique clavier
Écrire valeur prescrite/Définir les valeurs limites statiques	
Bouton-poussoir and Bouton-poussoir MARCHE	<p>The Remise à 0 en quittant property is always activated and also cannot be deactivated.</p>
Texte	<p><u>Not supported:</u></p> <ul style="list-style-type: none"> ▶ Style de texte
Textes chaînés	
Variable/fonction	<p><u>Not supported:</u></p> <ul style="list-style-type: none"> ▶ Paramètre pour la substitution ▶ Appliquer depuis l'écran d'appel ▶ Exécution sur appui
Status selection via variable status and text dynamization:	<p>Selection of status based on appropriate variable status, in addition to variable value:</p> <p><u>Display of status text:</u></p> <ul style="list-style-type: none"> ▶ Couleur de texte dynamique ▶ Text when pressed ▶ Transparent ▶ Placeholder is case sensitive: %n (Variable name) %l (Variable ID) %v (Variable value) %u (Unit)

11.3.2.3 Write set value

For the **Dynamic Text** and **Numeric value** elements, the *Standard dialog* or *Element* values are available for the **Écrire valeur prescrite par** property.

WRITE SET VALUE VIA ELEMENT.

In Runtime, the input function is activated when an element is clicked. If a text or a default text is available, this will be preselected. On mobile devices, the keyboard will be displayed after activation.

Achtung: When using iOS, the element must be selected again in order to display the keyboard.

DIFFERENCES BETWEEN ZENON RUNTIME AND HTML WEB ENGINE

zenon Runtime and HTML Web Engine are displayed differently:

Default in Editor for Write set value via element	zenon Runtime	HTML Web Engine
<u>Defaults:</u> <ul style="list-style-type: none"> ▶ Dynamic text and <i>String</i> type variable ▶ Proposer la valeur courante: <i>activated</i> 	No value is shown.	The current value is shown and selected.
<u>Defaults:</u> <ul style="list-style-type: none"> ▶ Dynamic text and <i>String</i> type variable ▶ Proposer la valeur courante: <i>deactivated</i> ▶ Texte valeur prescrite: Text available 	No value is shown.	The set value text is shown and selected.
<u>Defaults:</u> <ul style="list-style-type: none"> ▶ Dynamic text and <i>String</i> type variable ▶ Proposer la valeur courante: <i>deactivated</i> ▶ Valeur prescrite: contains value 	The current variable value is shown.	The entered set value is shown.
<u>Defaults:</u> <ul style="list-style-type: none"> ▶ Saisie masquée: <i>activated</i> 	When entering the value, the letter defined for generic input in the Editor	When entering the value, the standard character for generic input is shown in a text

Default in Editor for Write set value via element	zenon Runtime	HTML Web Engine
	is shown in a text field.	field: Dot or star.

11.3.3 Functions

Functions and scripts

Function	Support for
Appel de synoptique	<ul style="list-style-type: none"> ▶ Calling screens of the local project. ▶ Support for <i>replace linking</i>, whereby resulting entries must refer to resources in the local project.
Fermer le gabarit	<ul style="list-style-type: none"> ▶ Closing of frames with the given frame name.
Ecrire/modifier valeur prescrite	<ul style="list-style-type: none"> ▶ Direct writing of pre-defined variable values.
Changement de langue	<ul style="list-style-type: none"> ▶ Online switching of language file and font list.
Changer de palette	<ul style="list-style-type: none"> ▶ Online switching of the color palette for graphic display.
Script : exécuter	<ul style="list-style-type: none"> ▶ Execution of functions of the local project. Non-supported functions are excluded from execution.
Déconnexion	<ul style="list-style-type: none"> ▶ Logging a user out of a zenon Web Client session and disconnecting from zenon Runtime ▶ The zenon Web Client session is continued in offline mode
Lire un fichier audio	<ul style="list-style-type: none"> ▶ Plays an audio file (à la page 59).
Son beep : début	<ul style="list-style-type: none"> ▶ Starts a continuous tone (à la page 59).
Son beep : fin	<ul style="list-style-type: none"> ▶ Stops a continuous tone (à la page 59).

11.3.3.1 Automatic script call when starting a zenon Web Client session

A script can be called up automatically when starting an HTML web client session. A special start page can thus be prescribed for the web application, for example.

The following script name is reserved for the script: *AUTOSTART_HTML_WEBCLIENT*

Note: This script is executed whenever a session of an HTML web client starts. The name of the script must not be changed.


11.3.3.2 Individual script call by means of URL expansion when starting a zenon Web Client session

The HTML Web Engine allows the individual execution of zenon functions as part of a session start for an HTML web client. The function is executed by a script that is started using the **Script : exécuter** function. The name of the desired start function is transferred in the URL for the call to the web page with the **startfunction** argument. The function for the execution of the script must be explicitly approved for call-up as a URL start function.

Note: All settings that are required for the use of the URL start function must be set in the project at the time of compilation for the web.

Process for the application of the functionality:

1. The web page is called up with the additional **startfunction** argument for the call of the desired **Script : exécuter** function:
The call is made using the function name.
2. If the function for the use as a URL start function has been approved, the assigned script is executed. The execution of the script is carried out individually for this HTML web client session. If the addressed function does not exist or has not been unlocked, a standard web page call is made. The session is then set up according to the call without **startfunction** argument.

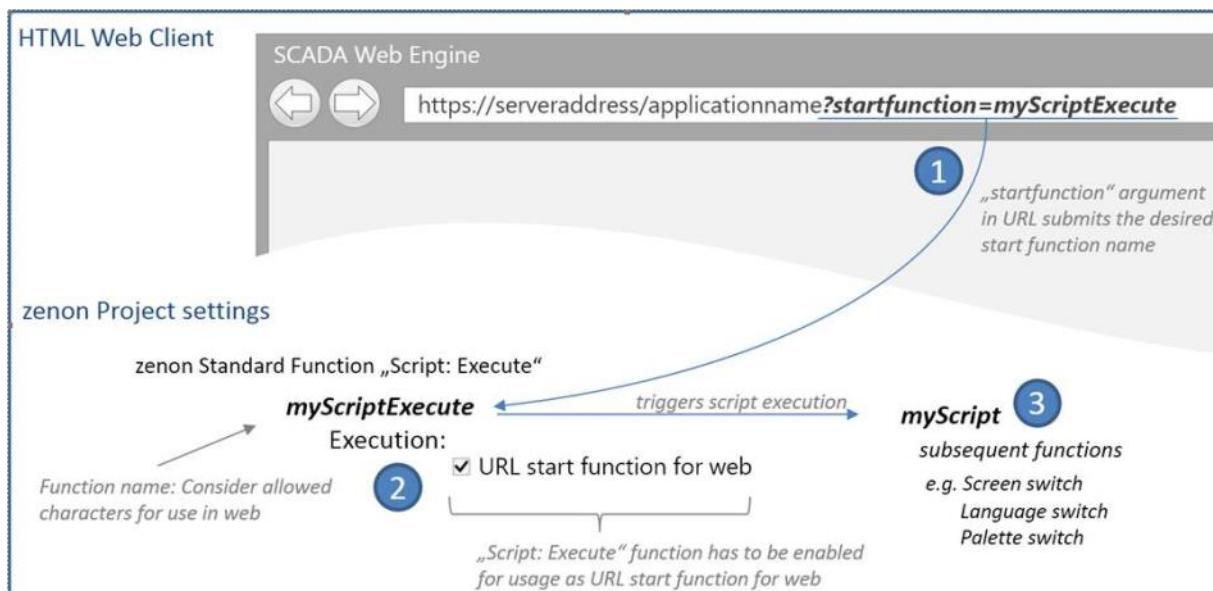

Note: This screenshot is only available in English.

The following limitations are applicable for naming the function name in the web:

Permitted	Forbidden
Alphanumeric characters (0-9, a-z, A-Z)	Umlauts
\$ - _ . + ! * ' () ,	ASCII control characters (0x00-0x1F;0x7F)
	Reserved characters (& / : ; ? @)
	Unclear characters (such as spaces and " ' < > # % { } \ ^ ~ [])

11.3.4 Play audio signal or continuous tone

Audio signals and continuous tones can be played in the HTML Web Engine.

- ▶ Audio signal: An audio file is played once.
Use the **Lire un fichier audio** function to start it.
- ▶ Continuous tone: An audio file is played continuously.
The **Son beep : début** function is used to start it and the **Son beep : fin** function is used to stop it.

 **Attention**

Audio files must be available as ***.wav** files.

These are not supported for:

- ▶ Safari browser
- ▶ iPad

EXECUTE FUNCTIONS

The functions for playing audio signals or for starting and stopping a continuous tone can be executed by

- ▶ the button linked to the function
- ▶ a call in a script that is linked to a button
- ▶ a limit value that calls the respective function in the event of a violation

RULES

The following rules apply for playing audio signals and continuous tones in the HTML Web Engine:

- ▶ Only one audio file can be played at a time.
Starting an audio signal or a continuous tone may interrupt a different audio file that is already playing.
- ▶ Playback length:
 - ▶ Audio signal: The audio file determines the length of the audio signal.
 - ▶ Continuous tone: The call of the **Son beep : début** and **Son beep : fin** functions determines the length of the tone.
- ▶ Several functions can be created and called for different audio signals and continuous tones.
To do this, each one must be linked to a separate button.
- ▶ If several audio files are gathered in a script, only the last audio file will be played.
- ▶ Switching between screens does not interrupt the playing of an audio file.

11.3.5 Variables

The following variables are assigned in the HTML Web Engine:

- ▶ All variables of the current screen.
When switching screens, the variables of the previous screen are unadvised and the variables of the new screen are advised.
- ▶ **Variables continuellement surveillées:**
Variables that call a function when their value is changed. They remain permanently assigned.
For these, the following applies:
 - ▶ The variable must have at least one limit value.
 - ▶ At least one limit value has a linked function that is supported by the HTML Web Engine.

Attention

Variables continuellement surveillées are not identical with the variables for which the **Variable lue en permanence** property was activated in the zenon.

In zenon, this property causes the variable to be assigned to the driver and all changes on the PLC are always reported to the zenon.

In the HTML Web Engine, a decision is made automatically whether a variable must be continuously read by Runtime. For example, if an audio signal is to be played automatically in the event of a limit value violation.

BEHAVIOR OF PERMANENTLY MONITORED VARIABLES

To keep the number of connections for reading **Variables continuellement surveillées** to a minimum, variables behave as follows:

- ▶ All variables of the screen are linked by each individual HTML Web Engine session.
- ▶ All **Variables continuellement surveillées** are only linked once, and all HTML Web Engine sessions use this same link. This ensures that changes to **Variables continuellement surveillées** values need not be transferred individually for each session.

Note:

- ▶ **Variables continuellement surveillées** are linked independently of the variables of the current screen.
In this way, variables can be double-linked. This has no effect at the current time. Because changes to **Variables continuellement surveillées** values only cause the function to be called in the event of a limit value violation. This does not occur for changes made to the values of screen variables.
- ▶ Switching between different screens causes the variables of the previous screen to be unadvised and those of the new screen to be linked. **Variables continuellement surveillées** are not affected by this.

INITIAL LINK

The initial link of **Variables continuellement surveillées** is established by the user who initially sets up an HTML Web Engine session. This link is maintained until all HTML Web Engine sessions that use this link are closed. That means: HTML Web Engine sessions added subsequently can continue to use **Variables continuellement surveillées** even if the user for whose HTML Web Engine session the link to **Variables continuellement surveillées** was set up has already logged out.

DISCONNECTION AND RECONNECTION:

In the event of disconnection, all variables are unadvised in all HTML Web Engine sessions.

If the connection is reestablished, **Variables continuellement surveillées** is not available until the user has logged on again.

FUNCTION CALL DUE TO LIMIT VALUE VIOLATION

The HTML Web Engine checks for **Variables continuellement surveillées** whether the limit value for this variable has been violated. If a limit value violation is found, the function saved in the limit value is executed.

In doing so, the following applies:

- ▶ The function is executed regardless of whether the variable is available in the screen.
- ▶ The function is executed for all logged in users.
- ▶ The function must be supported by the HTML Web Engine.

- ▶ If two limit values have the same value, then there is no rule for which one will be executed.
The sequence must be taken into account when using the Web Engine Compiler.

Definition of limit value violation for the HTML Web Engine:

- ▶ The **Limite active** property must be active for the variable.
- ▶ The following applies if the **Minimum/Maximum** property has been configured as *Maximum*:
 - ▶ The limit values are sorted in descending order.
 - ▶ The first limit value that is less or equal to the current variable value is used.
 - ▶ The value for **Valeur limite** must be greater than the existing variable value.
- ▶ The following applies if the **Minimum/Maximum** property has been configured as *Minimum*:
 - ▶ The limit values are sorted in ascending order.
 - ▶ The first limit value that is greater or equal to the current variable value is used.
 - ▶ The **Valeur limite** value must be less than the existing variable value.

12 Compiler le projet pour le Web

Avec **Web Engine Compiler**, les données requises par HTML Web Engine pour fournir des contenus HTML5 à zenon Web Client sont fournies depuis un projet zenon. Lors de la traduction de ces données de projet, le compilateur **Web Engine Compiler** vérifie le contenu du projet et fournit des informations concernant les fonctions ou propriétés non prises en charge. À l'issue du processus de traduction, un fichier est créé et fourni à HTML Web Engine.


Pour ouvrir le compilateur Web Engine :

1. Cliquez sur **Options**, dans la barre de menus d'Editor.
2. Cliquez sur **Compiler le projet pour le Web....**

La boîte de dialogue de compilation du projet s'affiche à l'écran.

Remarque : Cette boîte de dialogue est uniquement disponible en anglais.

BOÎTE DE DIALOGUE DU COMPILEUR DE HTML WEB ENGINE.

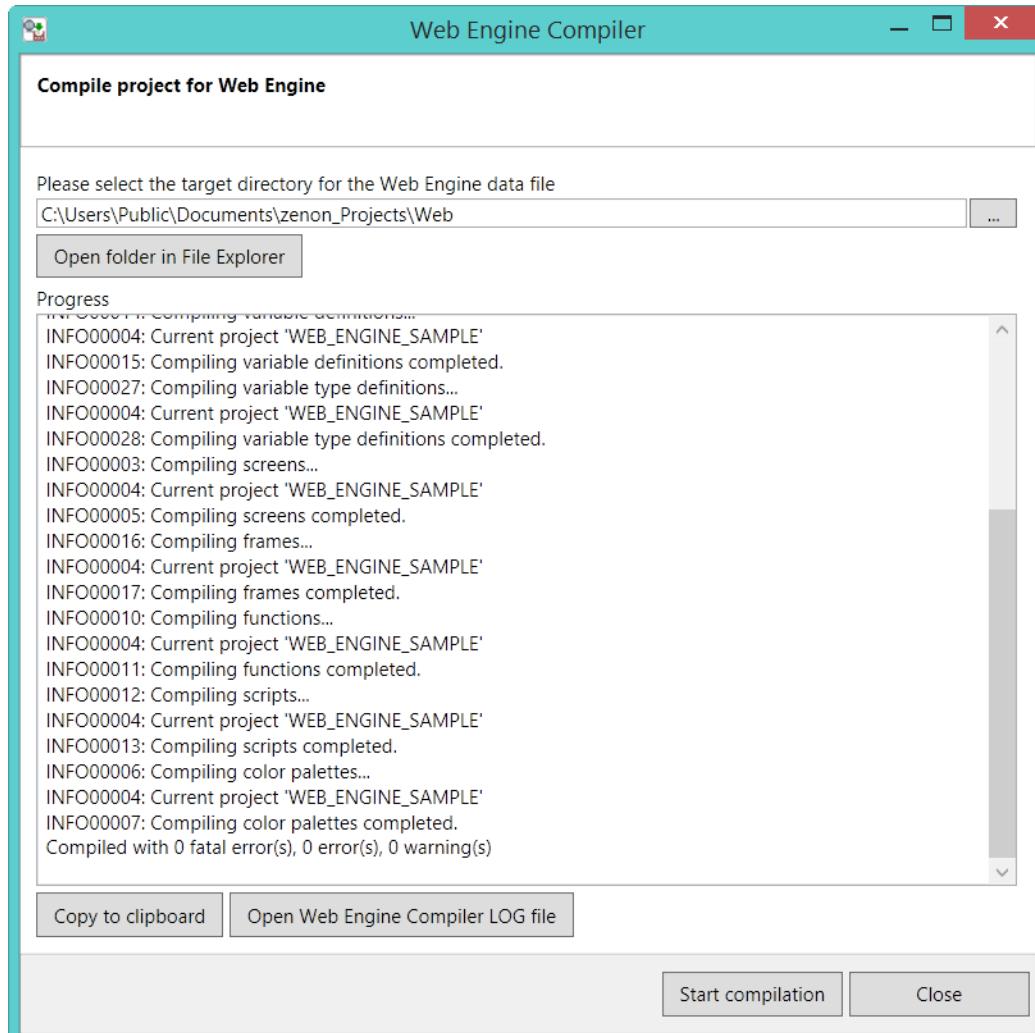

Option	Description
Please select the target directory for the Web Engine data file	Sélectionnez ici le répertoire d'enregistrement du fichier HTML Web Engine. Cliquez sur le bouton ... pour ouvrir une boîte de dialogue permettant de sélectionner un dossier.
Open folder in File Explorer	Ouvre le dossier sélectionné dans l'Explorateur Windows.
Progress	Affiche les messages d'avertissement, les messages d'erreur et les informations pendant la compilation.
Copy to clipboard	Copie le contenu de la fenêtre de sortie Progress vers le presse-papiers.
Open Web Engine Compiler LOG file	Ouvre le fichier journal de Web Engine Compiler .

Option	Description
	Celui-ci contient les messages de la fenêtre de sortie Progress .
Start compilation	Démarre le processus de compilation.
Close	Ferme Web Engine Compiler..

13 Traitement d'une session HTML Web Engine

La visualisation HTML est disponible après la compilation réussie des données de projet.

Pour appeler la page Web :

1. Ouvrez un navigateur Web compatible HTML 5.
La liste des navigateurs Web recommandés figure au chapitre Configuration système requise (à la page 13).
2. Saisissez l'URL du site Web dans la barre d'adresse du navigateur Web utilisé pour la visualisation HTML5 : **<https://AdresseServeur/<NomApplication>>**.
Le contenu HTML 5 est fourni automatiquement. Dans ce cas, une session distincte est créée et gérée pour chaque instance de zenon Web Client. Les données de Runtime issues du Runtime de zenon sont disponibles dès que vous êtes authentifié en tant qu'utilisateur. Pour plus d'informations à ce sujet, reportez-vous au chapitre **Authentification de clients pour l'établissement d'une connexion au Runtime** (à la page 24).
3. Dès la fermeture de la page Web, la session de HTML Web Engine et la connexion au Runtime de zenon sont automatiquement fermées.

Remarque : La page Web est fermée lors de la fermeture du navigateur Web, l'onglet correspondant est fermé, la vue est actualisée ou l'URL est saisie une nouvelle fois (entre autres).

14 System diagnosis and troubleshooting

If there are problems during a system start or during operation, error messages that provide information on the possible cause of the problem are given in the HTML web client. The logging stage of the error messages depends on how the HTML5 web page is called up:

- ▶ Local web browser: You receive detailed messages.
To do this, the web browser must be on the same computer (with the same IP address) on which the Web Engine is being operated.

- ▶ Remote browser: General messages.
This is applicable when being called up from a different device and/or a different IP address.

CHECKLISTS

FOR ERROR-FREE SYSTEM OPERATION

The following checks are recommended for general checking of the system configuration:

- ▶ HTML Web Engine has been installed on the IIS. The web engine deployment was carried out without any errors. The web server is in operation.
- ▶ Visualization data is generated with the **Web Engine Compiler**. There are no errors during the compilation process. The resultant data of the **Web Engine Compilers** is ready for access by the Web Engine.
Note: The occurrence of warnings does not influence the ability of the HTML Web Engine to run in principle. However, there can be limitations to the configured functionality depending on the type of warning
- ▶ The versions of **Web Engine Compiler** and HTML Web Engine are identical.
Note: The data created by the **Web Engine Compiler** can only be interpreted correctly by the HTML Web Engine (web application) with the same version number.

FOR THE TRANSFER OF PROCESS DATA

Please note when transferring process data:

- ▶ zenon Runtime and SCADA Runtime Connector have been started. The SCADA Runtime Connector can be contacted via the network.
Note: The processes for zenon Runtime and **SCADA Runtime Connector** must run in the same user context.
- ▶ The Users who need to be authenticated must be available in zenon Runtime.